

# KITCHEN STAIN REMOVER



## KITCHENKARE FOAM

CERAMIC, PLASTIC, GLASS, VARNISHED WOOD, METAL, STAINLESS STEEL



### WHAT IT'S FOR

- Degreases, removes stains, and deep cleans all small surfaces such as countertops, tile, ovens, cooktops, barbecues, range hoods.
- Dissolves grease and tough dirt such as burnt and layered grease without damaging surfaces.
- Its quick-acting active foam makes cleaning grime easy.
- Effectively removes dirt and grease making steel surfaces shiny without streaks.
- Ideal to degrease and clean garages and outdoor surfaces (patio furniture, window frames, tools, bicycles, motorcycles and tire rims).

### ADVANTAGES

- Contains biodegradable ingredients.
- Active foam formula: does not drip.
- Instant action: acts in a few seconds, loosening grime and making cleaning easy.
- Rinses quickly.
- Safe on surfaces: does not contain solvents that may damage delicate surfaces.
- New scent: cleans and deodorizes, leaving the room with a pleasant mint and lime scent.
- Interior and exterior use.

### HOW TO USE IT

To clean lightly dirty surfaces (cooktops, varnished furniture, sinks, etc.): spray **KITCHENKARE FOAM** on a damp sponge.

To clean surfaces with built-up grime, (cooktops, grills, tire rims, patio furniture, bicycles, etc.): spray **KITCHENKARE FOAM** directly on the surface, keeping the bottle in a vertical position at about 10 inches from the application area.

Let the product sit, then rinse with a cloth or damp sponge.

**Storage temperature:** between 41°F and 86°F (5°C and 30°C).  
Must be applied at temperatures between 41°F and 86°F (5°C and 30°C).

■ **POWER DEGREASER FOR KITCHEN CLEANUPS.**

■ **FOAMING ACTION DISSOLVES GREASE IN SECONDS.**



**Coverage:**

24 OZ (710 ml)  
min. 500 sq. ft. (46 m²)

Coverage rates are indicative.



**Packaging:**

24 OZ (710 ml) 6 spray bottles per box