

150 x 725 mm

EN Installation instructions
ES Instrucciones de Instalación

Before You Start/ Preparations
Please read all the instructions before you begin the installation.
Improper installation will void warranty.

Important Notice
After installation, make sure to keep the room within a temperature range of 60°F to 80°F. Excessively high or low temperatures may cause this product to expand or contract and lead to visual variations of the floor that will not be warranted.
Variations in color, tone, grain patterns and other are naturally occurring characteristics of hardwood. Different production runs can have slight color and gloss variations, it is best to purchase all the flooring at one time to minimize variations within the flooring.
For the best result, make sure to always work from 2 to 3 cartons at a time and mixing the planks during the installation. This will result in a more natural looking floor.
Do not mix flooring with different model/item/SKU numbers together in the same installation as flooring with different model/item/SKU numbers are not intended to be installed together.

This product has a pre-attached underlayment. Do not install over carpet or any additional underlayment (except a 6 mil poly-film moisture barrier), which will void the warranty.

- Calculate the room surface prior to installation and plan an extra 10% of flooring for cutting waste.
- In most cases, this product does not need to be acclimated. However, if the boxes of flooring were exposed over 2 hours to extreme temperatures (under 50°F or over 100°F) within the 12 hours before the installation, acclimation is required. In this case, keep the boards in room temperature for at least 12 hours in unopened packages before you start the installation. The room temperature must be maintained constant between 60 to 80°F before and during installation.
- For floor surfaces exceeding 4000 sf and/or lengths exceeding 66 ft, use expansion moldings.
- Inspect your subfloor before you begin. It must be clean and level to 3/16" per square foot.
- Although this floor is water resistant, it is not a moisture barrier. The subfloor must be dry (max 2.5% moisture content - CM method). This product is also not to be installed in areas that have a risk of flooding such as saunas or outdoor areas. When employing the direct glue down installation method, DO NOT include a 6-mil poly vapor barrier. Flooring material must be adhered directly to the subfloor.
- If this flooring is intended to be installed over an existing wood floor, or a plywood subfloor, it is recommended to repair any loose boards or squeaks before you begin the installation.
- Concrete subfloors must be fully cured for at least 60 days, and should have minimum 6-mil poly-film as a moisture barrier between the concrete subfloor and the flooring. Subfloor should be flat and level within 3/16" over a 10' span. If necessary, grind high spots down and level low spots with an approved leveling compound.
- Decide the installation direction. It is recommended to install the length direction of the planks parallel to the main light direction.
- Measure the area to be installed. The board width of the last row shall not be less than 2". If so, adjust the width of the first row to be installed. In narrow hallways, it is recommended to install the floor parallel to the length of the hallway.
- Inspect each individual plank one by one before installation. No claims on surface defects will be accepted after installation.

IMPORTANT NOTICE
InFloor Radiant Heat flooring can be operated over 1/2" (2-mm) emplaced radiant heat. Radiant heat systems must have a minimum of 1/2" (12-mm) separation from the product. Maximum operating temperature should never exceed 85°F (30°C). Use of an in-floor temperature sensor is recommended to avoid overheating.

• Before installing over newly constructed radiant heat systems, operate the system at maximum capacity to force any residual moisture from the cementitious topping of the radiant heat system. The maximum moisture content should be 2.5% (CM method). Before starting the installation, turn the heat off for 24 hours before, during and 24 hours after installation when installing over radiant heated subfloors.

• Make sure that the temperature in the room is between 60°F (15°C) and 80°F (25°C) during installation.

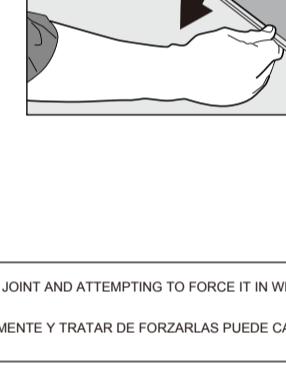
• Once the installation has been completed, the heating system should be turned on and increased gradually (5 degree increments) until returning to normal operating conditions.

• Refer to the radiant heat system's manufacturer recommendations for additional guidance.

Warning: Electric heating mats that are not embedded into the subfloor are recommended for use underneath the flooring. Using electric heating mats that are not embedded and applied directly underneath the flooring will void the warranty.

Tools and supplies required

- Spacers • Rubber Mallet • Ruler • Pencil
- Tape Measure • Utility Knife

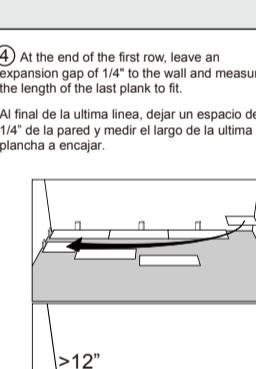
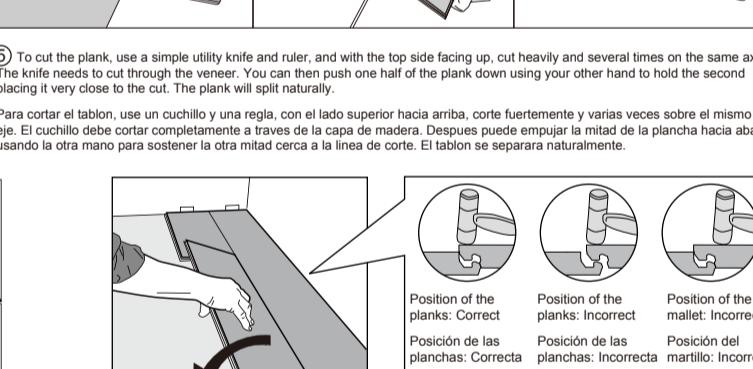



① After thoroughly cleaning the subfloor, you should begin laying in the left-hand corner. Place the floorboard 1/4" from the left wall. Use spacers between the floor and the wall to maintain a 1/4" gap.

② Long de la esquina el piso a 1/4" de la pared. Utilice espaciadores entre la pared y el piso.

WARNING: FAILURE TO PROPERLY LINE UP THE END JOINT AND ATTEMPTING TO FORCE IT WHILE OUT OF ALIGNMENT COULD RESULT IN PERMANENT DAMAGE TO THE PRODUCT.

Aviso: NO ALINEAR LAS PLANCHAS APROPIADAMENTE Y TRATAR DE FORZARLAS PUEDE CAUSAR DAÑOS PERMANENTES A LAS JUNTAS DEL PRODUCTO.

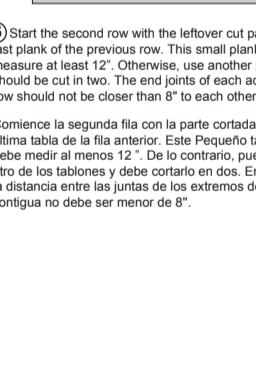
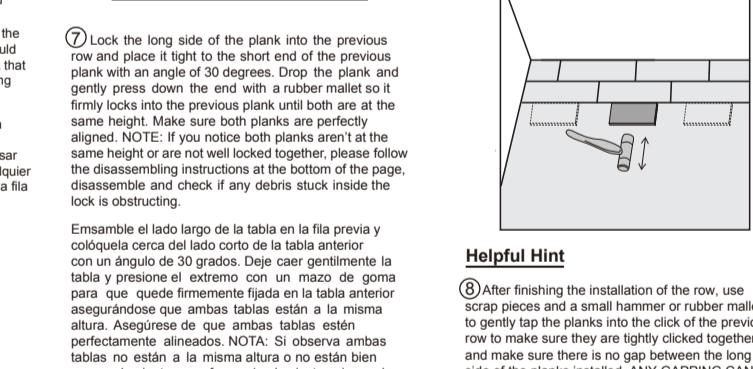



③ At the end of the first row, leave an expansion gap of 1/4" to the left wall and measure the length of the last plank to fit.

Al final de la primera fila, dejar un espacio de 1/4" de la pared y medir el largo de la última placa para encajar.

④ Step the second row with the leftover part of the last plank of the previous row. This small plank should measure at least 12". Otherwise, use another plank that should be cut in two. The end joints of each adjoining row should not be in the same place.

Comience la segunda fila con la parte restante de la ultima placa de la fila anterior. Esta pequeña placa debe medir al menos 12". De lo contrario, puede usar otra de los tableros y debé cortarlos en dos. En cualquier la distancia entre las juntas de los extremos de cada fila no debe ser menor de 12".

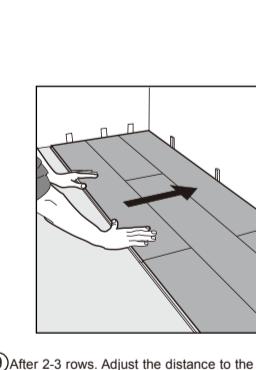
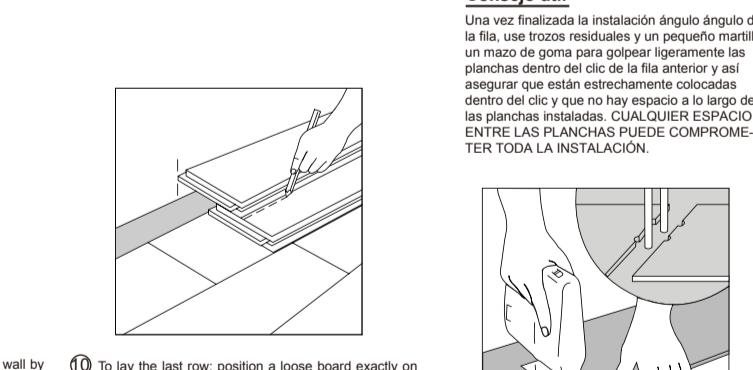
⑤ To lay the plank, use a simple utility knife and ruler, and with the top side facing up, cut heavily and several times on the same axis. Coloque la otra mitad de la placa sobre el corte y coloque la lengüeta hacia arriba. Luego de empalar la otra mitad de la placa, la placa se separa naturalmente.

Para cortar la tabla, use un cuchillo y una regla, con el lado superior hacia arriba, corte fuertemente y varias veces sobre el mismo eje. El cuchillo debe cortar completamente a través de la capa de madera. Despues puede empujar la otra mitad de la placa hacia abajo usando la otra mano para sostener la otra mitad cerca a la linea de corte. La placa se separa naturalmente.

Position of the planks: Correct Posición de las planchas: Correcta Position of the planks: Incorrect Posición de las planchas: incorrecta Position of the mallet: Incorrect Posición del martillo: incorrecta

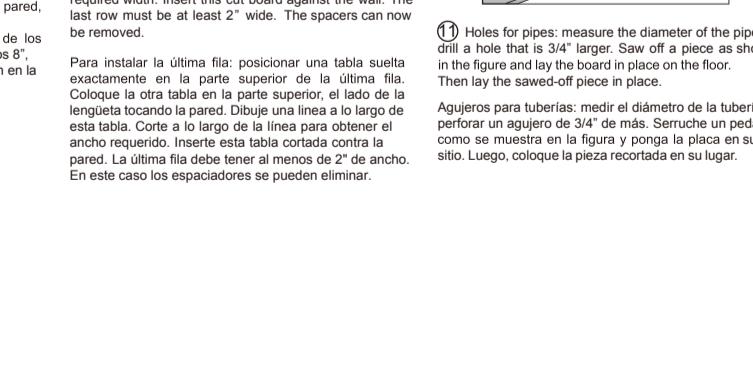
Helpful Hint

Una vez finalizada la instalación ángulo ángulo de la fila, use trozos residuales y un pequeño martillo o un martillo de goma y una regla para ligamente las planchas entre el círculo de la fila y así asegurar que están estrechamente colocadas dentro del círculo y que no quedan espacios a lo largo de las planchas. Círculo QUILTE ESPACIO ENTRE LAS PLANCHAS PUEDE COMPROMETER TODA LA INSTALACIÓN.

⑥ Step the second row with the leftover part of the last plank of the previous row. This small plank should measure at least 12". Otherwise, use another plank that should be cut in two. The end joints of each adjoining row should not be in the same place.

Comience la segunda fila con la parte restante de la ultima placa de la fila anterior. Esta pequeña placa debe medir al menos 12". De lo contrario, puede usar otra de los tableros y debé cortarlos en dos. En cualquier la distancia entre las juntas de los extremos de cada fila no debe ser menor de 12".

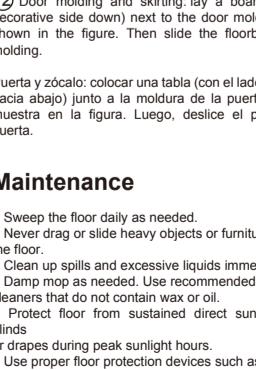
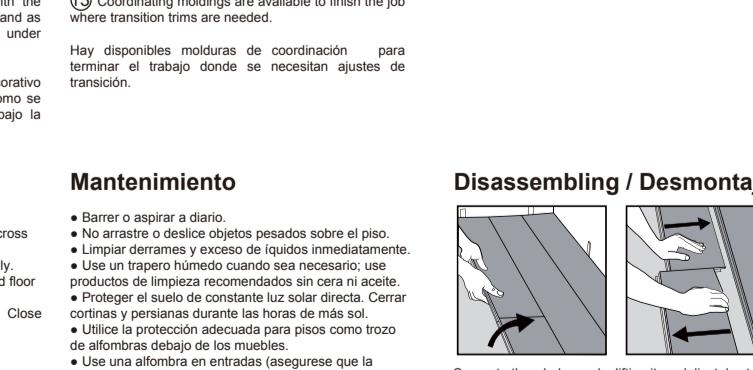
⑦ Lock the long side of the plank into the previous row and place it tight to the short end of the previous plank. Then lay the plank down with the tongue side touching the wall and gently press down the end with a rubber mallet so that firmly locks into the previous plank until both are at the same height. Note: If both planks are not at the same height or are not well locked together, please follow the disassembly instructions at the bottom of the page, disassemble and reassemble the planks again at the bottom of the page and encienda juntos; por favor, siga las instrucciones de desmontaje en la parte inferior de la página, desmonte y compruebe si hay algo obstruyendo el cierre.

Embase el lado largo de la tabla en la fila previa colocando la lengüeta de la tabla anterior con un desgaste y presione el extremo con un mazo de goma para que quede firmemente fija en la tabla anterior para que no quede espacio entre las planchas. Asegúrese de que ambas tablas estén perfectamente alineadas. NOTA: Si observa alturas diferentes entre las tablas, por favor, siga las instrucciones de desmontaje en la parte inferior de la página, desmonte y compruebe si hay algo obstruyendo el cierre.

Position of the planks: Correct Posición de las planchas: Correcta Position of the planks: Incorrect Posición de las planchas: incorrecta Position of the mallet: Incorrect Posición del martillo: incorrecta

Helpful Hint

⑧ After finishing the installation of the row, use trozos residuales y un pequeño martillo o un martillo de goma y una regla para ligamente las planchas entre el círculo de la fila y así asegurar que están estrechamente colocadas dentro del círculo y que no quedan espacios a lo largo de las planchas. Círculo QUILTE ESPACIO ENTRE LAS PLANCHAS PUEDE COMPROMETER TODA LA INSTALACIÓN.

⑨ After 2-3 rows. Adjust the distance to the front wall by leaving an expansion gap of 1/4". Always ensure that the end joints are staggered at least 8", both within the same row and between rows.

Después de 2 filas, ajuste la distancia frente a la pared, dejando un espacio de expansión de 1/4".

Después de 2-3 filas: Asegúrate de que los extremos de los tableros estén escalonados al menos 8", tanto cuando estás en la misma fila y cuando estás en la siguiente fila.

⑩ To lay the last row, position a loose board exactly on top of the last row laid. Place another board on top, with the tongue side touching the wall. Draw a line along the edge of this board. Cut along this line to obtain the last row. The last row must be at least 2" wide. The planks can now be removed.

Para instalar el último fila, coloque una tabla suelta exactamente en la parte superior de la última fila. Coloque la otra tabla en la parte superior, al lado de esta tabla. Dibuje una línea a lo largo de este tablo. Corte la línea de la placa anterior, el ancho de la placa debe ser de al menos 2". Los tableros pueden ser removidos, por favor, siga las instrucciones de desmontaje en la parte inferior de la página, desmonte y compruebe si hay algo obstruyendo el cierre.

Position of the planks: Correct Posición de las planchas: Correcta Position of the planks: Incorrect Posición de las planchas: incorrecta Position of the mallet: Incorrect Posición del martillo: incorrecta

Helpful Hint

⑪ To lay the last row, position a loose board exactly on top of the last row laid. Place another board on top, with the tongue side touching the wall. Draw a line along the edge of this board. Cut along this line to obtain the last row. The last row must be at least 2" wide. The planks can now be removed.

Para instalar el último fila, coloque una tabla suelta exactamente en la parte superior de la última fila. Coloque la otra tabla en la parte superior, al lado de esta tabla. Dibuje una línea a lo largo de este tablo. Corte la línea de la placa anterior, el ancho de la placa debe ser de al menos 2". Los tableros pueden ser removidos, por favor, siga las instrucciones de desmontaje en la parte inferior de la página, desmonte y compruebe si hay algo obstruyendo el cierre.

Position of the planks: Correct Posición de las planchas: Correcta Position of the planks: Incorrect Posición de las planchas: incorrecta Position of the mallet: Incorrect Posición del martillo: incorrecta

Helpful Hint

⑫ Door molding and skirting: lay a board (with the decorative side down) next to the door molding and as shown in the figure. Then slide the floorboard under molding.

Puerta y zócalo: coloca una tabla (con el lado decorativo hacia abajo) junto a la madera de la puerta, como se muestra en la figura. Luego, deslice el piso bajo la puerta.

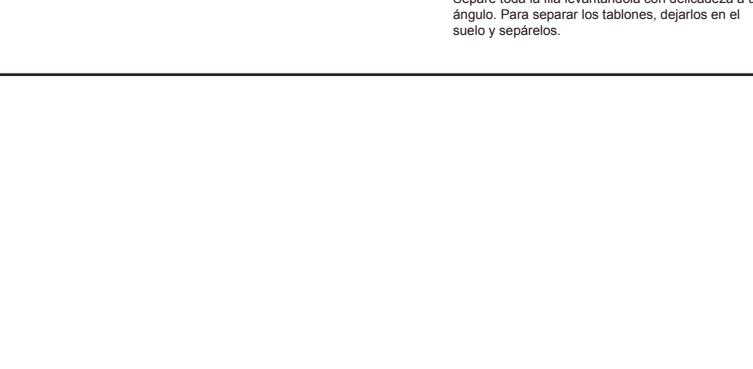
Maintenance

- Sweep the floor daily needed.
- Never drag or slide heavy objects or furniture across the floor.
- Clean up spills and excessive liquids immediately.
- Damp mop as needed. Use recommended wood floor cleaner that does not contain wax or oil.
- Protect floor from direct sunlight. Close window blinds or drapes during peak sunlight hours.
- Use the proper protection devices such as felt protectors under furniture and chair legs.
- Use a microfiber duster and under chair legs.
- Do not use abrasive cleaners, bleach or wax to maintain the floor.

Mantenimiento

- Barrer o aspirar diariamente.
- No arrastre o deslice objetos pesados sobre el piso.
- Limpie inmediatamente las salpicaduras y excesivas líquidas.
- Use un trapo húmedo como limpiador recomendado para pisos sin cera ni aceite.
- Proteger el piso de la luz solar directa. Cerrar cortinas y persianas durante las horas de máxima luz solar.
- Use protectores adecuados para pisos como trozo de algodón o fieltro debajo de los muebles y sillas.
- Use una alfombra de repuesto (asegúrese que la alfombra no tenga resbaladizo de goma).
- No usar limpiadores abrasivos, cloro o cera para la manutención del suelo.

Disassembling / Desmontaje

⑬ Coordinating moldings are available to finish the job when transitioning trim lines are needed.

Hay disponibles molduras de coordinación para terminar el trabajo donde se necesitan ajustes de transición.

⑭ Separates the whole row by lifting it up delicately at an angle. To separate the planks, leave them flat on the ground and slide them apart.

Separate toda la fila levantándola con delicadeza a un ángulo. Para separar los tableros, dejálos planos en el suelo. Luego, colóquelos y deslícelos uno al otro.

⑮ Disassembling / Desmontaje




⑯ Use a sharp object to remove the adhesive residue from the floor.

Use un objeto afilado para quitar los residuos adhesivos del piso.

AquaGuard Wood™ Flooring

MANUFACTURER'S LIMITED LIFETIME RESIDENTIAL WARRANTY

Manufacturer of AquaGuard Wood™, referred to herein as AquaGuard Wood, warrants to the original purchaser that the flooring will be free of manufacturing defects, and that the factory applied finish will not wear through*, peel off or delaminate throughout the life of the product when used under normal residential traffic conditions.

*Wear through is defined as 100% finish loss over a minimum of 5% of the total installation. Scratches and loss of gloss are not considered as wear through.

If the product wears through, AquaGuard Wood will at its option replace or refund the portion of the floor in question as covered under this warranty. This warranty does not cover labor, unless professionally installed, nor any other incidental expenses incurred as a result of covered defect. Should the original floor be discontinued, AquaGuard Wood will replace the defective material with an AquaGuard Wood floor of equal value.

This warranty is exclusive to the original purchaser and in lieu of all other warranties, expressed or implied, and all other remedies, guarantees or liabilities arising by law or otherwise.

MANUFACTURER'S LIMITED 15 YEAR LIGHT COMMERCIAL WARRANTY

AquaGuard Wood™ warrants to the original purchaser that the flooring will be free of manufacturing defects, and that the factory applied finish will not wear through*, peel off or delaminate for 15 years after the date of purchase of the product when used under light commercial traffic conditions.

* Wear through is defined as 100% finish loss over a minimum of 5% of the total installation. Scratches and loss of gloss are not considered as wear through. Heavier traffic areas such as entry foyers, food preparation areas such as commercial kitchens, and any areas with heavy rolling loads are not recommended.

If the product wears through, AquaGuard Wood will at its option replace or refund the portion of the floor in question as covered under this warranty. This warranty does not cover labor unless professionally installed, nor any other incidental expenses incurred as a result of covered defect. Should the original floor be discontinued, AquaGuard Wood will replace the defective material with an AquaGuard Wood floor of equal value.

This warranty is exclusive to the original purchaser and in lieu of all other warranties, expressed or implied, and all other remedies, guarantees or liabilities arising by law or otherwise.

24 Hour Standing Water Warranty

AquaGuard Wood will resist damage from moisture due to wet mopping and everyday household spills removed within 24 hours. This product is water resistant. However, when excessive moisture accumulates in buildings or on building materials, mold and/or mildew growth can occur (particularly if the moisture problem remains undiscovered and unaddressed). The moisture warranty excludes damage resulting from mold and/or mildew growth due to prolonged exposure to moisture. This warranty does not cover flooding.

Warranty Exclusions

The owner/installer must inspect the color, finish and quality of the flooring prior to installation. AquaGuard Wood is not responsible for labor costs incurred for flooring installed with visible defects. Isolated floor squeaks are not a defect and are not covered under warranty. This warranty does not cover damage caused by improper installation, negligence, water erosion, abrasion, extreme heat or temperature, cleaning care or maintenance contrary to written instructions provided by AquaGuard Wood. This warranty does not cover physical abuse or misuse, indentation, scratching, impact, cutting, freight damage, alteration or any wear or damage caused by acts of God. Changes in color due to exposure to light are not covered by the warranty. Variations in color, tone, grain patterns and other are naturally occurring characteristics of hardwood.

This warranty does not apply if product is installed in areas where condensation repeatedly occurs, or any other areas contrary to the recommendations of AquaGuard Wood, including, but not limited to, exterior applications, unstable/improper subfloors, or areas exposed to excessive topical and ground moisture. Protective pads should be used under furniture legs, and mats should be used under any chairs with rolling casters.

For the Lifetime Residential warranty, if a claim is made and approved after 1 year of purchase, AquaGuard Wood will pay a pro - rated percentage of material cost, determined by the number of years from the date of purchase and the remaining period up to 50 years. For example, if the claim is made 20 years after the original purchase, then AquaGuard Wood will pay 60% (30/50th) of the material. If the claim is made 50 years or more after the purchase, AquaGuard Wood will provide you, the original purchaser, with a 5% discount on material only on your next purchase of a AquaGuard Wood flooring product. If professionally installed, reasonable labor may be paid for claims within 36 months from the date of purchase. No labor will be paid after 36 months.

For the 15 Year Light Commercial warranty, if a claim is made and approved after 1 year of purchase, AquaGuard Wood will pay a pro - rated percentage of material cost, determined by the number of years from the date of purchase and the remaining period up to 15 years. For example, if the claim is made 6 years after the original purchase, then AquaGuard Wood will pay 60% (9/15th) of the material. If professionally installed, reasonable labor may be paid for claims within 36 months from the date of purchase. No labor will be paid after 36 months.

AquaGuard Wood excludes and will not pay incidental or consequential damages under this warranty. By this we mean any loss, expense, or damages other than to the flooring itself that may result from a defect in the flooring. No implied warranties extend beyond the term of this written warranty.

AquaGuard Wood assumes no liability for incidental or consequential damages. Some states do not allow the exclusion of limitation for incidental or consequential damages. In that case, these exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state. AquaGuard Wood reserves the right to have a representative inspect the floor and remove samples for additional evaluation if needed. No installer, retailer, agent or employee of AquaGuard Wood has the authority to increase or alter the obligations or limitations of this warranty.

For Warranty Service

To make a claim, you may:

- 1) Contact your AquaGuard Wood retailer, by visiting www.flooranddecor.com, no later than 30 days after the discovery of the defect. Proof of purchase is required. Your retailer will assist in coordinating a resolution of your claim. OR:
- 2) Contract a certified independent inspector (such as www.NWFA.org). The inspector should submit a copy of the inspection report directly to your AquaGuard Wood retailer for consideration. Note that while independent inspections are credible and usually reliable, the final decision rests solely with AquaGuard Wood.

Only certified inspectors approved in writing, in advance by AquaGuard Wood will be considered.