


SUGGESTED TOOLS AND MATERIALS




Sealant



Tape Measure


VANITY TOP INSTALLATION

1

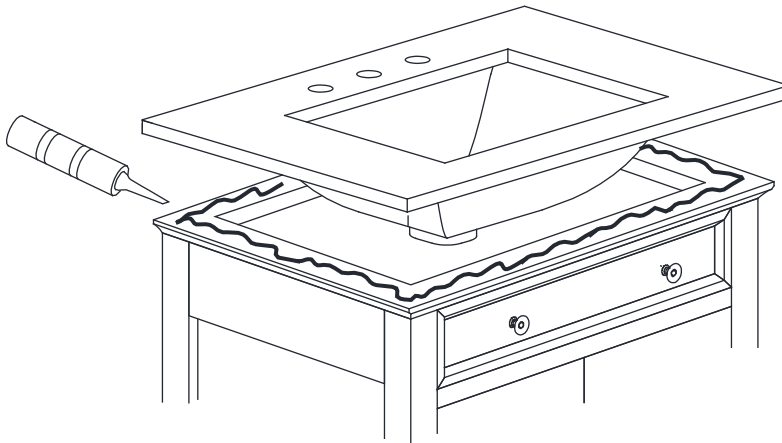


Apply bead of quality sealant evenly along the top of the vanity.

2

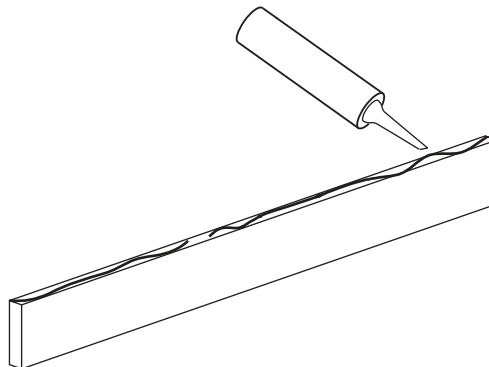

Apply silicone sealant evenly along the bottom and backside of backplash.

3

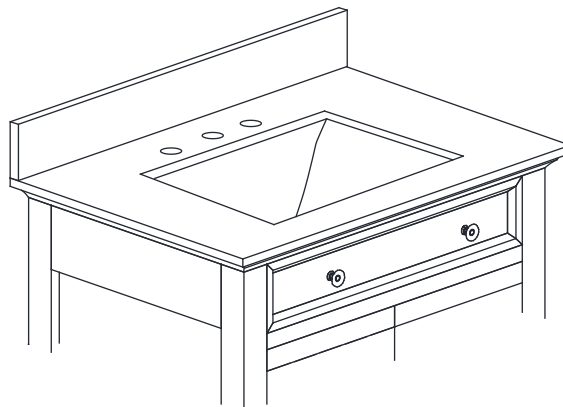

Finally, place the bottom side of back splash with sealant onto the countertop and check alignment of back splash. Adjust the leg levelers as needed

****NOTE:** Sink style, shape, cutout on top, vanity may vary from the picture above. Instructional purposes only. **