

ACOUSTIC WALL PANEL INSTALLATION INSTRUCTIONS

Installation Environment

- Panels must be installed in a dry, climate-controlled environment.
- Suitable for indoor, residential or light commercial use.
- Maintain a temperature range of 64° - 86°F (18° - 30°C) and humidity range of 35% to 65%.

Owner's Responsibility


- The owner/installer is responsible for the final inspection of product quality. Inspect all panels prior to installation for color, finish and surface quality.
- Do not install any panels that appear damaged or defective. Contact Floor & Decor immediately.
- Installation instructions are intended as general guidelines and do not supersede federal, state, or local building codes.
- The owner is responsible for ensuring compliance with all applicable regulations, including maintaining safe distances from heat sources such as fireplaces.
- Failure to follow these installation instructions may result in product failure and may void the warranty.

Important


- For trimming instructions, scan the barcode at the bottom of the page.
- The wall panels feature real wood, and natural variations in color, grain, and texture are normal and part of the product's character.
- When installing multiple panels, arrange and blend panels prior to installation to ensure the overall appearance meets your expectations.
- Panels must be installed over clean, dry, flat, and structurally sound wall surfaces.
- Read the complete installation instructions and warranty information before starting installation.

Installation with Screws


- What You Need
 - Screwdriver/Drill
 - 9 x Black Screws (#6 x 2") for Drywall Installation
 - PPE (eye and respiratory protection when trimming)

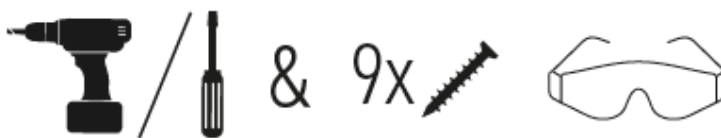


Step 1:
Place Panel
on the wall.

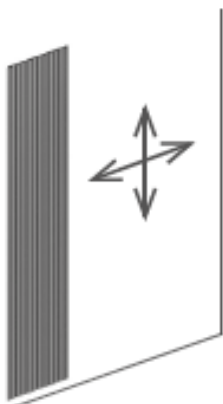

Step 2: Screw
Panel Directly
onto wall
through felt
backing. Use
at least 9
screws.

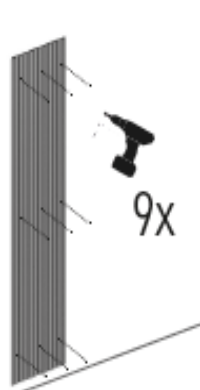

Step 3: When
installing the
next panel,
slightly adjust
panel to
match
distance
between
slats.

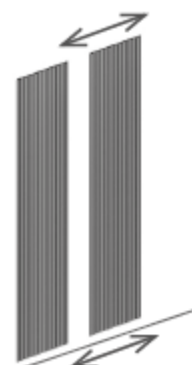




Installation with Glue


- What You Need
 - Screwdriver/Drill
 - Mounting Glue suitable for your wall type
 - 2 x Black Screws (#6 x 2")
 - PPE (eye and respiratory protection when trimming)




Step 1:
Place Panel
on the wall.

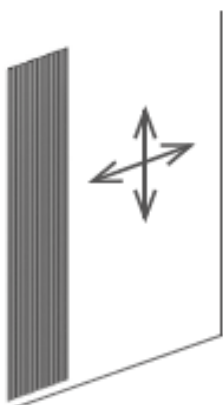

Step 2:
Apply
mounting
glue on
back side
of the
panel.

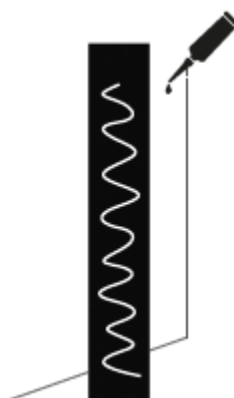

Step 3:
Press panel
to the wall
and secure
with 2
screws
through felt
backing.

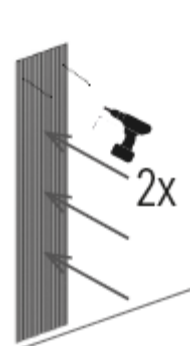

Care and Maintenance:

- Cleaning: Wipe panels with a dry, soft cloth to remove dust. Avoid abrasive materials or excessive moisture.
- Preventing Stains: If spills occur, immediately blot with a clean, dry cloth to prevent liquid from soaking or staining into the panel.

Scan the barcode for a
detailed instruction video.

