



Transform your floor in hours.

SWISSTRAX INSTALL INSTRUCTIONS

Congratulations on purchasing "The World's Finest Modular Flooring", Swisstrax®. For quality assurance, please read through the Installation Instructions in its entirety before you begin.

Step 1: (Optional) PREPARATION

- + Clear the flooring surface of any removable objects and or items.
- + Sweep or vacuum any excess dirt and debris off of the flooring surface.

Step 2: STARTING POINT


- + In your garage stand facing your garage door opening.
- + Locate the top-left corner of your garage.



*NOTE: A minimum expansion gap of 1/4" for 15.75" tiles and 1/2" for all other styles should be left at the walls and/or any other immovable objects such as cabinets, vehicle lifts, support beams, etc.


Step 3: INSTALLING TILE #1

- + Place Tile #1 (Tile A) in the top left corner with the pegged "male" sides facing the left wall and garage walls.
- + Remember to leave a 1/4" expansion gap between the tile and wall.

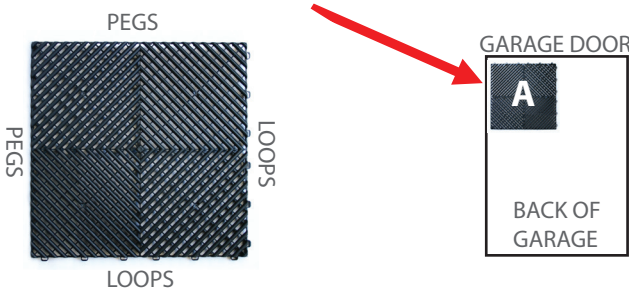

Step 4: INSTALLING THE NEXT TILE

- + Work left to right, interlock Tile B with Tile A making sure that loops and pegs are facing the same direction

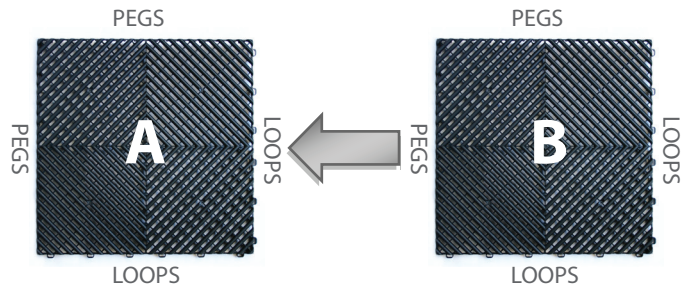

Step 5: COMPLETE ROW #1

- + Continue with your first row until the right wall is reached.

*NOTE: If cutting is necessary, refer to the "Cutting Recommendations" portion of the Install Instructions.

Step 6: INSTALLING ADDITIONAL ROWS

- + Return to the left wall and repeat steps 4-5 until the first three rows are completed.

Step 7: INSTALLING EDGES

- + Following completion of the first three rows, connect the edges to the first installed row nearest to the garage door entry.
- + Edges are only needed between the garage door rails. Refer to the "Edge Installation" portion of Install Instructions (PG.2).

*NOTE: Edges may have to be cut to fit within garage door rails.



Step 8: POSITIONING YOUR EDGES

- + This step begins by closing your garage door.
- + Gently push the first 3 rows of tile with attached edges up against garage door for a precise fit.

Step 9: FINISHING YOUR INSTALL

- + Resume steps 4-5 until the back wall is reached.
- + Be sure to check the alignment of your floor as you progress.
- + Cutting may be necessary along the back wall to complete install!

CUTTING RECOMMENDATIONS:



- + All Swisstrax® products can be cut with an electrical saw such as a circular saw, jig saw, table saw, etc.
- + A fine toothed blade is recommended.

*NOTE: When making your cuts, be sure to position your tile accordingly to ensure it interlocks with the rest of your flooring. Refer to the tool manufacturer's safety guidelines.


*WARNING: **Do not walk on tiles that are not interlocked together** as they can be a dangerous slipping hazard. When installing your floor, be cautious of Swisstrax tiles placed on top of one another.

INSTALLING GRAPHICTRAX™

- + When adhering custom Graphictrax™, install tiles as directed without vinyl graphic. Peel off back sheet of vinyl graphic and carefully insert graphic into the Graphictrax™ tray.

EDGE INSTALLATION

- + In your delivery, you received either looped "female" edges or pegged "male" edges.

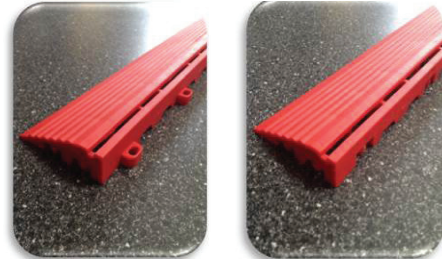


Female/Looped

Male/Pegged

Option #1: Female Edge + Tile

- + Lift up tile and align the female/looped edge with the male/pegs of the tile, and snap into place.

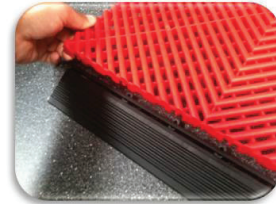

Option #2: Male Edge + Tile

- + Hover above and align the edge male/pegs with the female/looped of the tile, and snap into place.



ATTACHING THE EDGE

- + With pegs and loops aligned, begin by pressing the sides of the tile into the edge, working your way to the center. This may take a little pressure and you will feel a "snap" when the tile is attached to the edge.