




MIRAGE-X

SHOWER AND TUB DOOR INSTALLATION INSTRUCTIONS

PLEASE REVIEW THIS ENTIRE MANUAL PRIOR TO INSTALLATION

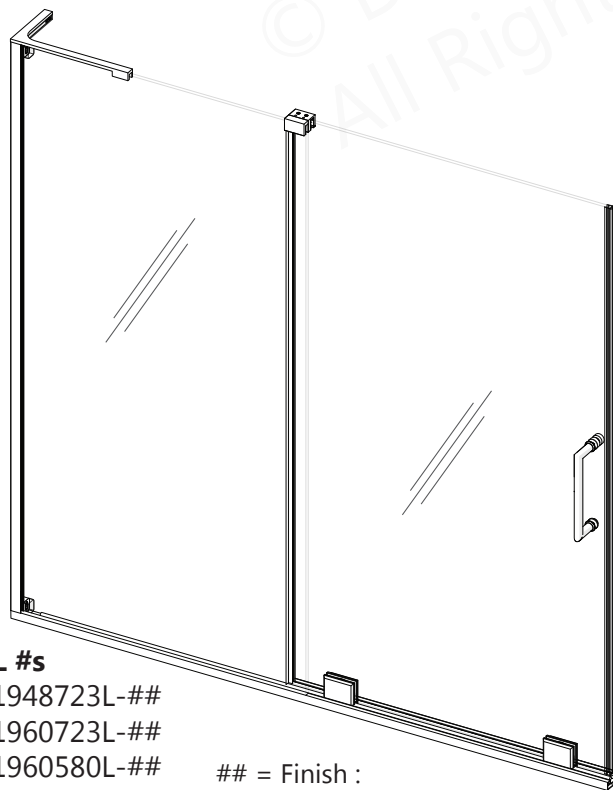

MODEL #s

SHDR-1948723L-##

SHDR-1960723L-##

SHDR-1960580L-##

SHDR-1948723R-##

SHDR-1960723R-##

SHDR-1960580R-##

= Finish :

01 - Chrome

04 - Brushed Nickel


09 - Satin Black

SHDR1948723G-##

G- Smoke Gray Glass

SHDR1960723G-##

SHDR1960580G-##

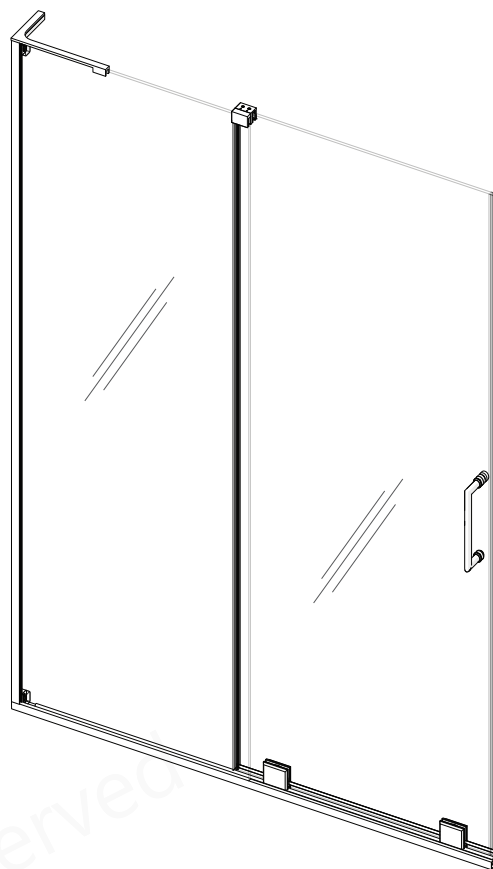

Right-hand door installation shown

IMPORTANT!

DreamLine® reserves the right to alter, modify or redesign products at any time without prior notice for the purpose of product improvement and customer experience. Please refer to the model's web page on **DreamLine.com** for the latest technical drawings, installation manuals, warranty information or additional product details.

Do Not Return Product to the Store. Contact DreamLine® with any questions



Questions?

Please contact DreamLine Customer Support
See **DreamLine.com** for hours of operation

Support@DreamLine.com

1-866-731-2244





Do not remove ClearMax stickers until glass is installed.



This model is treated with DreamLine's exclusive ClearMax™ Glass technology. This is a specially formulated coating that prevents the build up of soap and water spots.

Install the surface with the ClearMax™ label towards the inside of the shower. Please note that depending on the model, the glass may be coated on either one or both surfaces.

For best results, squeegee the glass after each use and dry with a soft cloth.

Record the following purchase information for your records or in the event you need to contact DreamLine®:

Purchase Order
Number _____

Store/Vendor
Purchased From _____

Installation Date _____

OD Number
(optional) _____
*found on the shipping box or label if available.

Installed By: _____

SKU Number _____

Table of Contents

Section Title	Page #
ClearMax® Coating Information	---
Warnings and General Preparation	2
Model Specific Preparation	3
Tools	4
Detailed Diagram of Shower and Tub Door Components	5
Parts List	6-7
Installation Steps	8-33
SafeStop™ Bumper Installation	14-16
Reversible L-Bar™ Installation	21-23
Bottom Roller Assembly Installation	25-27
Guide Block Assembly Installation	28
Re-Install Decorative Cover Plate	29
Handle and Bulb Vinyl Installation	30
Installation of Sweep Vinyls and Notching the Vertical Vinyl Strip	32
Application of Silicone	33
Product Maintenance	34
Troubleshooting	35
Bottom Roller Adjustment Procedure	36
Factory Parts Information	37-42

Symbol Legend



TIP - for ease of installation.



CORRECT - recommended.



NOTE - take note of special feature; additional information.




INCORRECT - not recommended.



REQUIRED - requires special attention; signifies a warning.

Average Installation Time

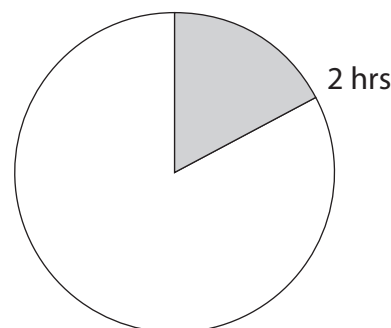

**IMPORTANT**

- DreamLine® reserves the right to alter, modify or redesign products any time without prior notice for product improvement and customer experience. Please refer to the model's web page on DreamLine.com for the latest technical drawings, installation manuals, warranty information or additional product details.
- This product should be installed by someone familiar with the construction requirements for this type of project and the care necessary for the safe installation and operation of the product.
- The safety of any installation is the responsibility of the installer.
- Professional installation recommended. (*All Models*)
- Professional installation required. (*Enigma Series*)
- To prevent damage or serious injury, Do Not lean against the installed panel/door/glass.
- To prevent damage or serious injury: Do Not attempt to lift or move a heavy lite of glass alone. Use an assistant and/or a professional grade glass suction cup.
- The installation of some models may require drilling down into the threshold. Contact the manufacturer of the base, tub, or threshold material with any questions regarding the drilling of holes into their product.
- All drawings in this installation manual are for illustrative purposes only and are not drawn to scale.

TEMPERED GLASS WARNING

- Your Shower Door Glass Could Shatter Without Warning if Improperly Installed or Mishandled
- Do Not install or operate a shower door if the glass has chipped corners, slivered edges or is otherwise damaged and/or has been dropped or banged into a hard surface such as tile, marble or glass.
- **The main causes of tempered glass breakage are:**
 - Improper handling, storage or installation
 - Misuse/abuse
 - Lack of maintenance
 - Failure to replace damaged glass
 - **Improper handling during storage, unpacking and installation:**
 - Corners and edges are the most susceptible area to damage on a lite of tempered glass and should be protected and handled with care during storage, unpacking, installation and operation. A concentrated point of pressure or impact with a surface harder than itself may cause the tempered glass to shatter. The tempered glass may release immediately, within several hours or even days later.
 - **Incorrect installation of door hardware, rollers, hinges, channels, stopper or glass:**
 - Improper installation may include: loose hardware and/or lack of proper gaskets between the hardware and glass. Additionally, improper alignment of guide rails, wall profiles or other hardware during installation or operation may place stress on the glass edges and cause it to break.
 - This product must be installed by a professional and experienced installer familiar with the safe handling of tempered glass.
 - **Improper use of this product:**
 - Aggressively opening or closing the door may cause trauma to the glass, which can lead to breakage. This may occur immediately or hours or even days later.
 - **The shower door hardware and glass should be inspected periodically:**
 - Instruct the homeowner how to perform a periodic inspection of the shower hardware and glass - some minor adjustments may be necessary based upon the use (or misuse) of the shower door. Ensure that the hardware remains tight and that the door alignment and operation are correct. Any adjustments should be made upon discovery to prevent damage to the product.
 - Additional considerations should be given to the installation of frameless tempered glass products in households with young children or an elderly person due to an increased chance of improper handling. In such cases, alternatives such as shower curtains or grab bars should be considered.

GENERAL PREPARATION

- After opening all boxes and packages, read this introduction carefully. Check that all the items are included in the package by marking off the components on the "**Detailed Diagram of Product Components**" page. Examine all boxes and packages for shipping damage. If the unit has been damaged, has a finishing defect, or is missing parts; please contact our Customer Support department within 3 business days of the delivery date. **Please note that DreamLine® will not replace any damaged products or missing parts free of charge after 3 business days or if the product has been installed.** Please contact DreamLine® if you have any questions.
- **Please note that you should refer to your local building codes with questions on installation compliance standards. Building and plumbing codes may vary by location, and DreamLine® is not responsible for code compliance standards for your project and will not accept any returns.**
- If this unit is going to be installed in a new construction, install all the required plumbing and drainage before installing the shower. **Use a competent and licensed (if required by local code) plumber for all plumbing installation.**
- Make sure that prior to beginning the installation, the surfaces are leveled and solid and will be able to support the total weight of the unit. Also make sure the walls are at right angles. Irregular installation surface level, radius corners or improper angle of side walls will result in serious problems for your installation. Please note that some adjustments and drilling will be necessary during the installation process.
- Protect all primary surfaces of the product during installation. Never set your glass down directly onto a tile floor. Leave corner protectors in place until it is necessary to remove them. Always use a piece of wood or cardboard to protect the bottom edge and corners of the glass prior to and during installation.
- This unit must be installed upon a finished threshold and against finished walls.
- *DreamLine® shower doors are not designed to be installed into a fiberglass surround due to the radius corners and lack of a solid surface to mount the hardware.*

WARNING: TO AVOID THE RISK OF DAMAGE OR INJURY:

- **Follow all recommendations and requirements as shown in the installation instructions.**
- Perform a thorough inspection of the glass and all parts for any damage prior to installation. Any damage to tempered glass can cause breakage.
Do Not install damaged glass!
- Do Not install or operate a shower or tub door if the glass has chipped corners, slivered edges or is otherwise damaged. Do Not install or operate a shower or tub door that has been dropped or banged into a hard surface such as tile, marble or glass.
- **CAUTION:** Contact with any hard surface can damage tempered glass and cause it to shatter.
- This product uses tempered glass. Glass cannot be cut after it has been tempered.
Do Not attempt to cut tempered glass.
- DreamLine® Glass Shower doors, Tub doors, Inline panels, and Return panels can shatter due to improper handling or lack of maintenance. Conduct periodic inspections of glass and all parts for possible damage, missing or loose parts.
- Always wear proper safety equipment such as: safety goggles, work gloves and appropriate footwear during the installation process.
- **WARNING. Risk of leakage and/or damage.** Follow all instructions regarding the application of silicone sealant or caulk. Allow 24 hours for the sealant to cure before the initial use of the shower or tub product. Follow the silicone manufacturer's recommendations regarding the use of their product.
- **Thoroughly read these instructions before installing or using this product.**
- **Leave this manual for the end-user of the product.**







This product should be installed by someone familiar with the construction requirements for this type of product and the care necessary for the safe installation and operation of the product.



Model Specific Preparation






REQUIRED:

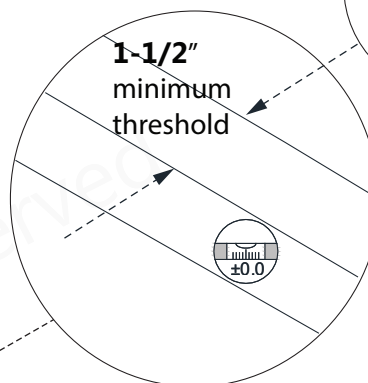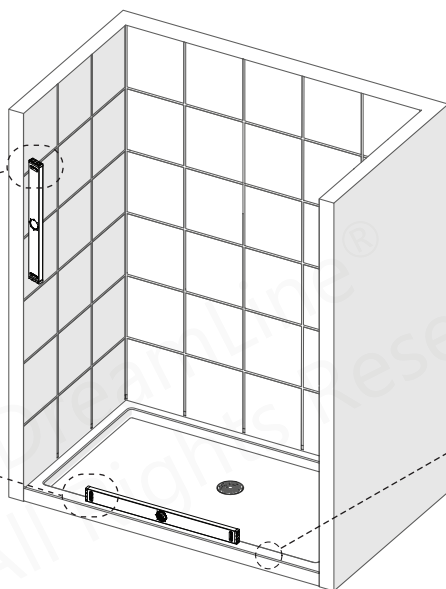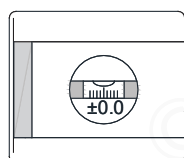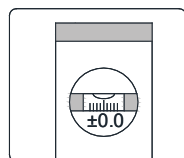


1-1/2" minimum threshold


1-1/2" minimum threshold

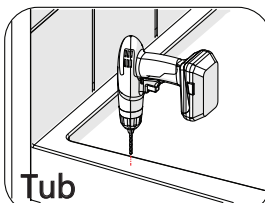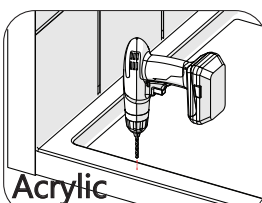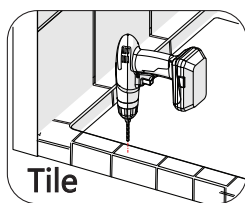


Contact the manufacturer of the base, tub or threshold material with any questions regarding the drilling of holes into their product.

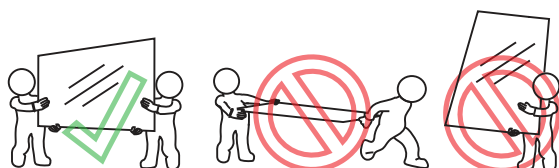

This door recommends professional installation. Two installers recommended.

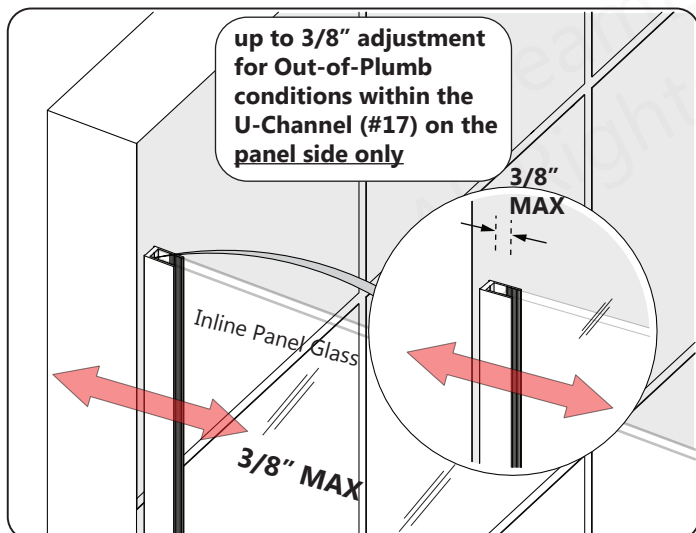


*left-hand Inline Panel Glass installation shown

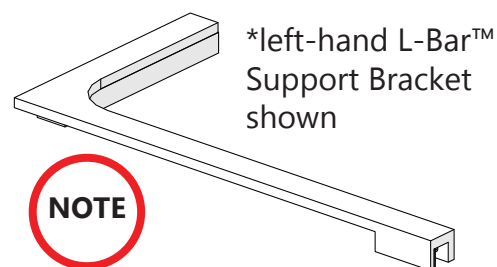

NOTE

This manual will describe the shower/tub door installation using the L-Bar™ Support Bracket in the left-handed orientation (as shown above).

To reverse the L-Bar™ orientation please use the supplied right-hand L-Bar™ Support Bracket.

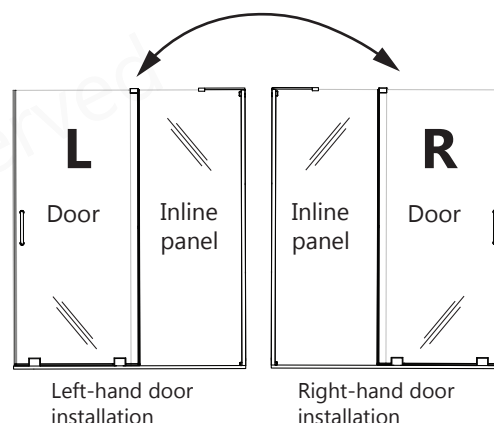


NOTE

This model is reversible for Left or Right-hand door installation. The right-hand door installation is used as an example throughout this manual. For a Left-hand door installation, simply reverse the orientation of the steps shown and begin on the opposite wall.


Tools




Level




Tape Measure




Pencil



Phillips Screwdriver



100% Silicone

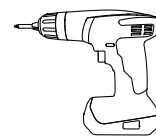

Power Drill



Drill Bit
Ø1/8"
(3mm)




Drill Bit
Ø3/16"
(4mm)




Drill Bit
Ø5/16"
(8mm)




Soft Head Hammer

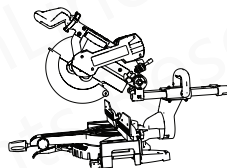

Mitre Saw




Hacksaw

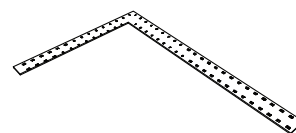

Carpenter's Square



Razor Knife

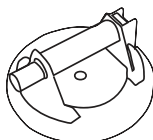

Professional-grade
Glass suction cup



Extender Driver Bit



Safety Glasses



Work Gloves



Measure the finished opening before proceeding with the installation to be sure that the correct model size has been ordered.



Prior to installation, cover the shower/tub drain with tape to prevent losing screws or small parts.



To prevent stripping the screw heads, set screw gun clutch to a low setting when installing screws and bolts.




Unpack your unit carefully and inspect it. Lay it out and identify all parts using the **Detailed Diagram** on **page 5** and parts list in this manual as a reference. Before discarding the carton, check for small hardware bags that may have fallen to the bottom of the box. If any parts are damaged or missing, please contact DreamLine® for replacement. The shipping boxes may contain extra parts not used in your model configuration.




Retain these installation instructions for future reference.

Detailed Diagram of Shower/Tub Door Components

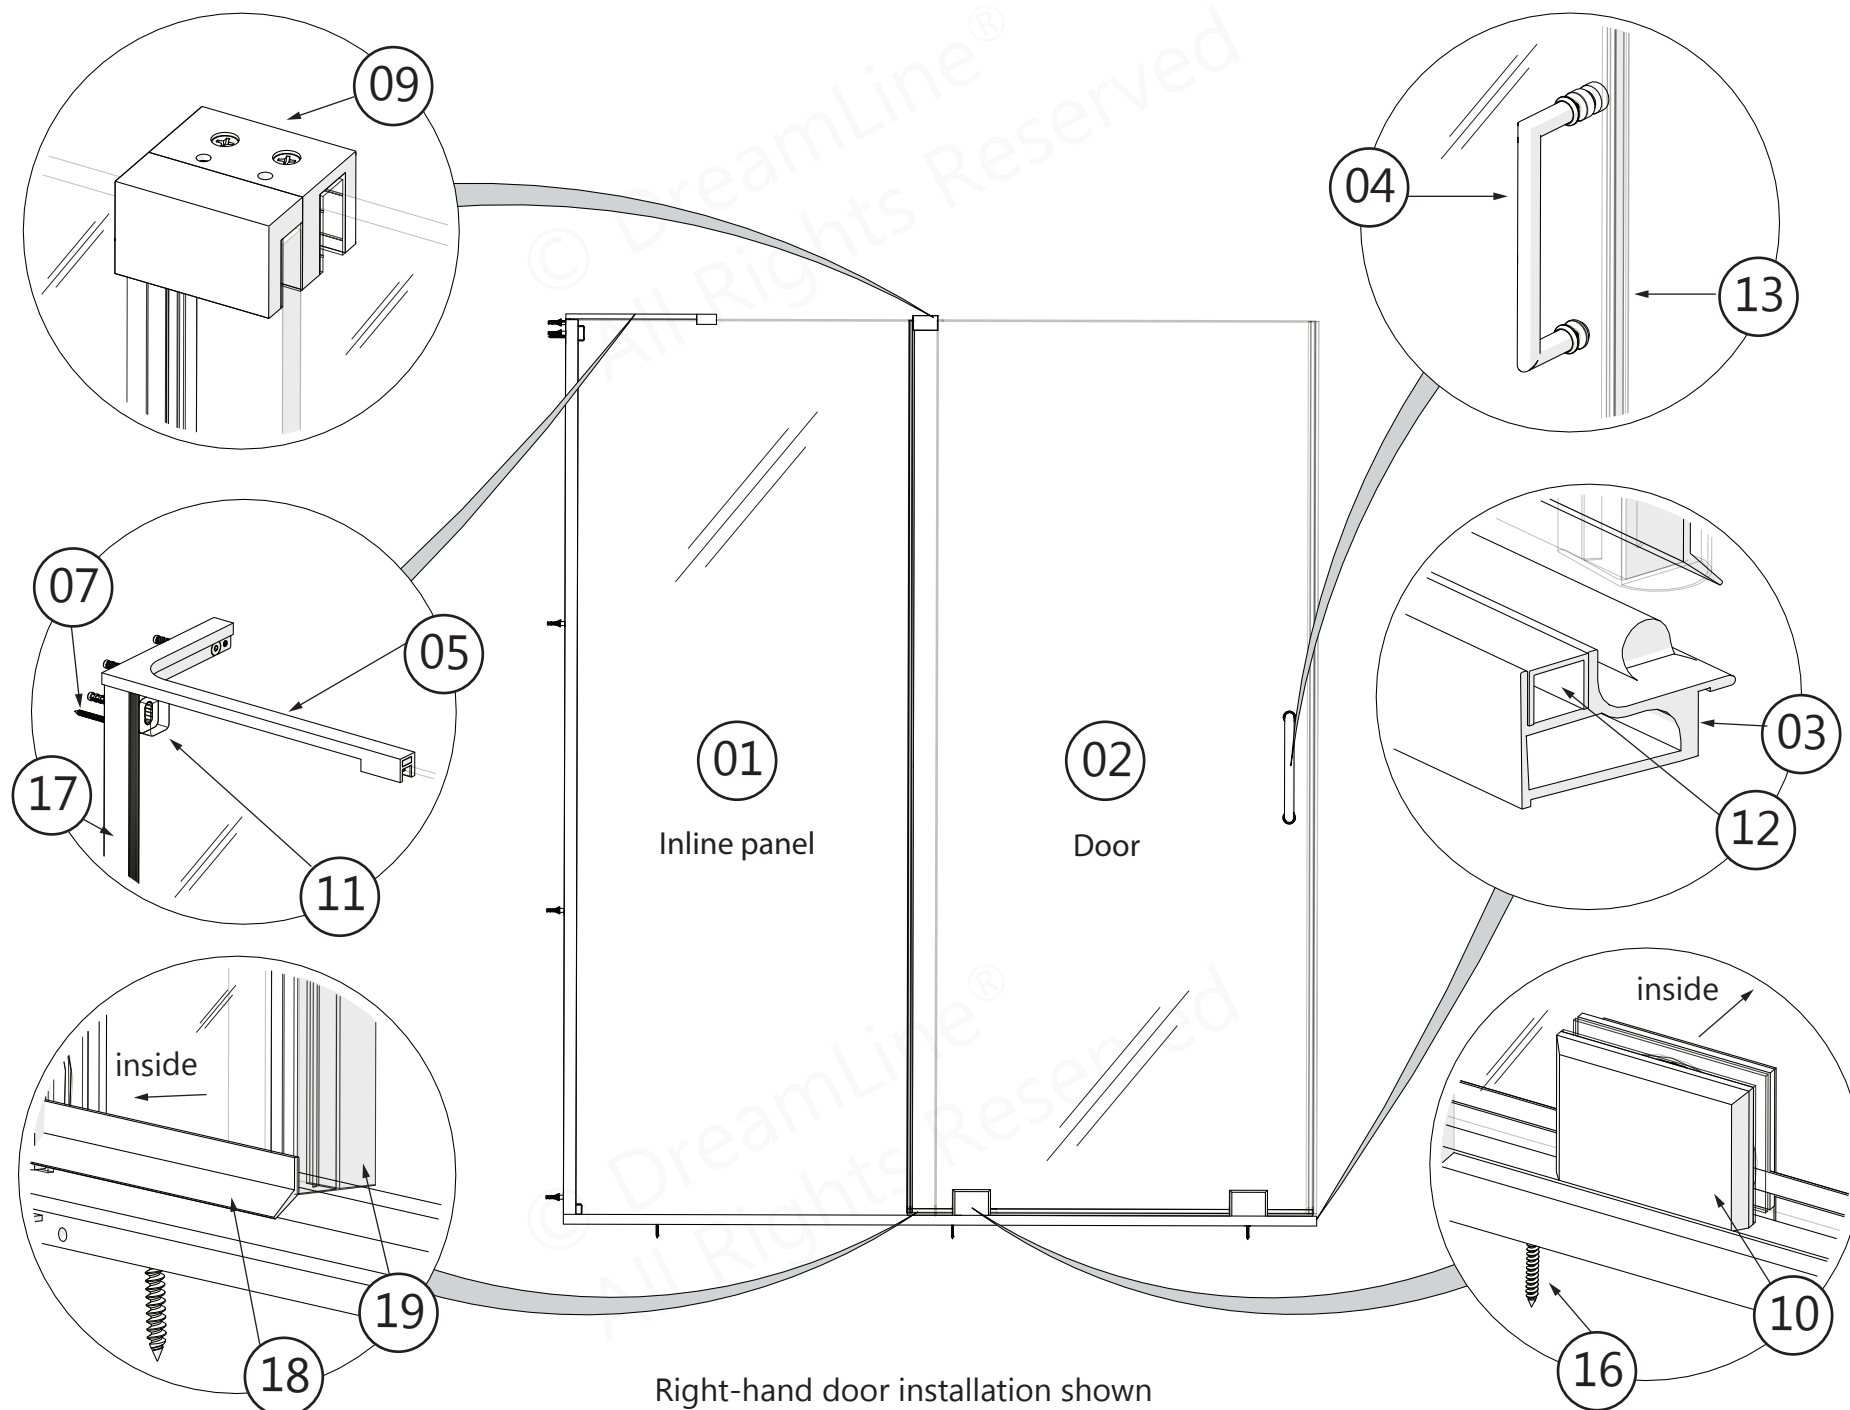

Parts List


01

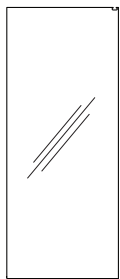

Inline Panel Glass

x1


02

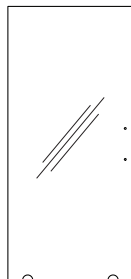

Door Glass

x1


03

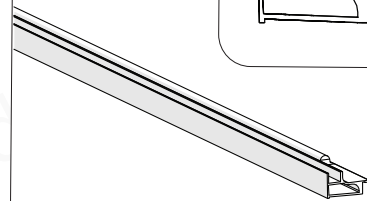

Bottom Guide Rail

x1


04



Handle

x1


05

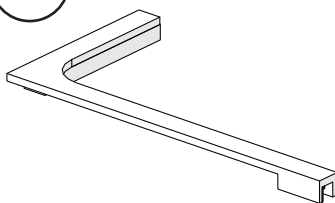

L-Bar™ Support Bracket
(Left and Right)

x1


06

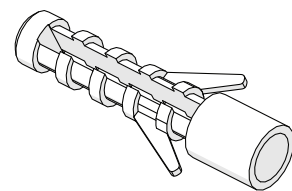

5/16" (8mm)
Wall Anchor

x9


07

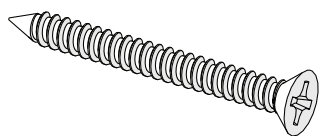

ST4.2 x 40mm
Countersunk Screw

x6


09

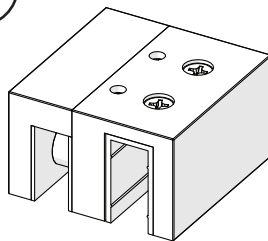

Guide Block

x1


10

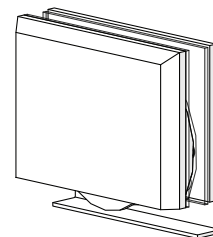

Bottom Roller Assembly

x2


11

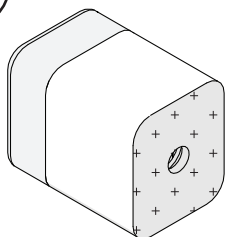

SafeStop™ Bumper

x2


12

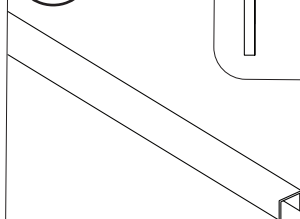

Bottom Channel Insert

x1









13



Bulb Vinyl Seal


x1

Parts List

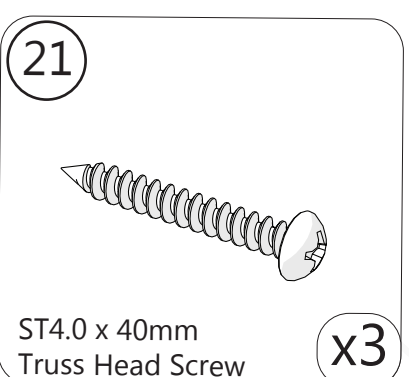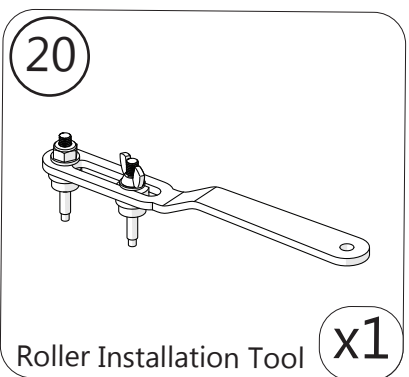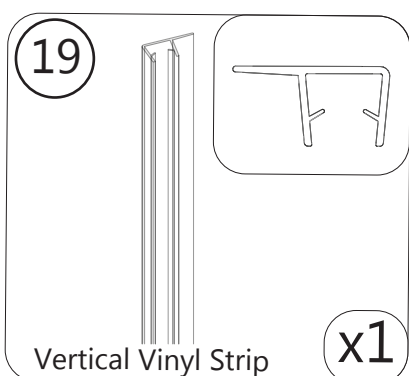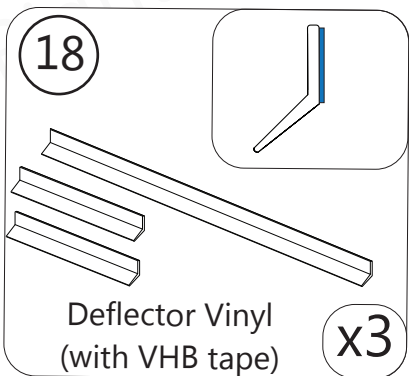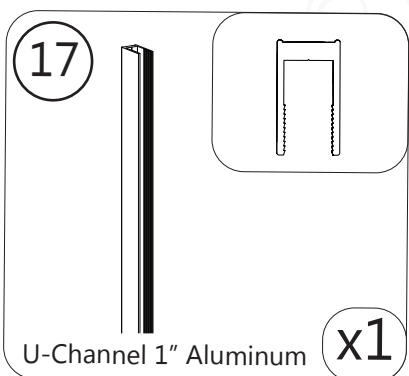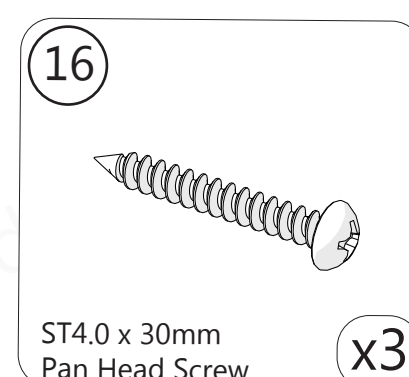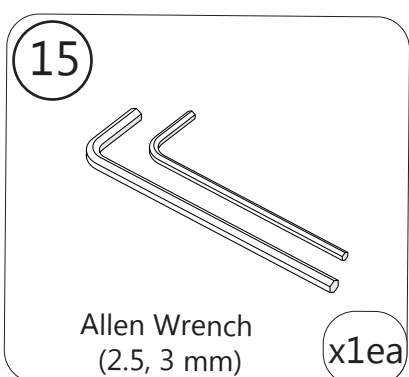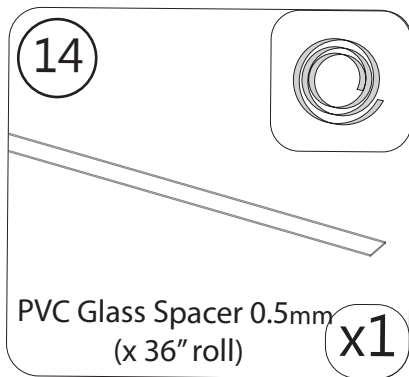

1


Installation Steps

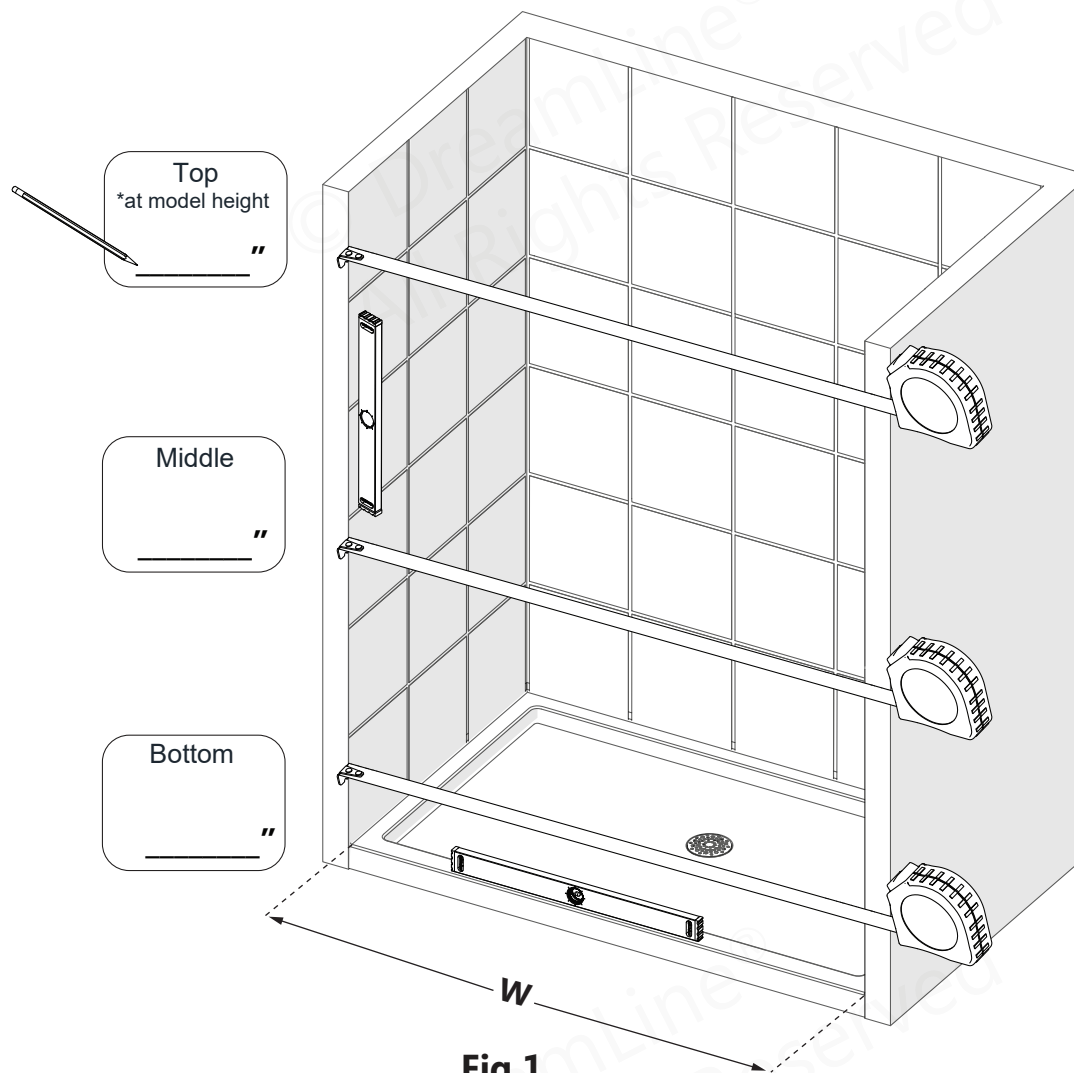**Fig 1****NOTE**

This model will provide up to 3/8" of adjustment for out-of-plumb conditions within the **U-Channel (#17)** on the panel side only.

NOTE

Decide on the handing of the shower door based on your bathroom configuration. The right-hand door installation will be shown as an example throughout this manual.

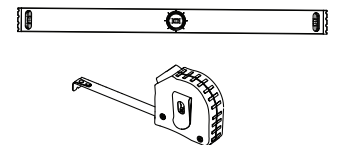
Tools Needed

2



**After determining the handing of the installation:
Only cut from the end of the Bottom Guide Rail (#03)
that will be installed on the door side of the opening.**



The length to cut-off of the door side of the **Bottom Guide Rail (#03)** will be (L):
Finished Opening (W) (-) 1/16" = Finished Cut Length (L)

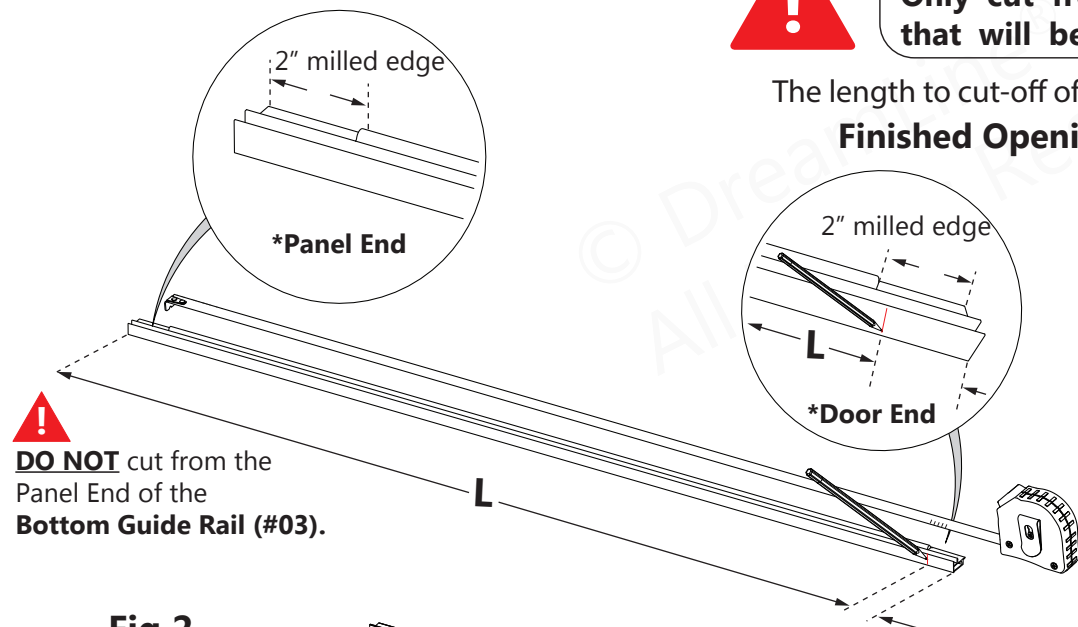

*In this example, the **Bottom Guide Rail (#03)** is shown for a right-hand door installation.

Cutting off a portion of the milled edge from the door end of the bottom guide rail is expected.

Fig 2

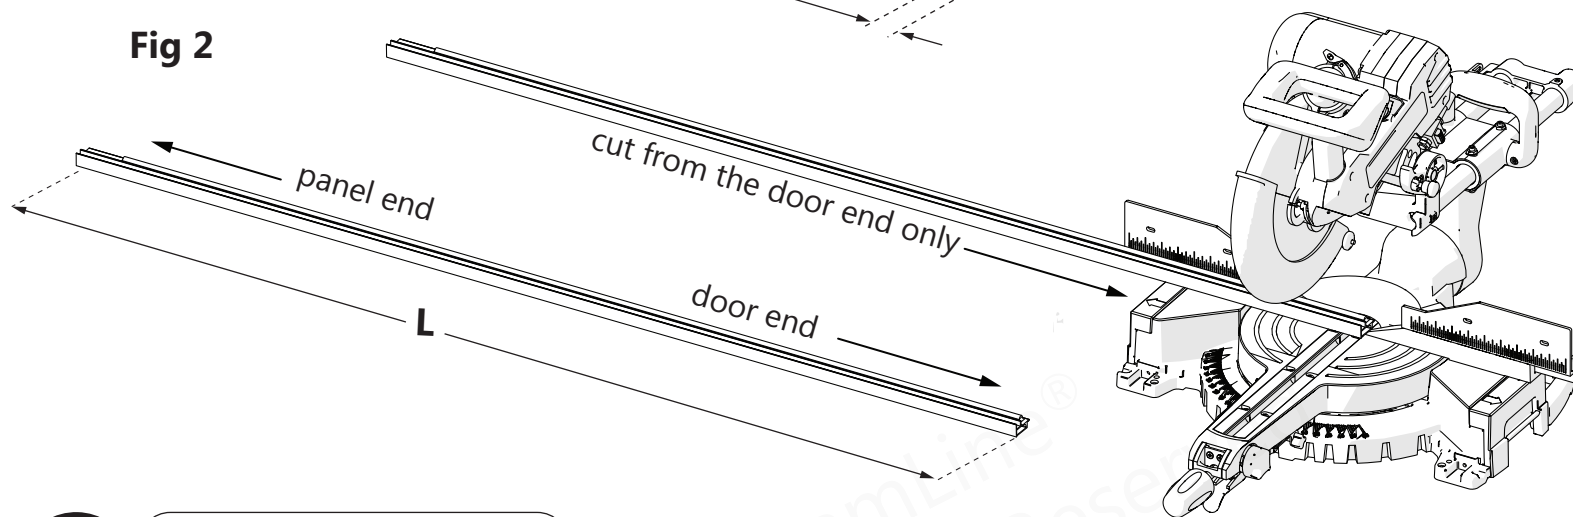


Use a metal file to deburr the cut end

NOTE



The **Bottom Guide Rail (#03)** is made 2" larger than the model size:
48" model = 50" Bottom Rail
60" model = 62" Bottom Rail

If it necessary to drill new attachment holes into the **Bottom Guide Rail (#03)**:
Drill a $\varnothing 3/16"$ hole throughout and then a $\varnothing 5/16"$ hole through the top layer only. (Refer to the existing holes in the rail for an example)

Parts Needed

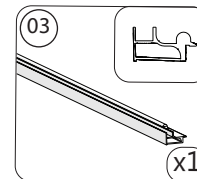

Tools Needed

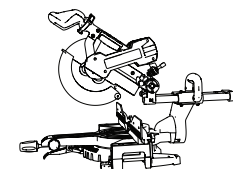

3

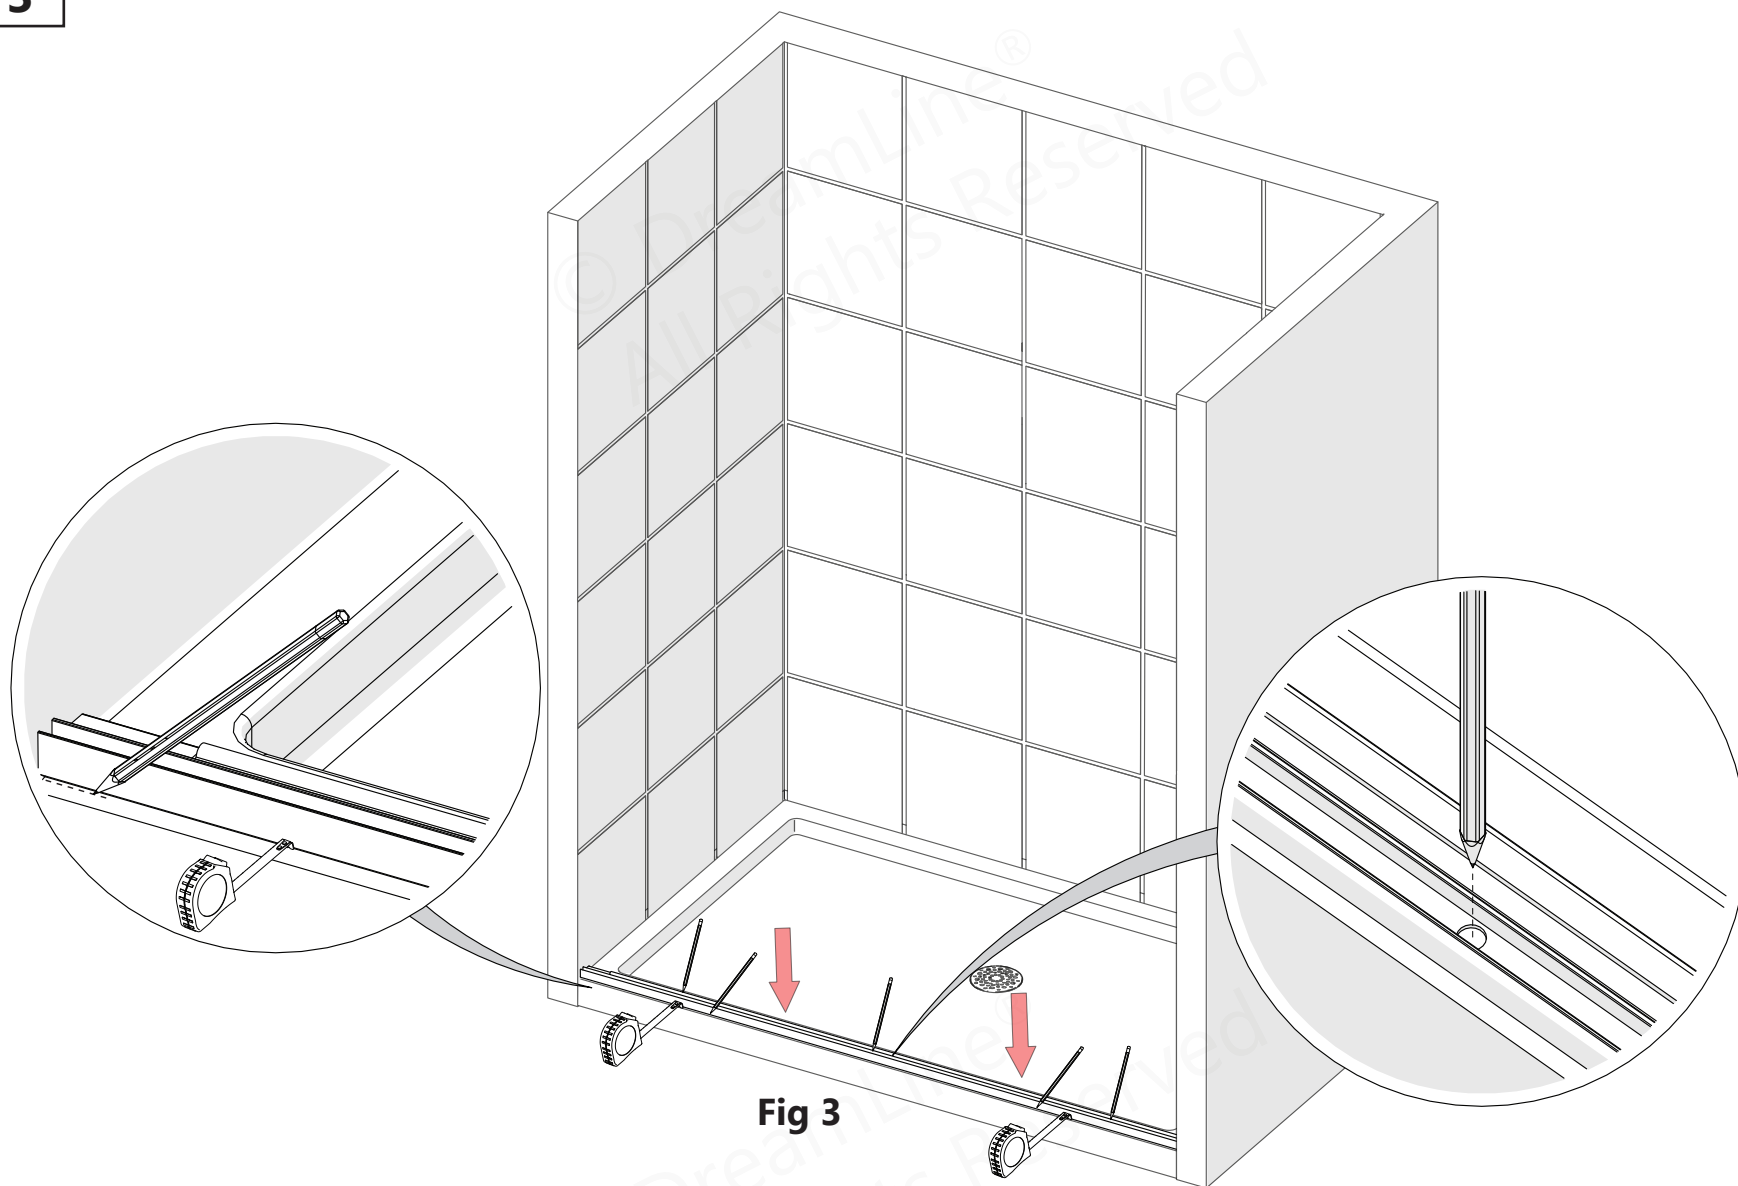
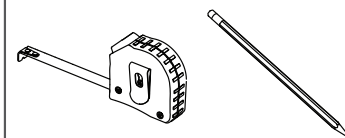


Fig 3

NOTE

Mark the position of the **Bottom Guide Rail (#03)** on the threshold. Use a tape measure to align the rail parallel with the outside edge of the threshold. Mark the holes for drilling through the predrilled holes in the **Bottom Guide Rail (#03)**.

Tools Needed

4



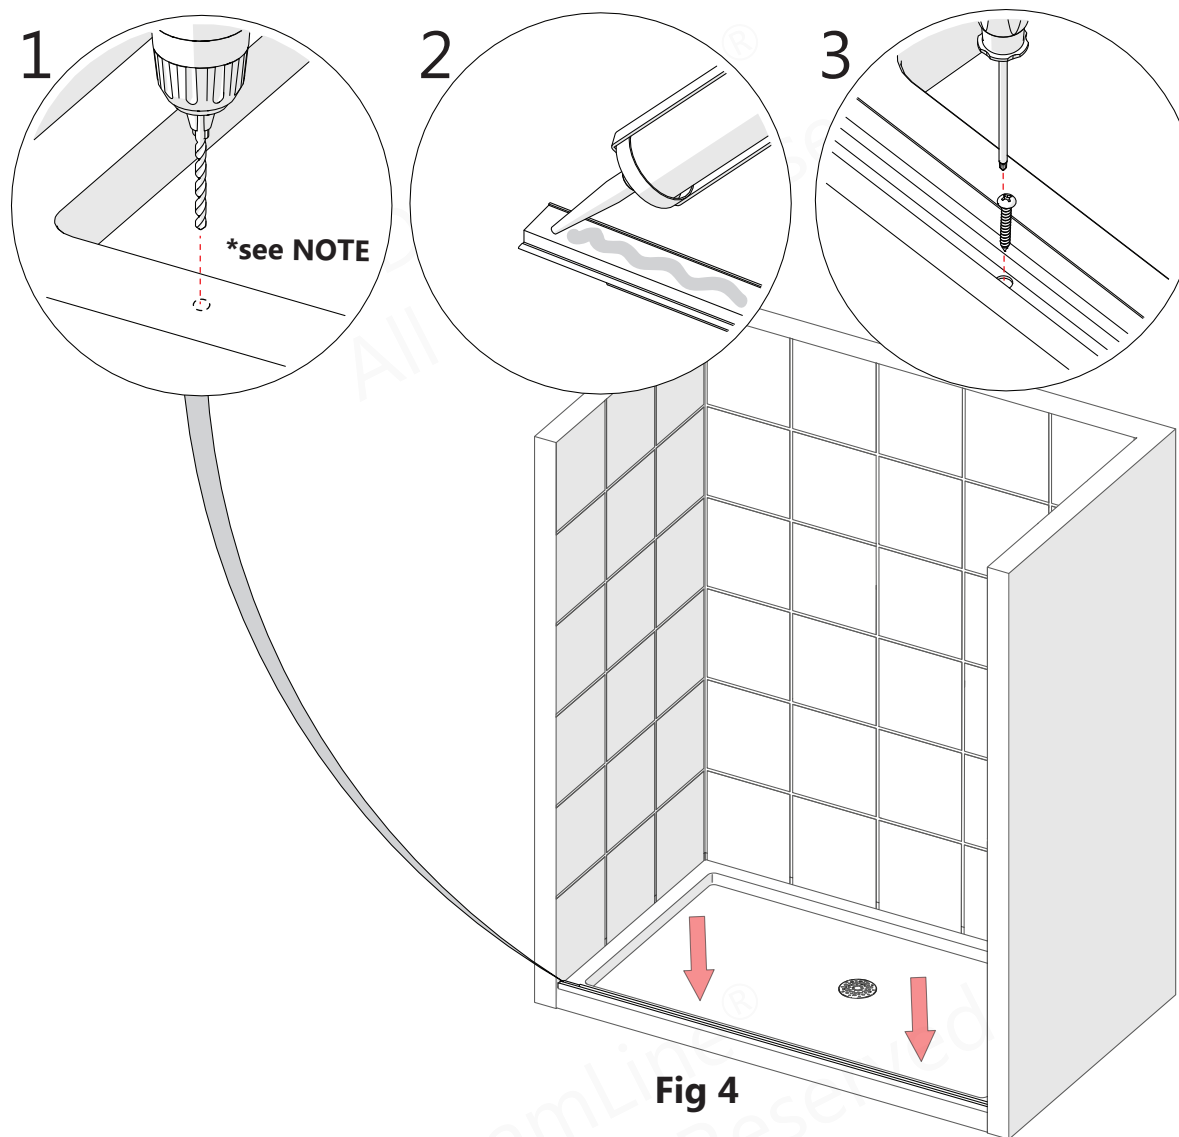


Fig 4


NOTE

- For installation into an **Acrylic Threshold**:
drill a $\text{Ø}1/8''$ (3mm) hole and use the **ST4.0 x 30mm Pan Head Screw (#16)**
- OR
- For installation into a **Tile Threshold**:
drill a $\text{Ø}3/16''$ (4mm) hole up to the stud and use the **ST4.0 x 40mm Pan Head Screw (#21)**

Parts Needed

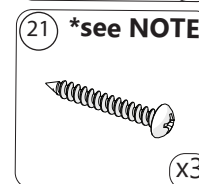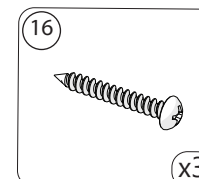

Tools Needed

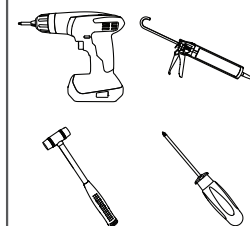

5



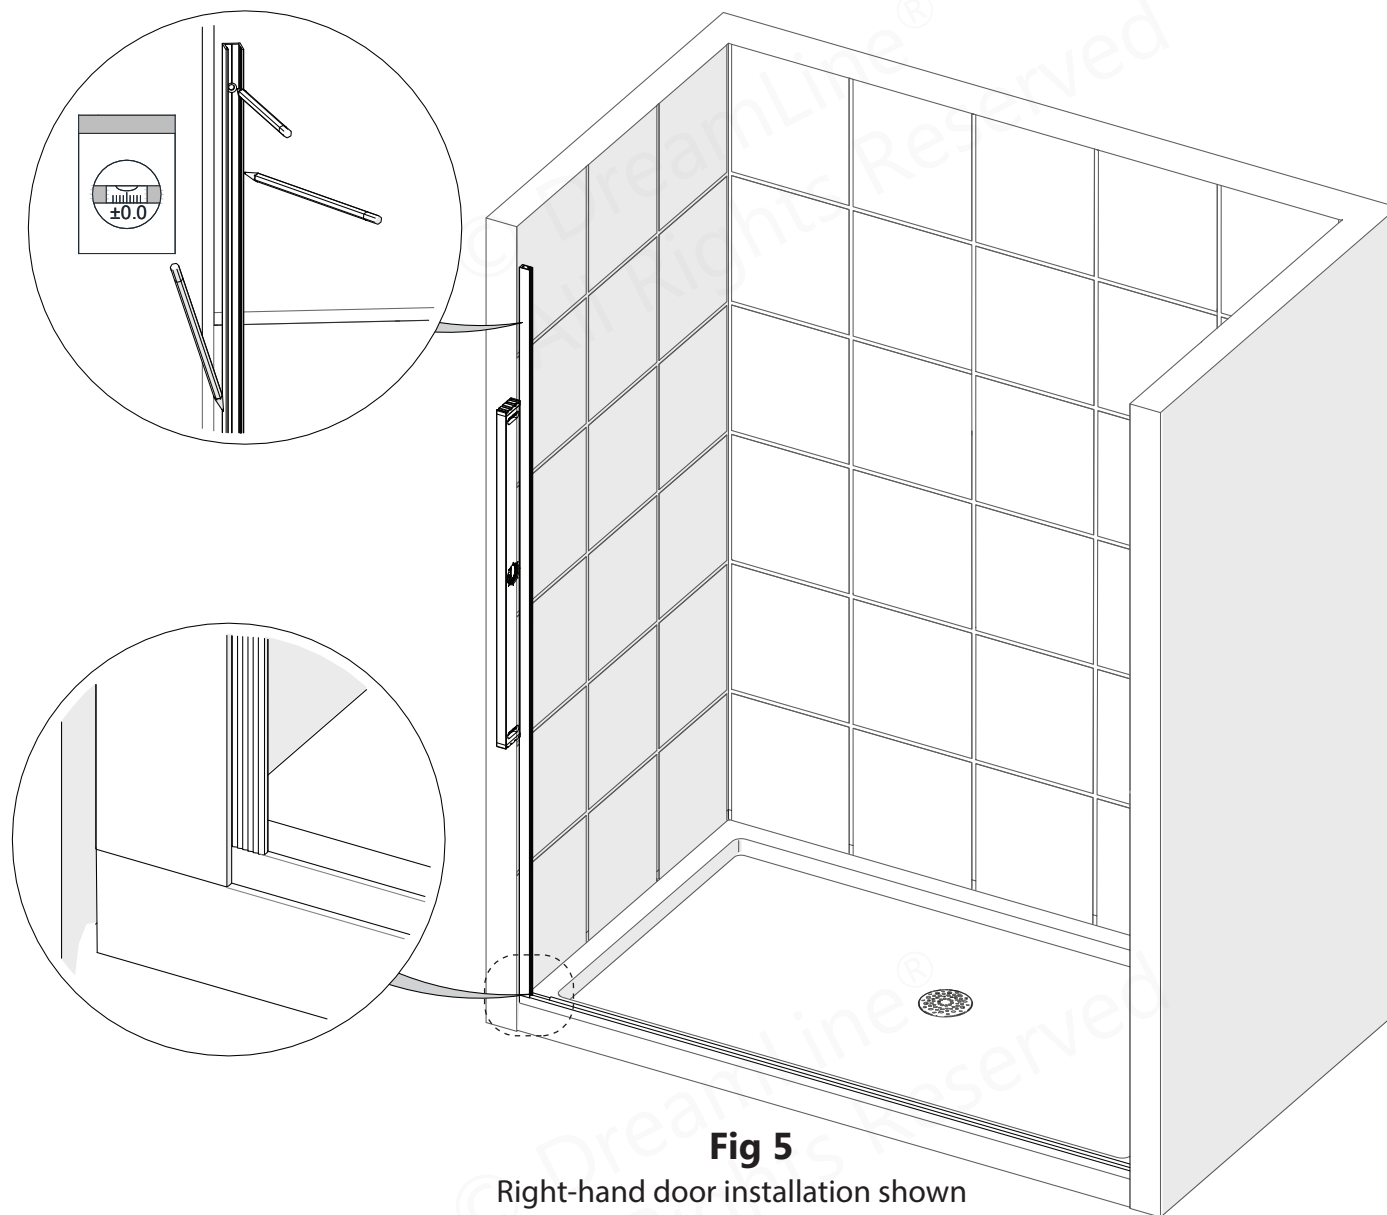


Fig 5
Right-hand door installation shown

Parts Needed

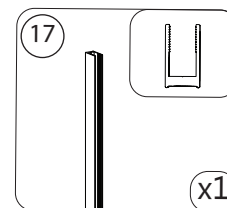

Tools Needed

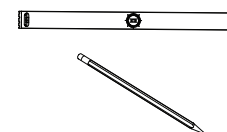

6








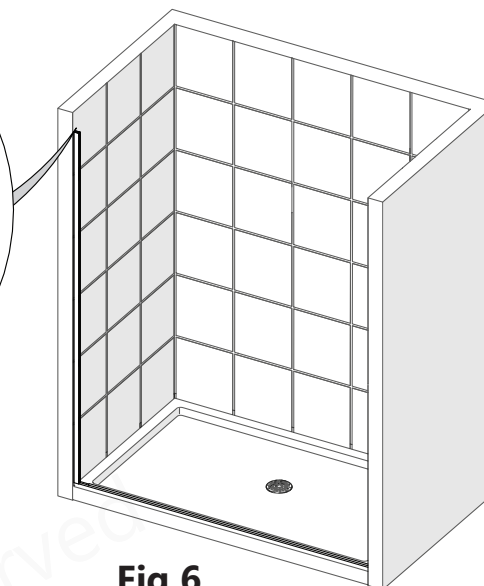


Fig 6

NOTE

- **If a stud is present behind the wall:**
drill a Ø3/16" (4mm) hole and use the **ST4.2 x 40mm Countersunk Screws (#07)**
- OR
- **If no stud is present behind the wall:**
drill a Ø5/16" (7mm) hole and insert the **Wall Anchors (#06)**
and use the **ST4.2 x 40mm Countersunk Screws (#07)**.

Parts Needed

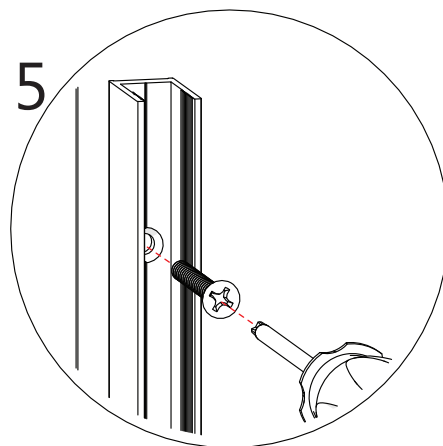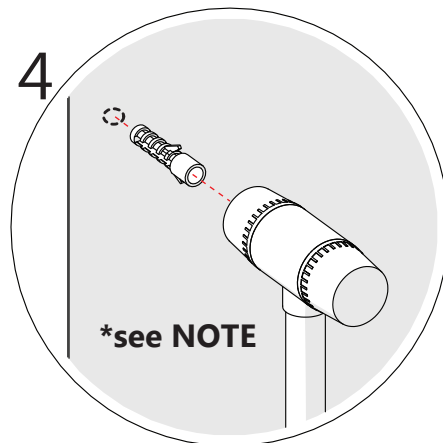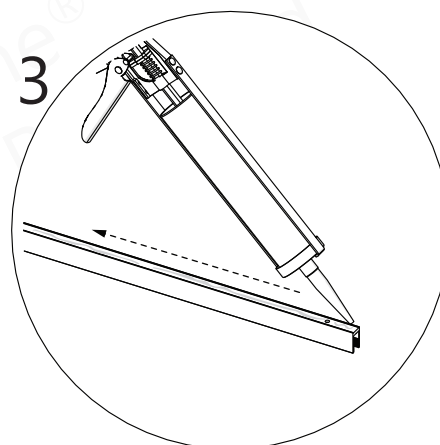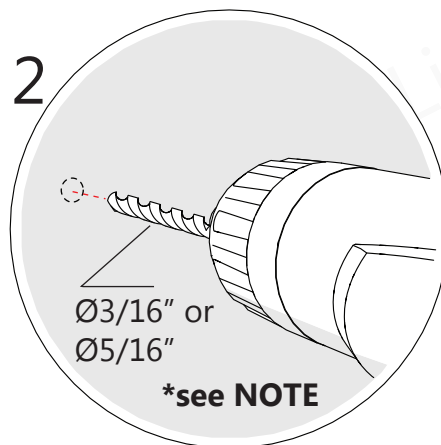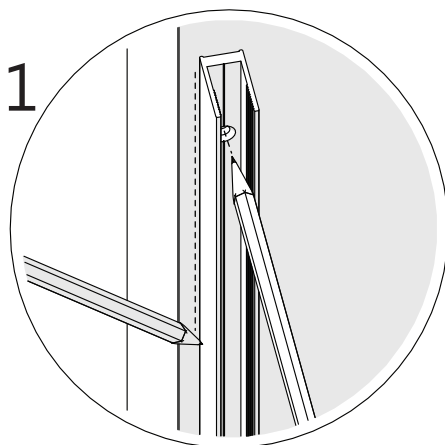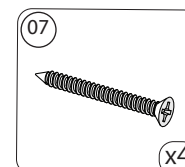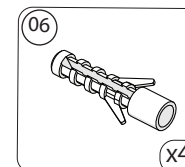


Tools Needed



7

SafeStop™ Bumper Installation

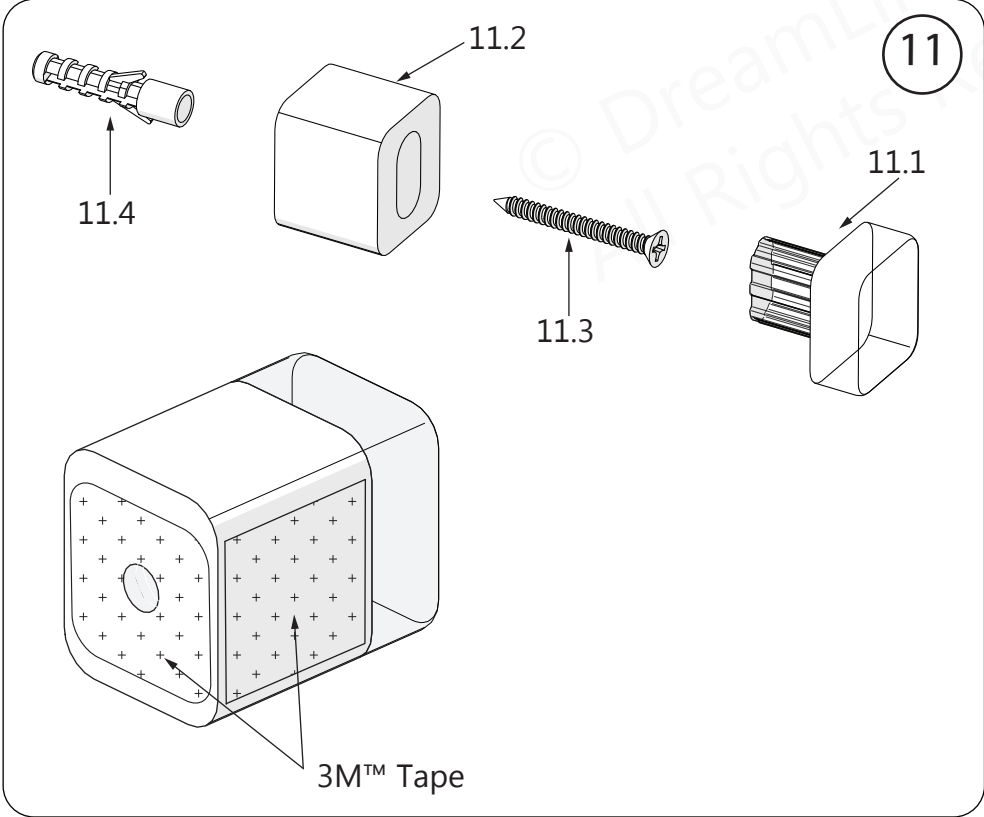

Item	Item Description	Quantity
11.1	Bumper Insert	1pc
11.2	Bumper Base	1pc
11.3	ST4.2 x 40mm Countersunk Screw	1pc
11.4	Wall Anchor	1pc




The surfaces need to be clean and free of construction debris before installing the SafeStop™ Bumper(s) (#11).
Clean the area with an alcohol swab before installation.




The top SafeStop™ Bumper must be installed with a screw.
The bottom SafeStop™ Bumper can be installed with either a screw or using the 3M™ Tape only.


Parts Needed

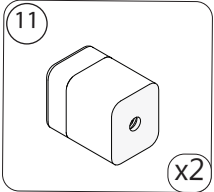

7

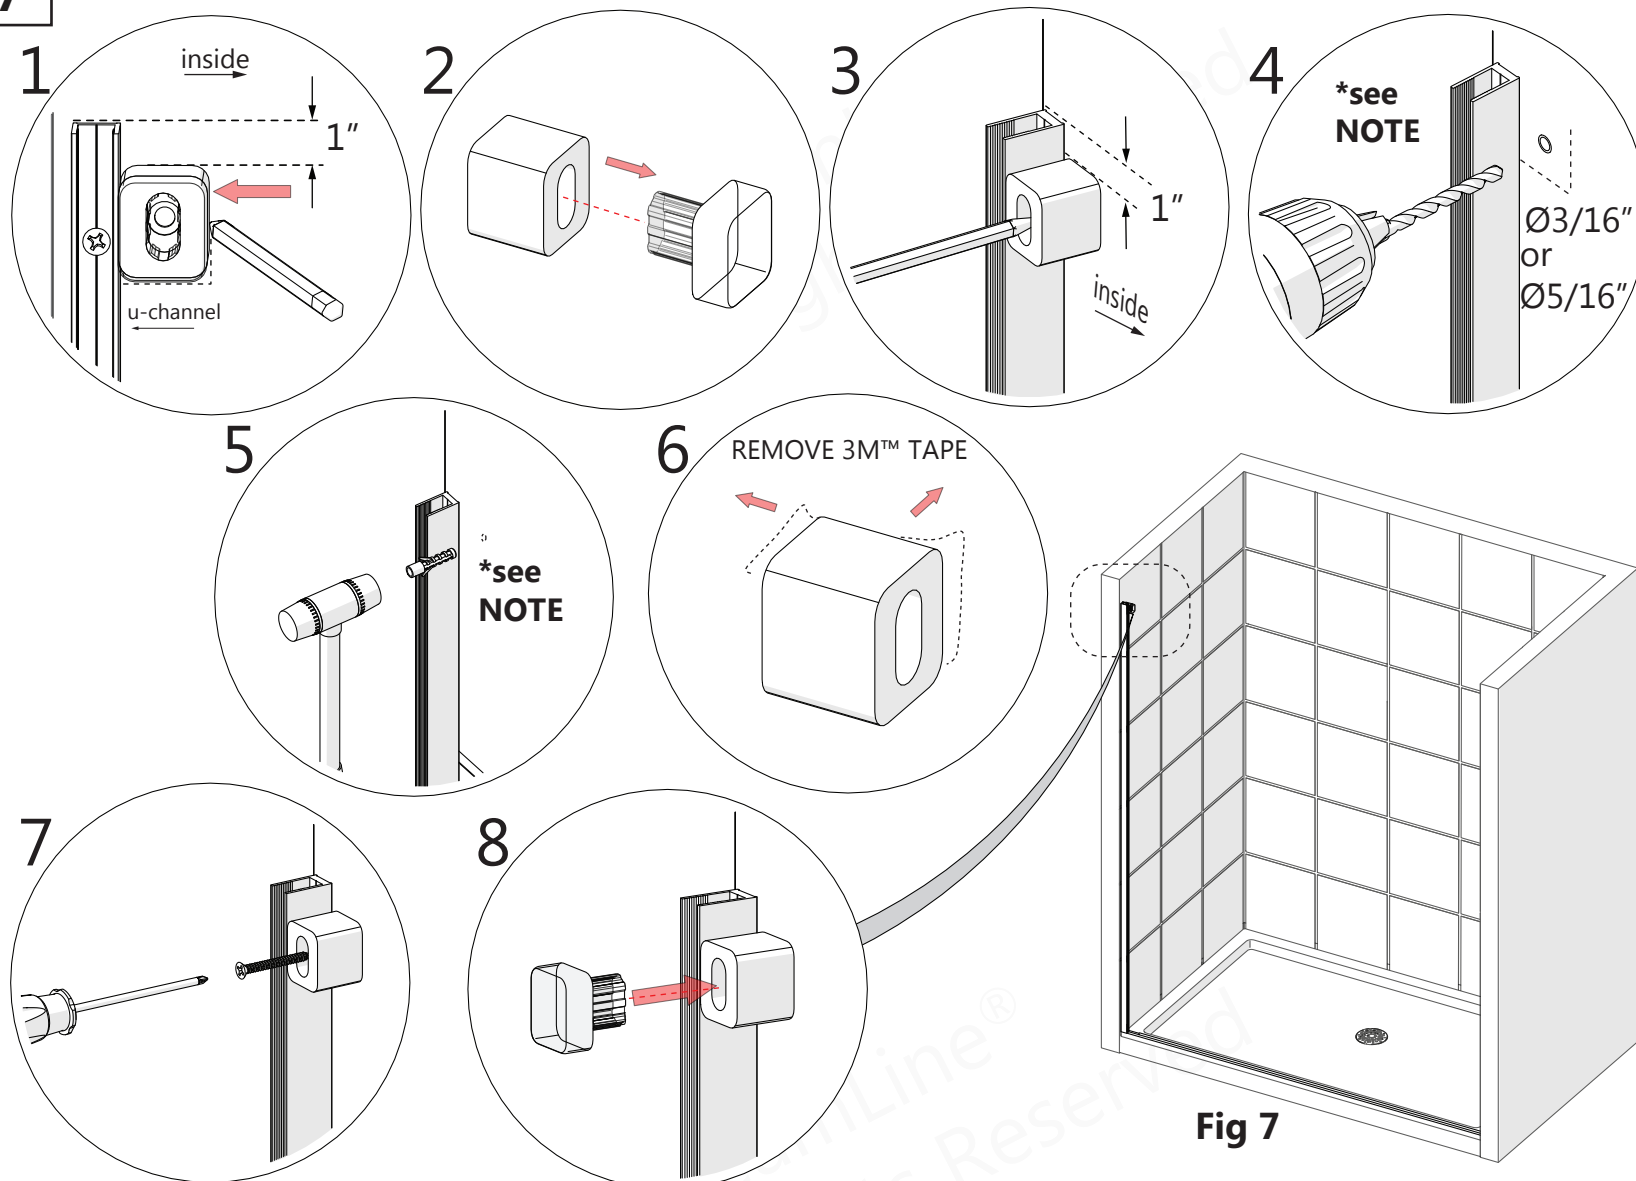

Parts Needed

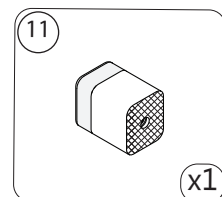

Tools Needed

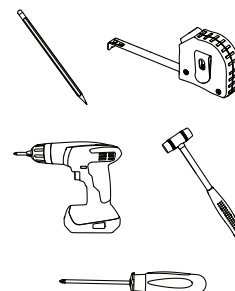


Fig 7

NOTE

▪ **If a stud is present behind the wall:**
drill a $\text{Ø}3/16''$ (4mm) hole up to the stud and
use the **ST4.2 x 40mm Countersunk Screw (#07)**

OR

▪ **If no stud is present behind the wall:**
drill a $\text{Ø}5/16''$ (7mm) hole and insert the **Wall Anchors (#06)**
and use the **ST4.2 x 40mm Countersunk Screw (#07)**



Extender driver bit recommended
for screw installation.

8


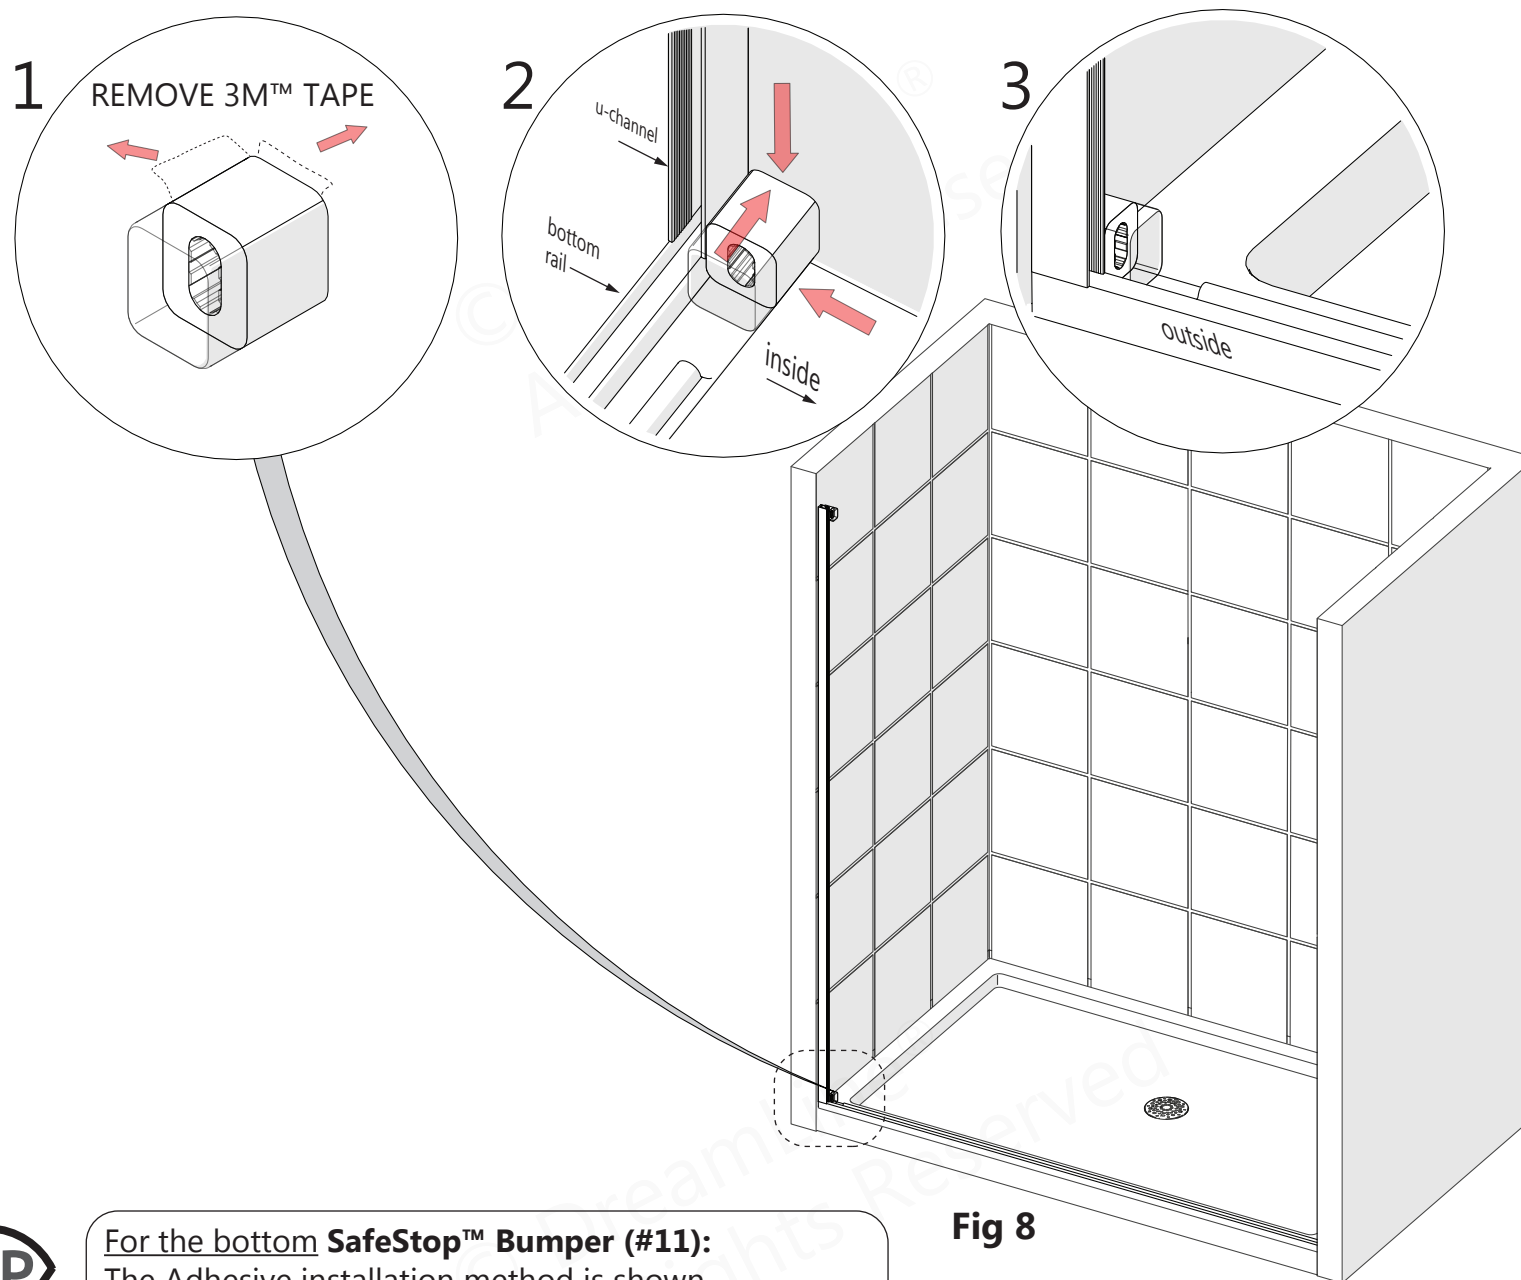



Fig 8

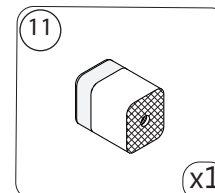


For the bottom **SafeStop™ Bumper (#11)**:
The Adhesive installation method is shown.
Attaching the bottom **SafeStop™ Bumper** with a screw
is optional. Follow the procedure shown in **Step 7** for
installing the bottom **SafeStop™ Bumper (#11)** with
the **ST4.2 x 40mm Countersunk Screw (#07)**.


Parts Needed

9


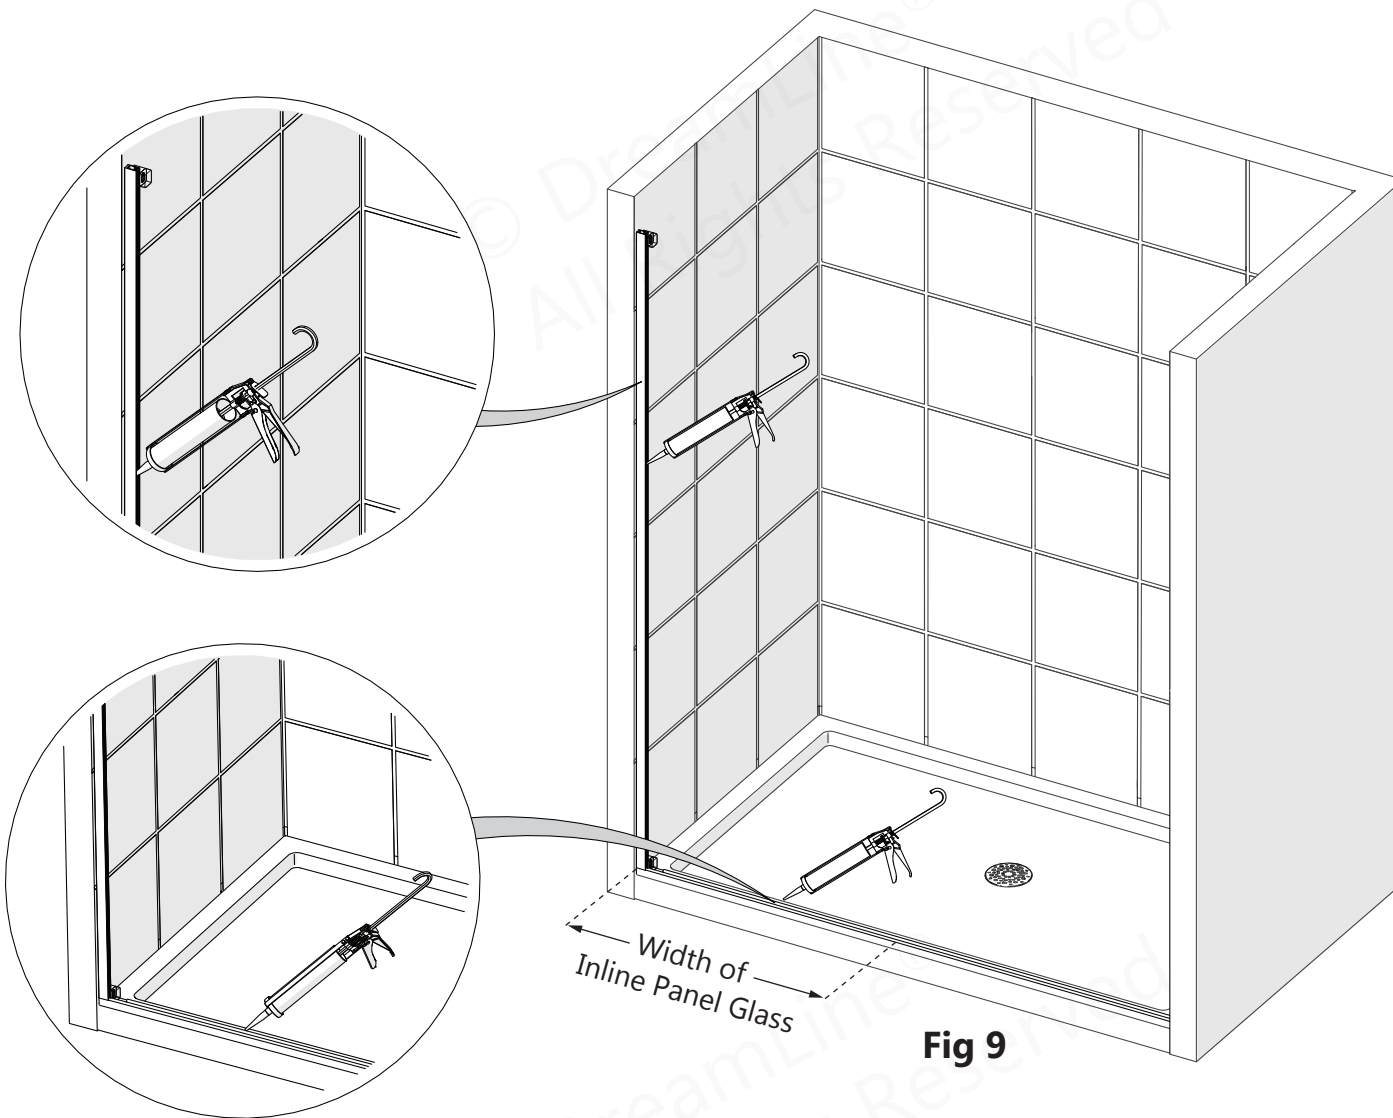
**NOTE**


Apply 100% silicone caulk into the vertical **U-Channel (#17)** and into the **Bottom Guide Rail (#03)**.

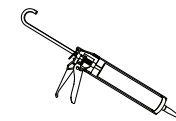Tools Needed

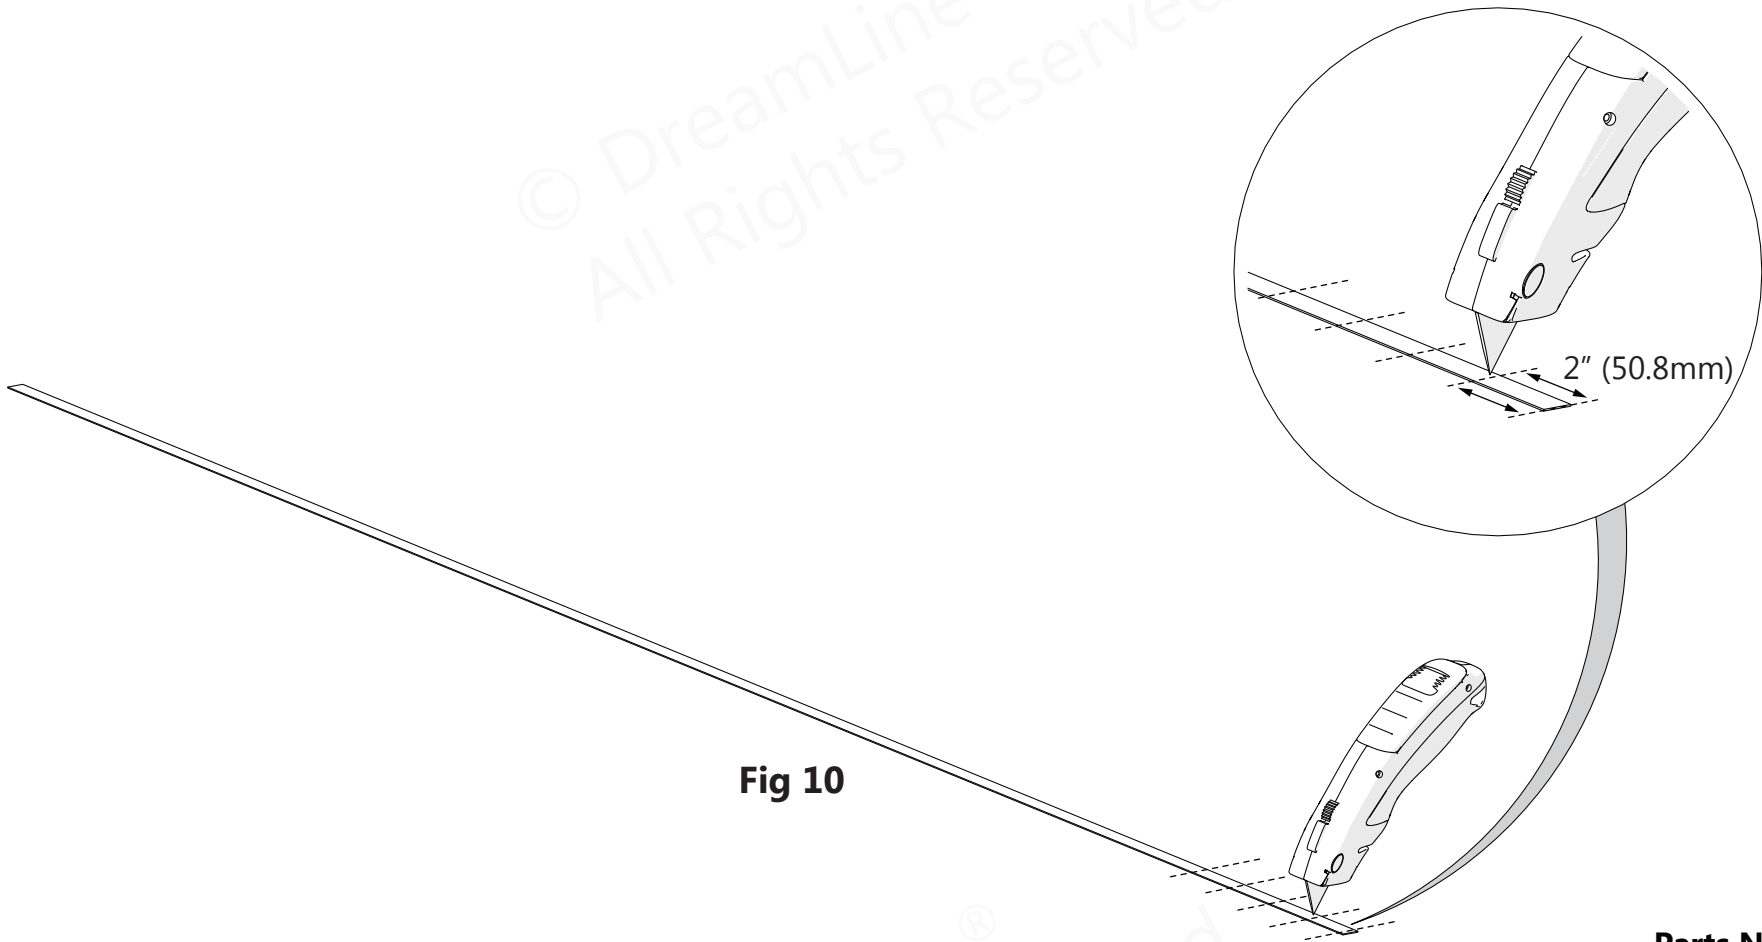
10

Cut several 2" - 3" pieces of the PVC Glass Spacer 0.5mm (#14).
DO NOT install one long continuous piece into the Bottom Guide Rail (#03).

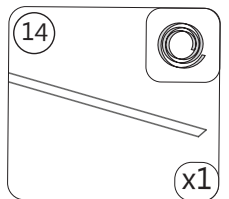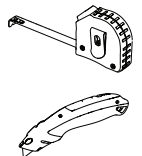Parts Needed**Tools Needed**

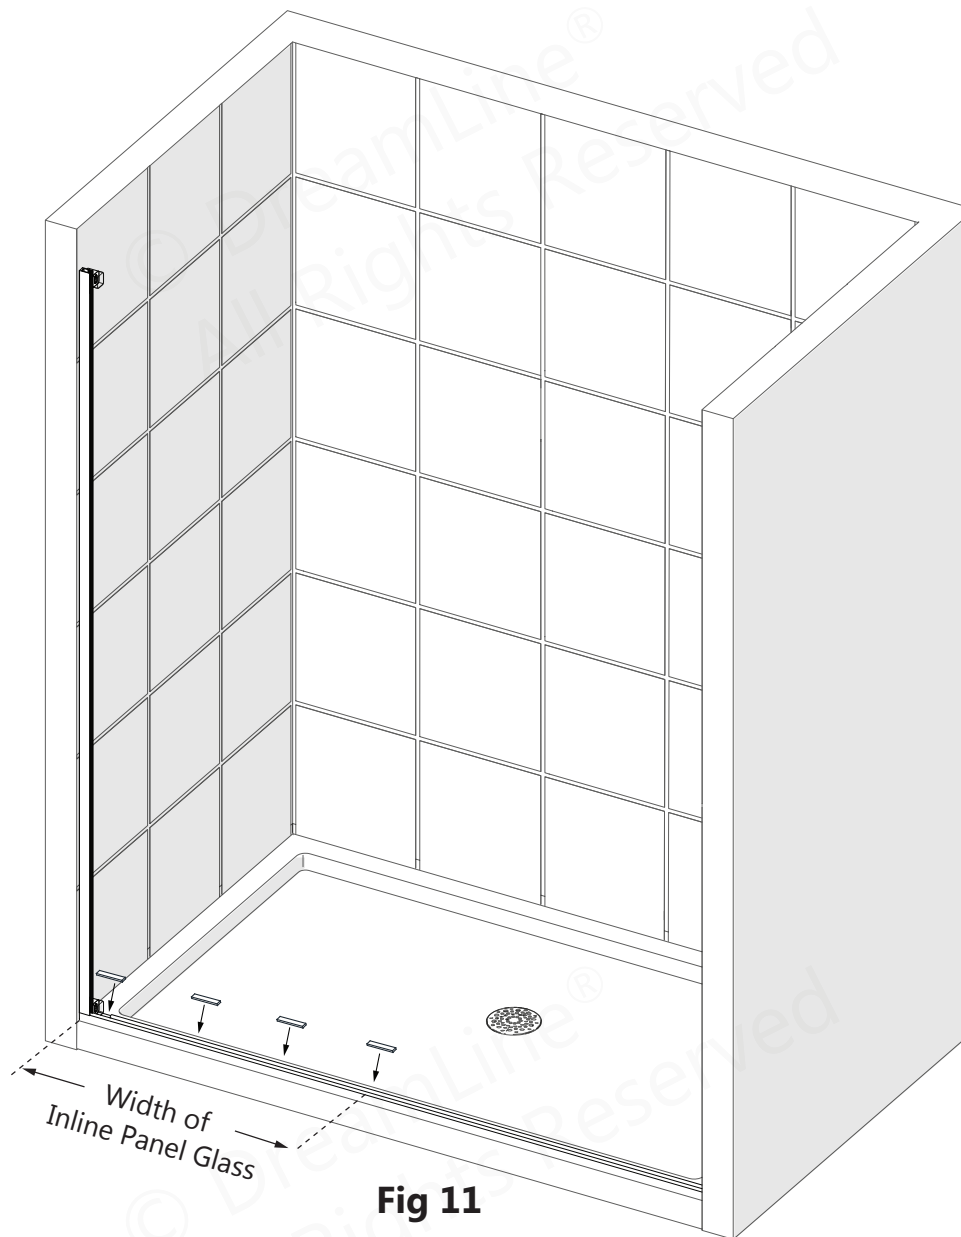11



Save the remaining 2" pieces of the **PVC Glass Spacer 0.5mm (#14)** for later use.

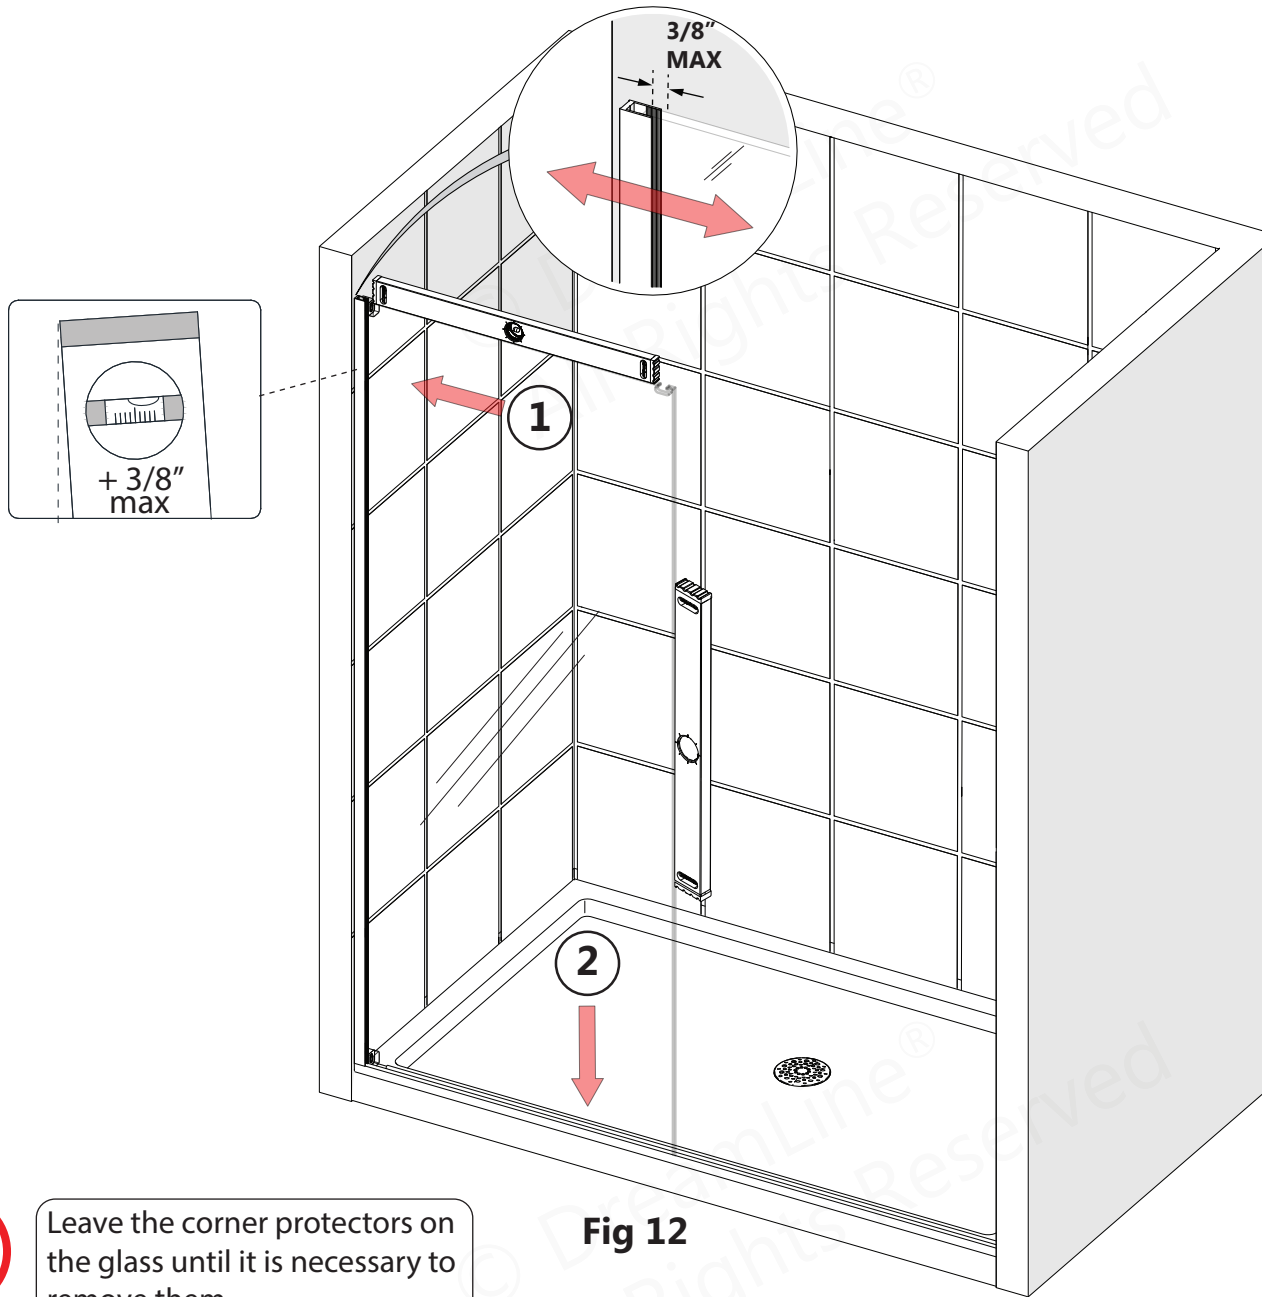12**Fig 12****NOTE**

Leave the corner protectors on the glass until it is necessary to remove them.


NOTE

The panel-side **U-Channel (#17)** will allow for up to 3/8" of out-of-plumb adjustment. Use a level to confirm that the **Inline Panel Glass (#01)** is installed plumb and level.

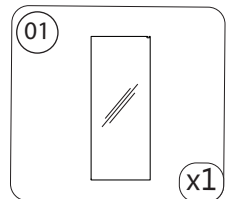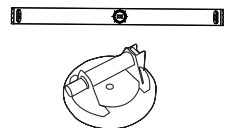Parts Needed**Tools Needed**

13

L-Bar™ Support Bracket Installation

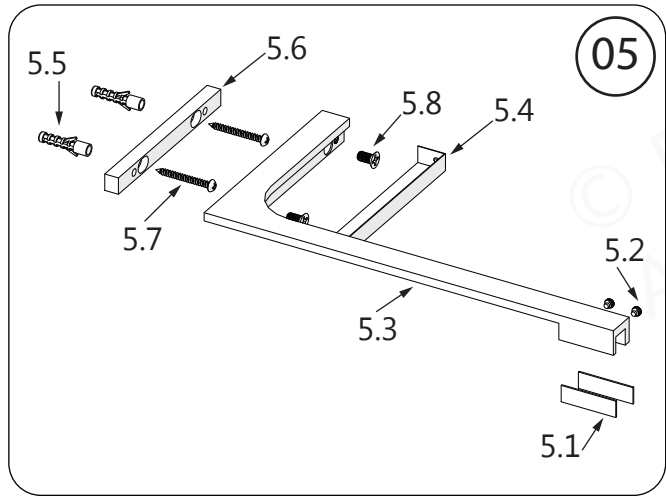

Left-handed L-Bar™ Support Bracket shown

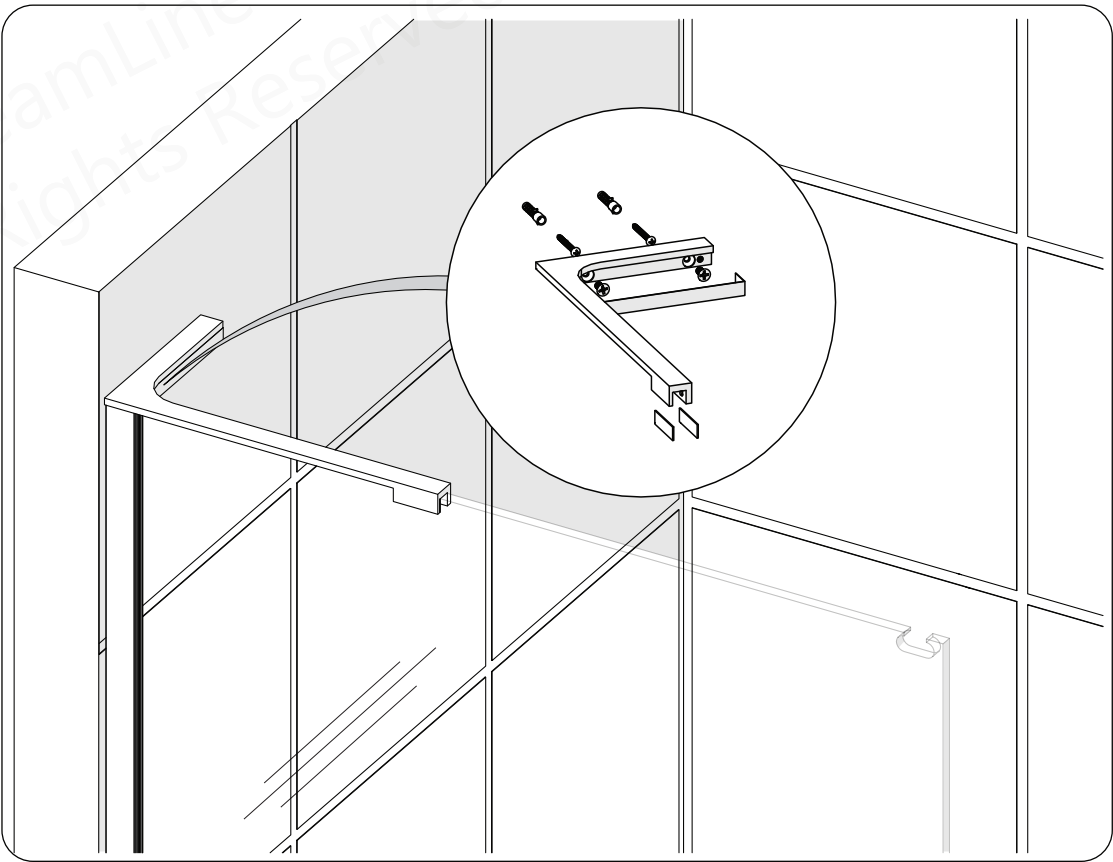



Fig 13 Left-hand L-Bar™ Support Bracket shown

Item	Item Description	Quantity
5.1	Rubber Pad	2pcs
5.2	M5 Rubber Tip Set Screw	2pcs
5.3	L-Bar™ Bracket	1pc
5.4	L-Bar™ Bracket Decorative Cover	1pc
5.5	Wall Anchor	2pcs
5.6	L-Bar™ Bracket Wall Plate	1pc
5.7	Truss Head Screw ST4.2×40	2pcs
5.8	M5×14.5 Screw	2pcs



12" L-Bar™ for 48" model
18" L-Bar™ for 60" model

Parts Needed

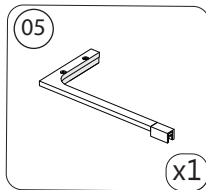



14

Fig 14 Left-hand L-Bar™ Support Bracket shown



Leave the L-Bar™ decorative cover attached when marking the L-Bar position on the wall to allow space to re-attach the cover plate after installation.

Tools Needed

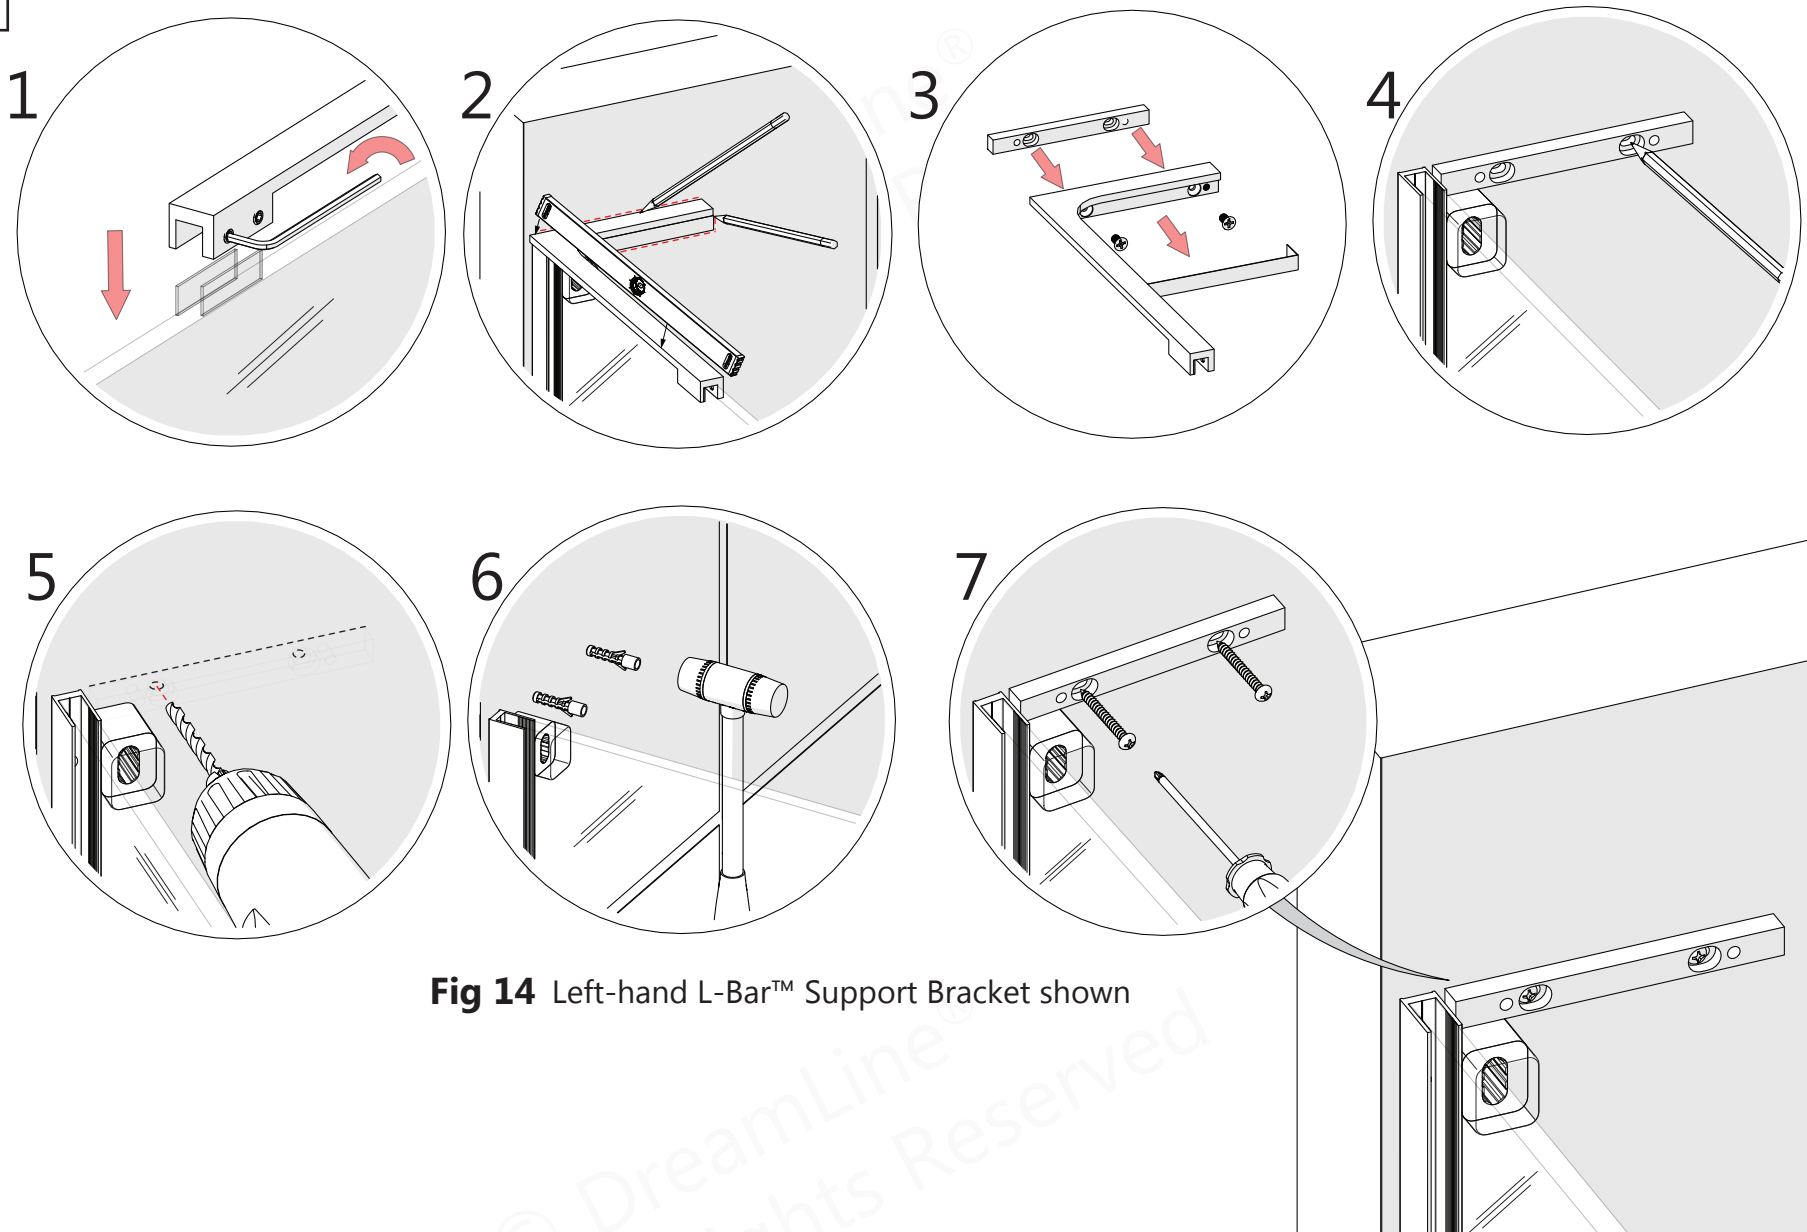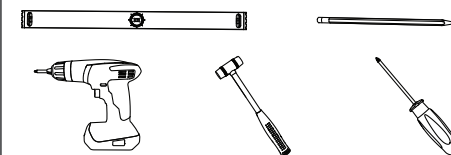


15

Fig 15 Left-hand L-Bar™ Support Bracket shown

NOTE



Confirm the **Inline Panel Glass (#01)** is level and plumb with the attached **L-Bar™ (#05)** by adjusting the angle (+/-) 3/16". Firmly tighten the set screws before re-attaching the Decorative Cover.

Tools Needed

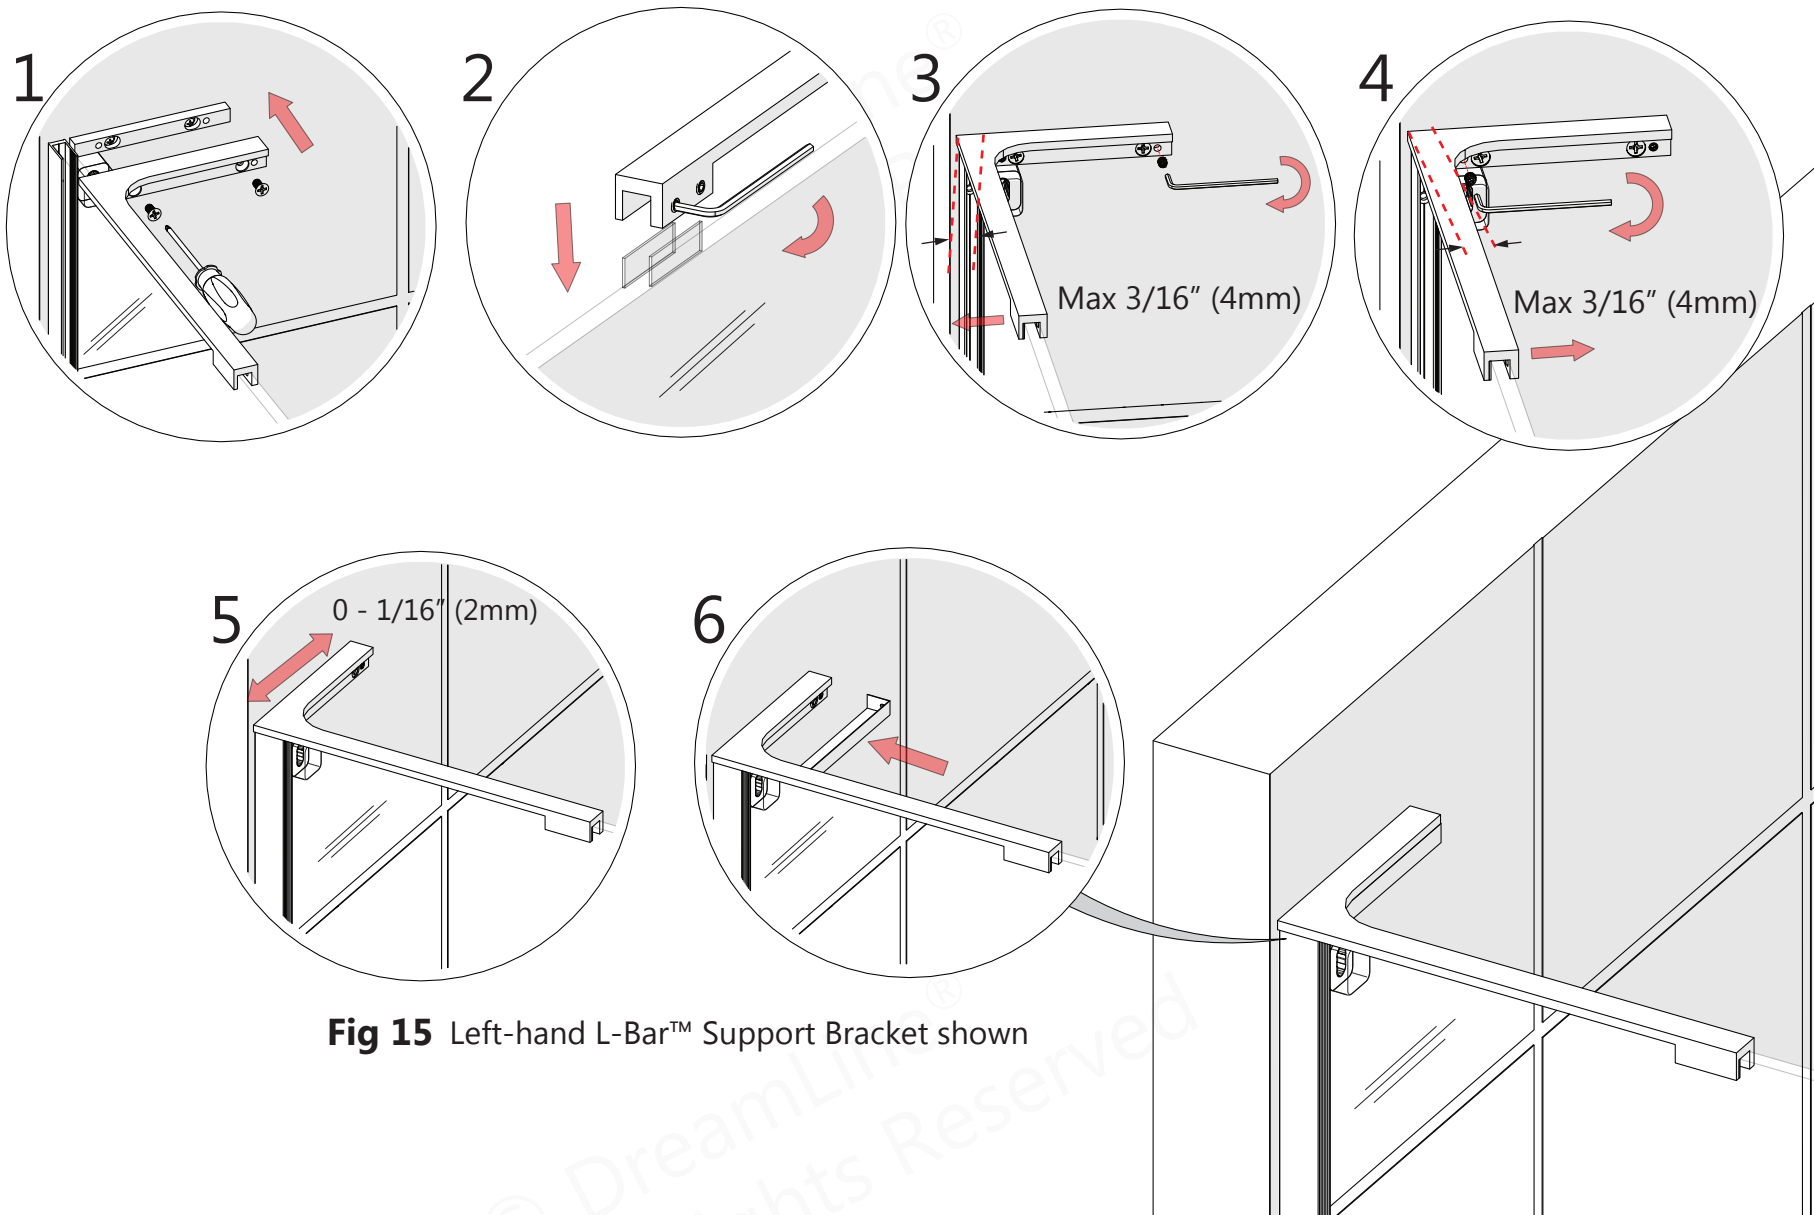

16





Trim **Bottom Channel Insert (#12)** to:
(W) (-) 1/16"

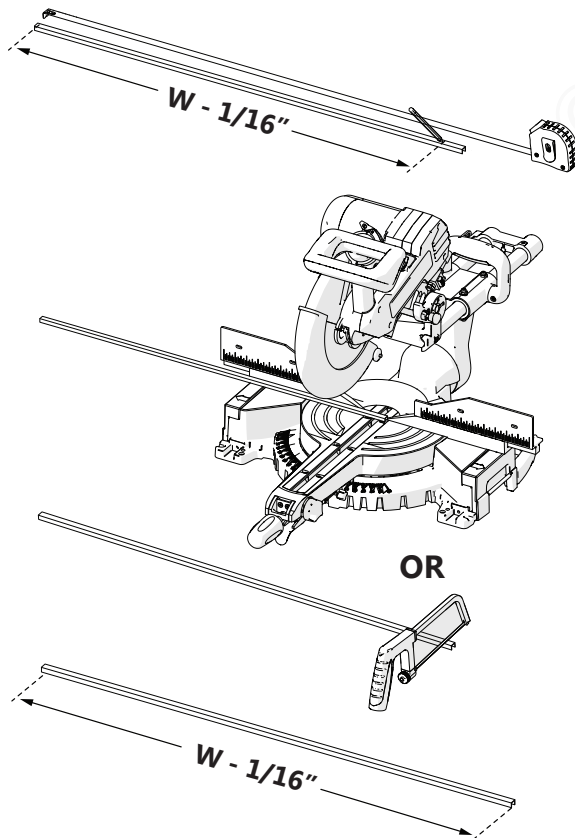**Fig 16a**

Use a metal file to
deburr the cut end




To prevent glass-to-metal contact, insert a small piece (1/4" +/-) of the leftover **PVC Glass Spacer 0.5mm (#14)** between the end of the **Bottom Channel Insert (#12)** and the **Inline Panel Glass (#01)** as shown in **Fig 16b**.

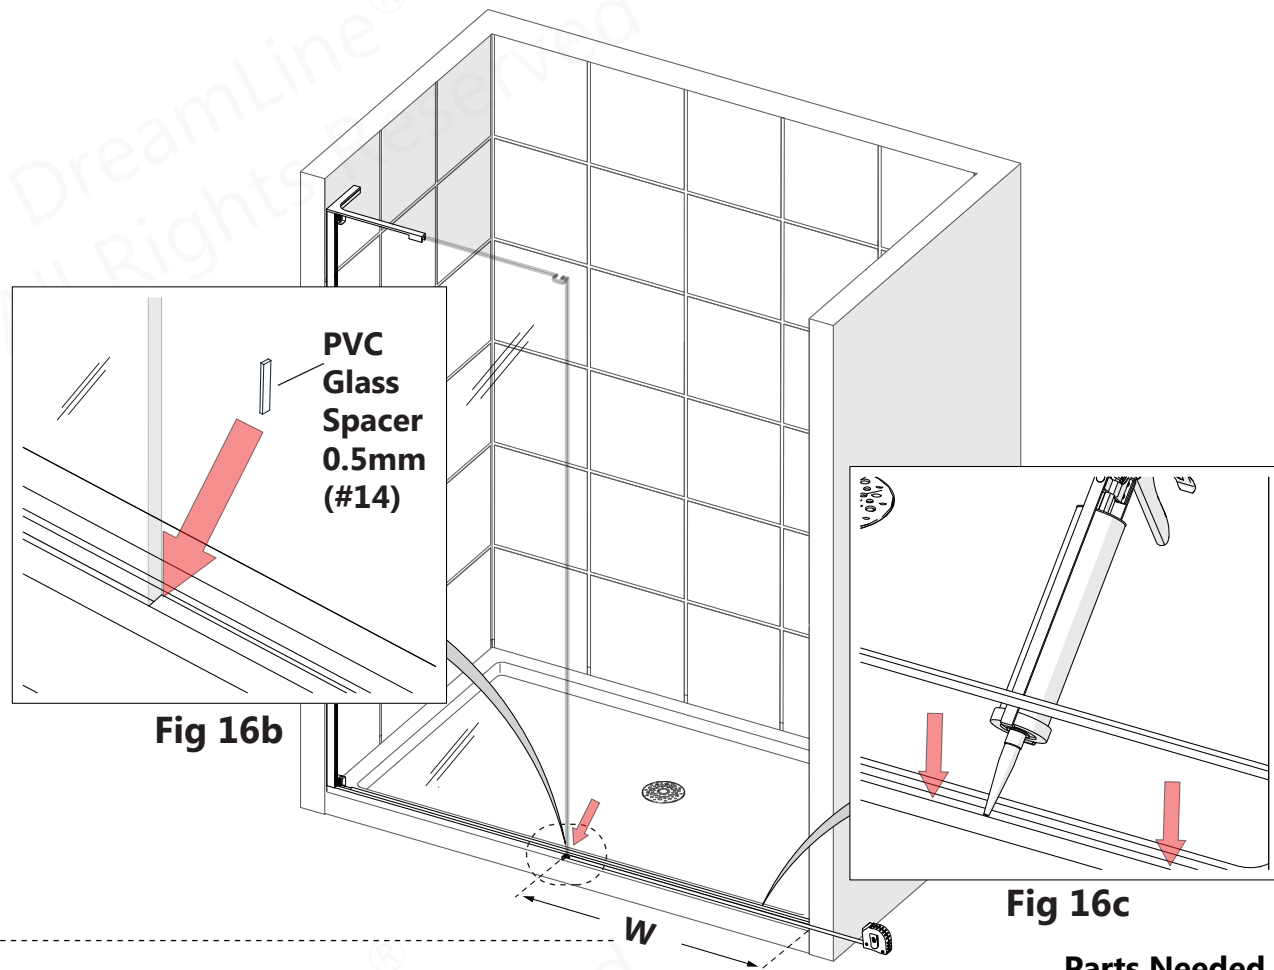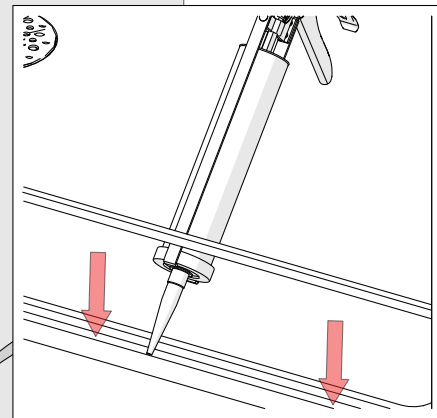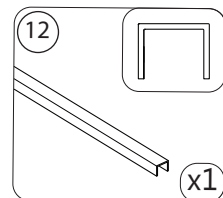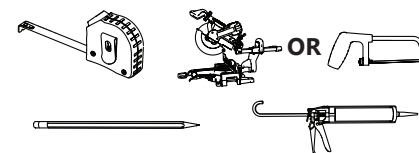**Fig 16b****Fig 16c****Parts Needed****Tools Needed**

17


Bottom Roller Assembly Installation

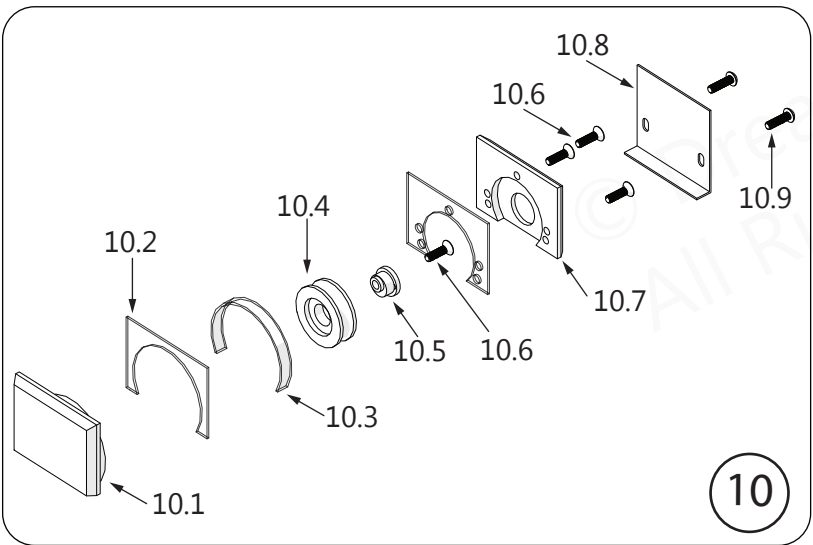


NOTE

DO NOT completely disassemble the **Bottom Roller Assembly (#10)** during installation.

Item	Item Description	Quantity
10.1	Roller Assembly body (exterior)	1pc
10.2	Rubber pad 1	2pcs
10.3	Rubber pad 2	1pc
10.4	Bearing	1pc
10.5	Adjustment Disk	1pc
10.6	M5x14 Allen Bolt	4pcs
10.7	Roller Assembly Cover Plate	1pc
10.8	Roller Assembly Decorative Cover Plate	1pc
10.9	M5x16 Allen Bolt	2pcs

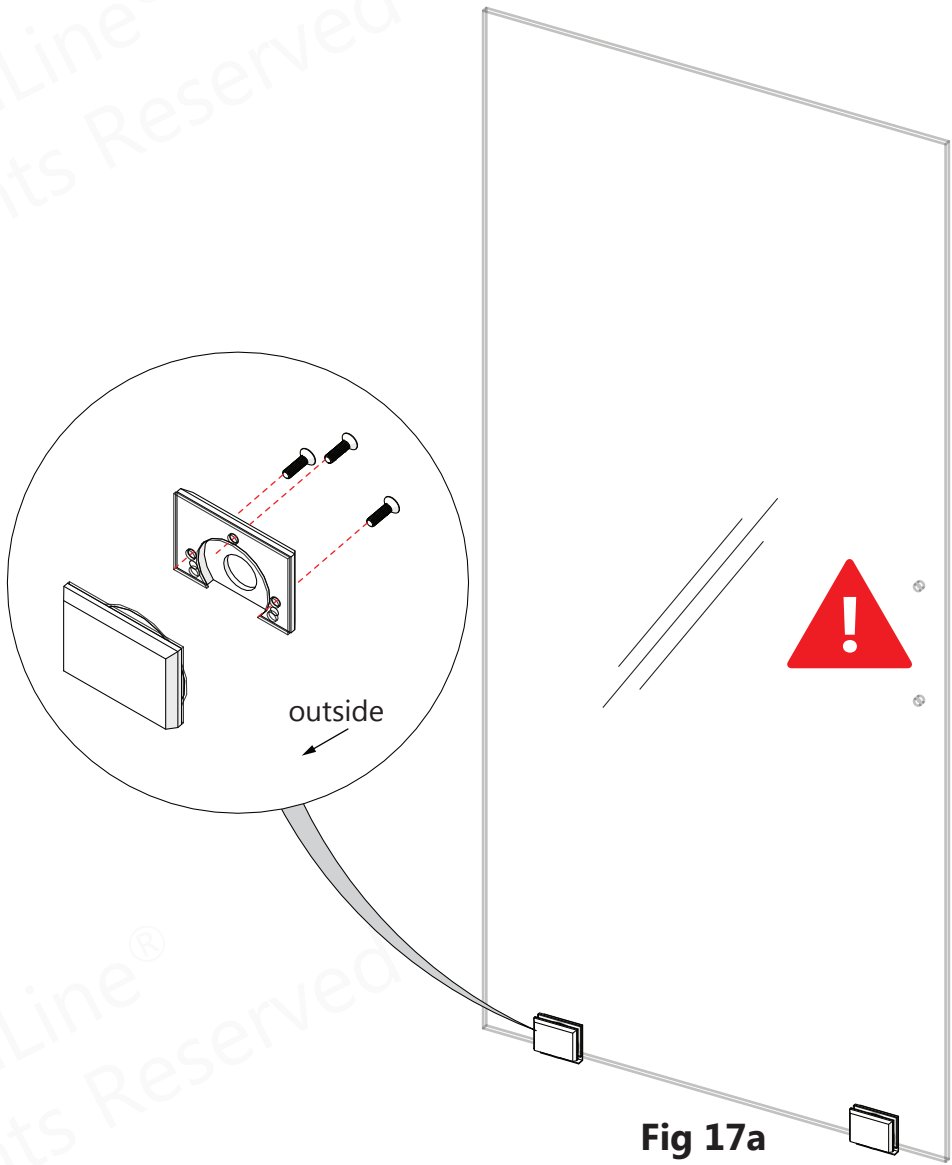


DO NOT install the handle onto the door glass until instructed. **DO NOT** attempt to lift the glass using the handle. Doing this could result in damage to the glass and/or serious personal injury. Use a professional grade glass suction cup and an assistant.

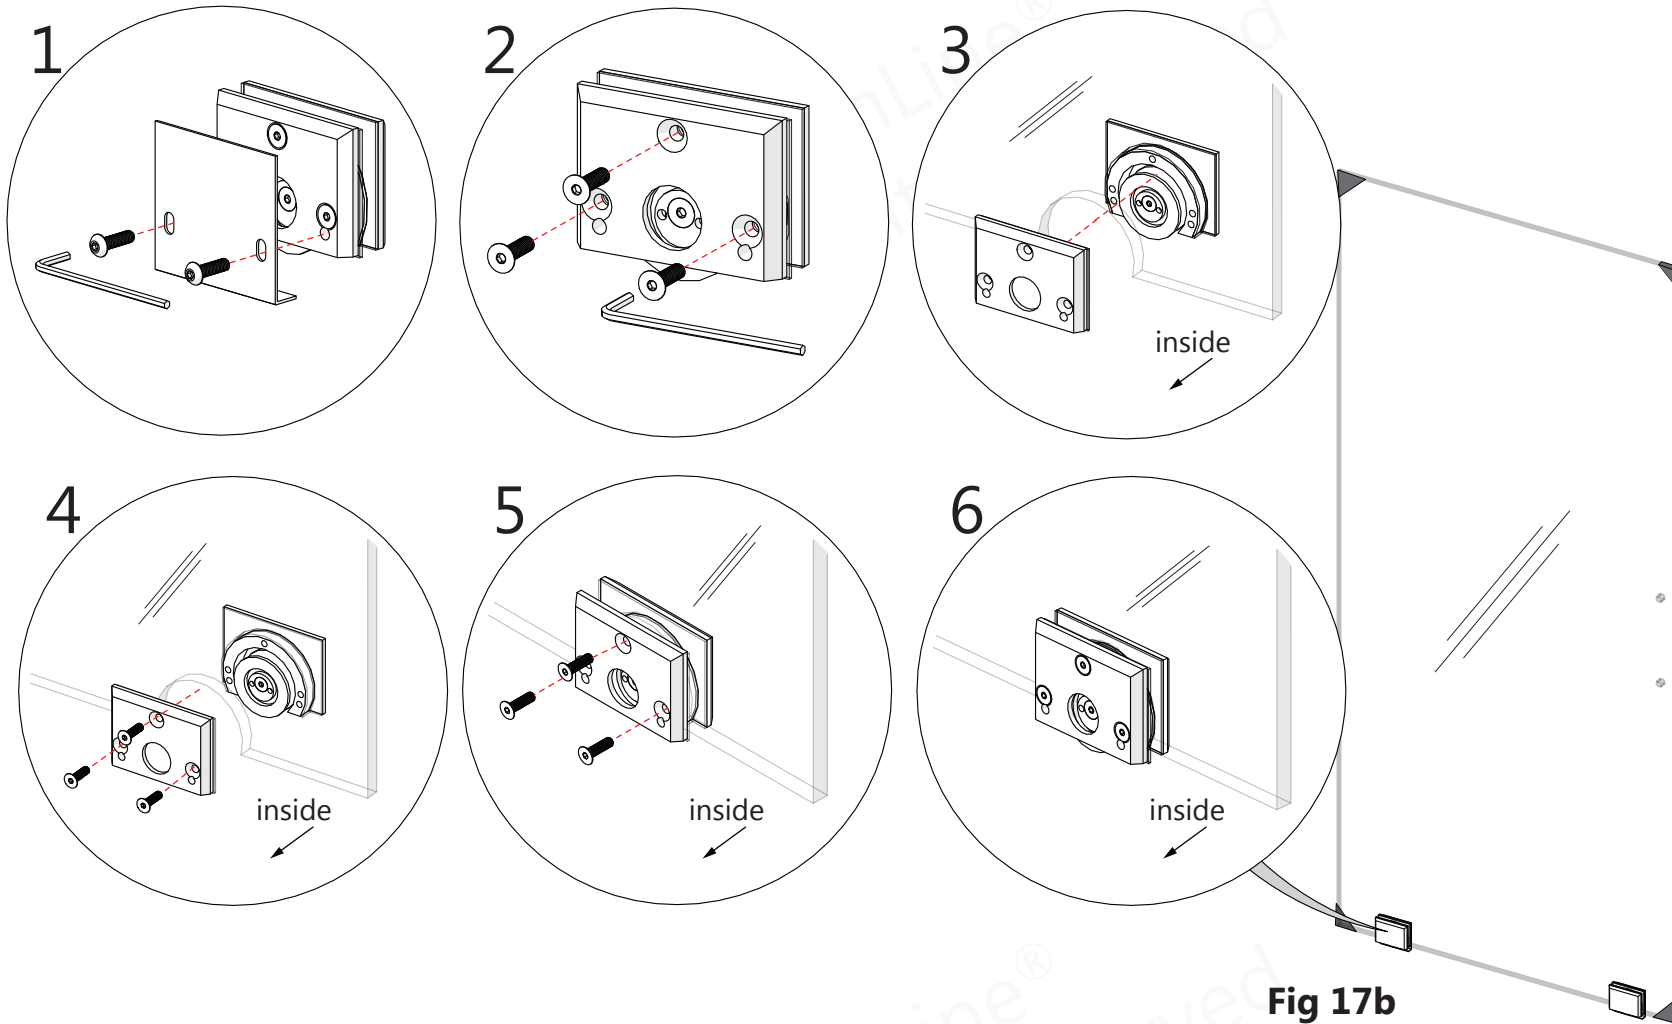17


Leave the corner protectors on the door glass until it is necessary to remove them.



Make certain that the bolts are facing inside the shower and the **Bottom Roller Assemblies (#10)** are installed squarely onto the glass as shown in **Fig 17c**.


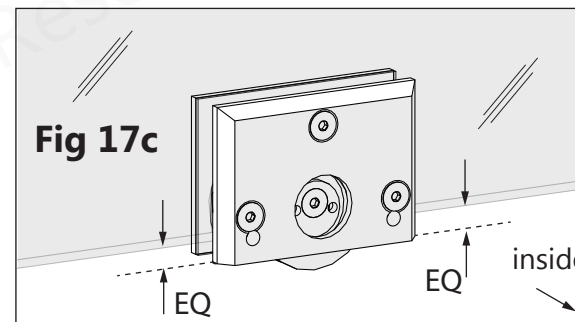


Parts Needed

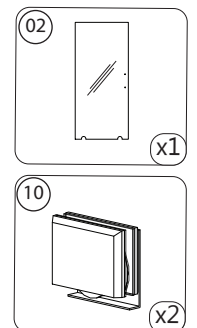


18

For the next steps, have an assistant available to hold the **Door Glass (#02)** in position during the installation of the **Guide Block Assembly (#09)**.

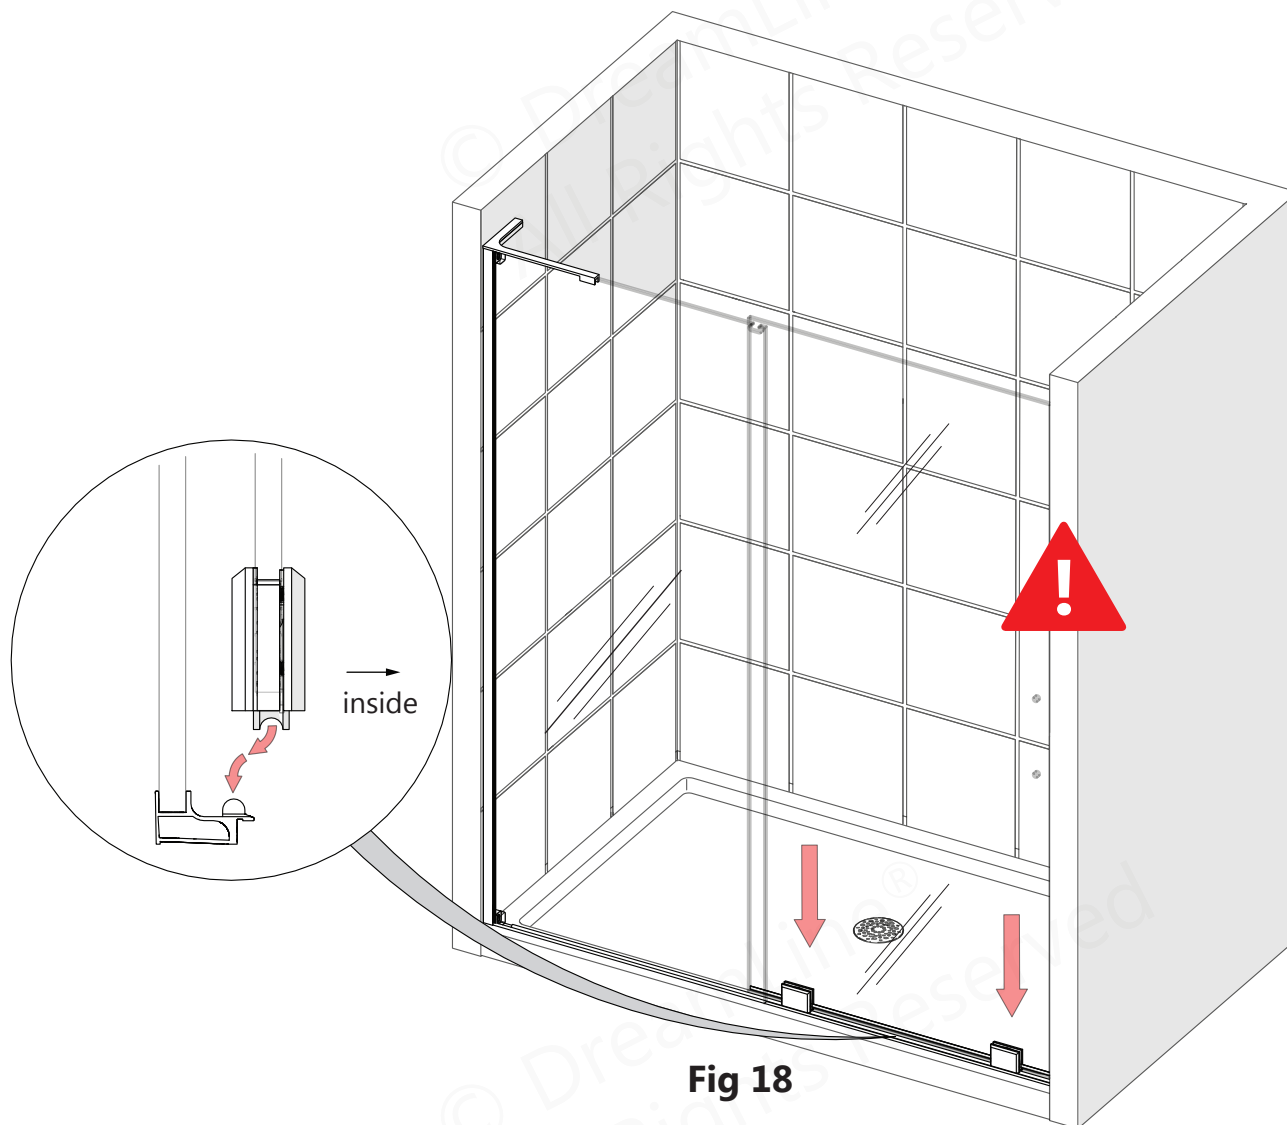**Fig 18**

Use caution to prevent the door glass from making contact with the installed Inline Panel Glass or the wall during installation.

Tools Needed

19

Guide Block Installation



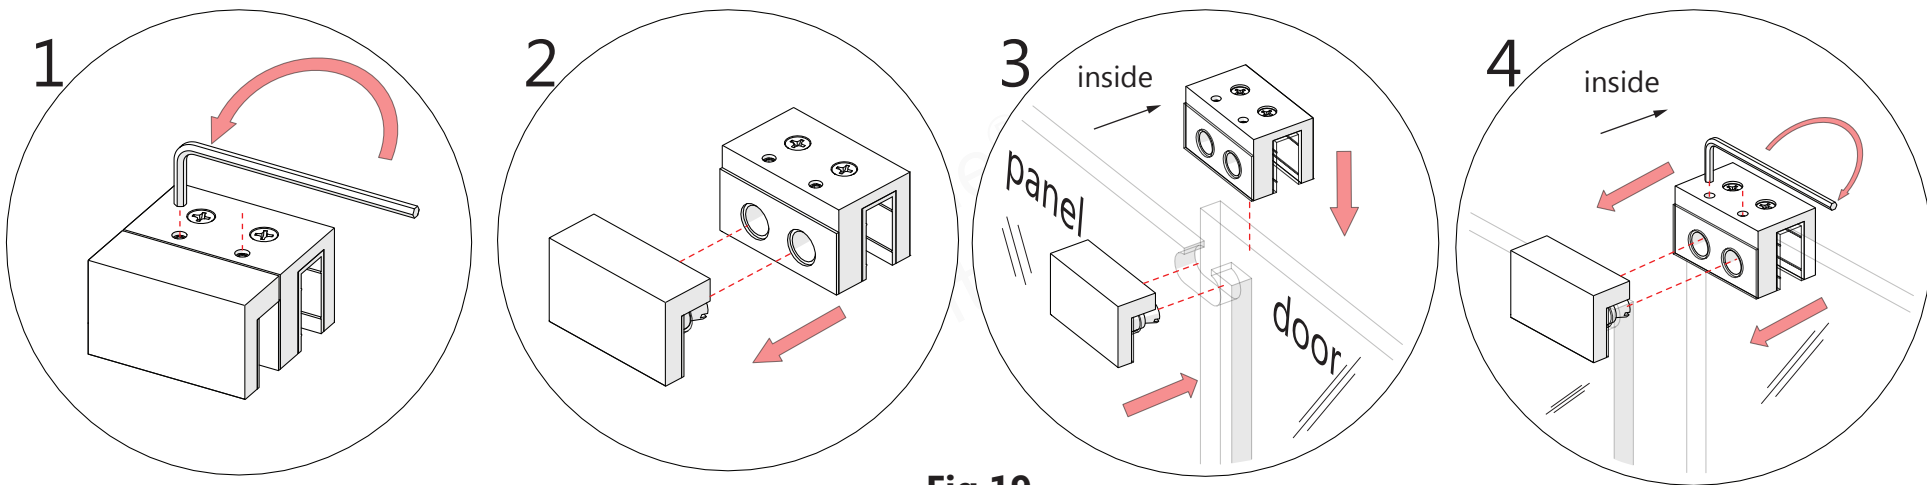


Fig 19

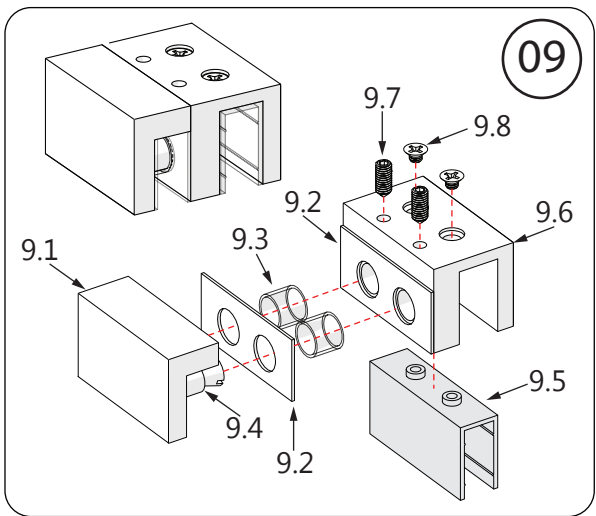


Item	Item Description	Quantity
9.1	Exterior Slider Bracket (for panel)	1pc
9.2	Gasket	2pcs
9.3	Rubber Sleeve	2pcs
9.4	Shaft	2pcs
9.5	Sliding Pad	1pc
9.6	Sliding Guide Block (for door)	1pc
9.7	M5x10 Set Screw	2pcs
9.8	M4x4 Flat Head Screw	2pcs

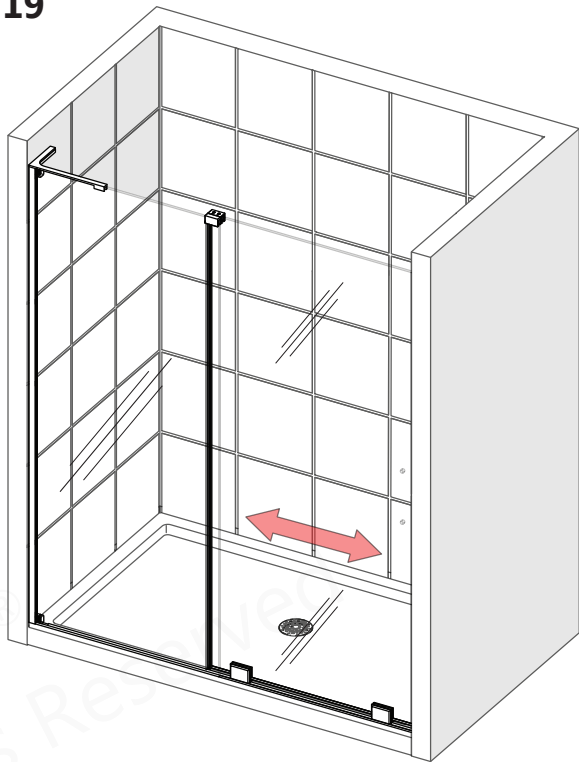

Use caution to prevent the unprotected edge of the door glass from making contact with the wall during installation.



Parts Needed

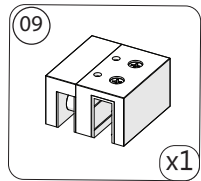

DO NOT completely disassemble the Guide Block Assembly (#09) during installation.

20

Re-Installing the Decorative Cover Plate

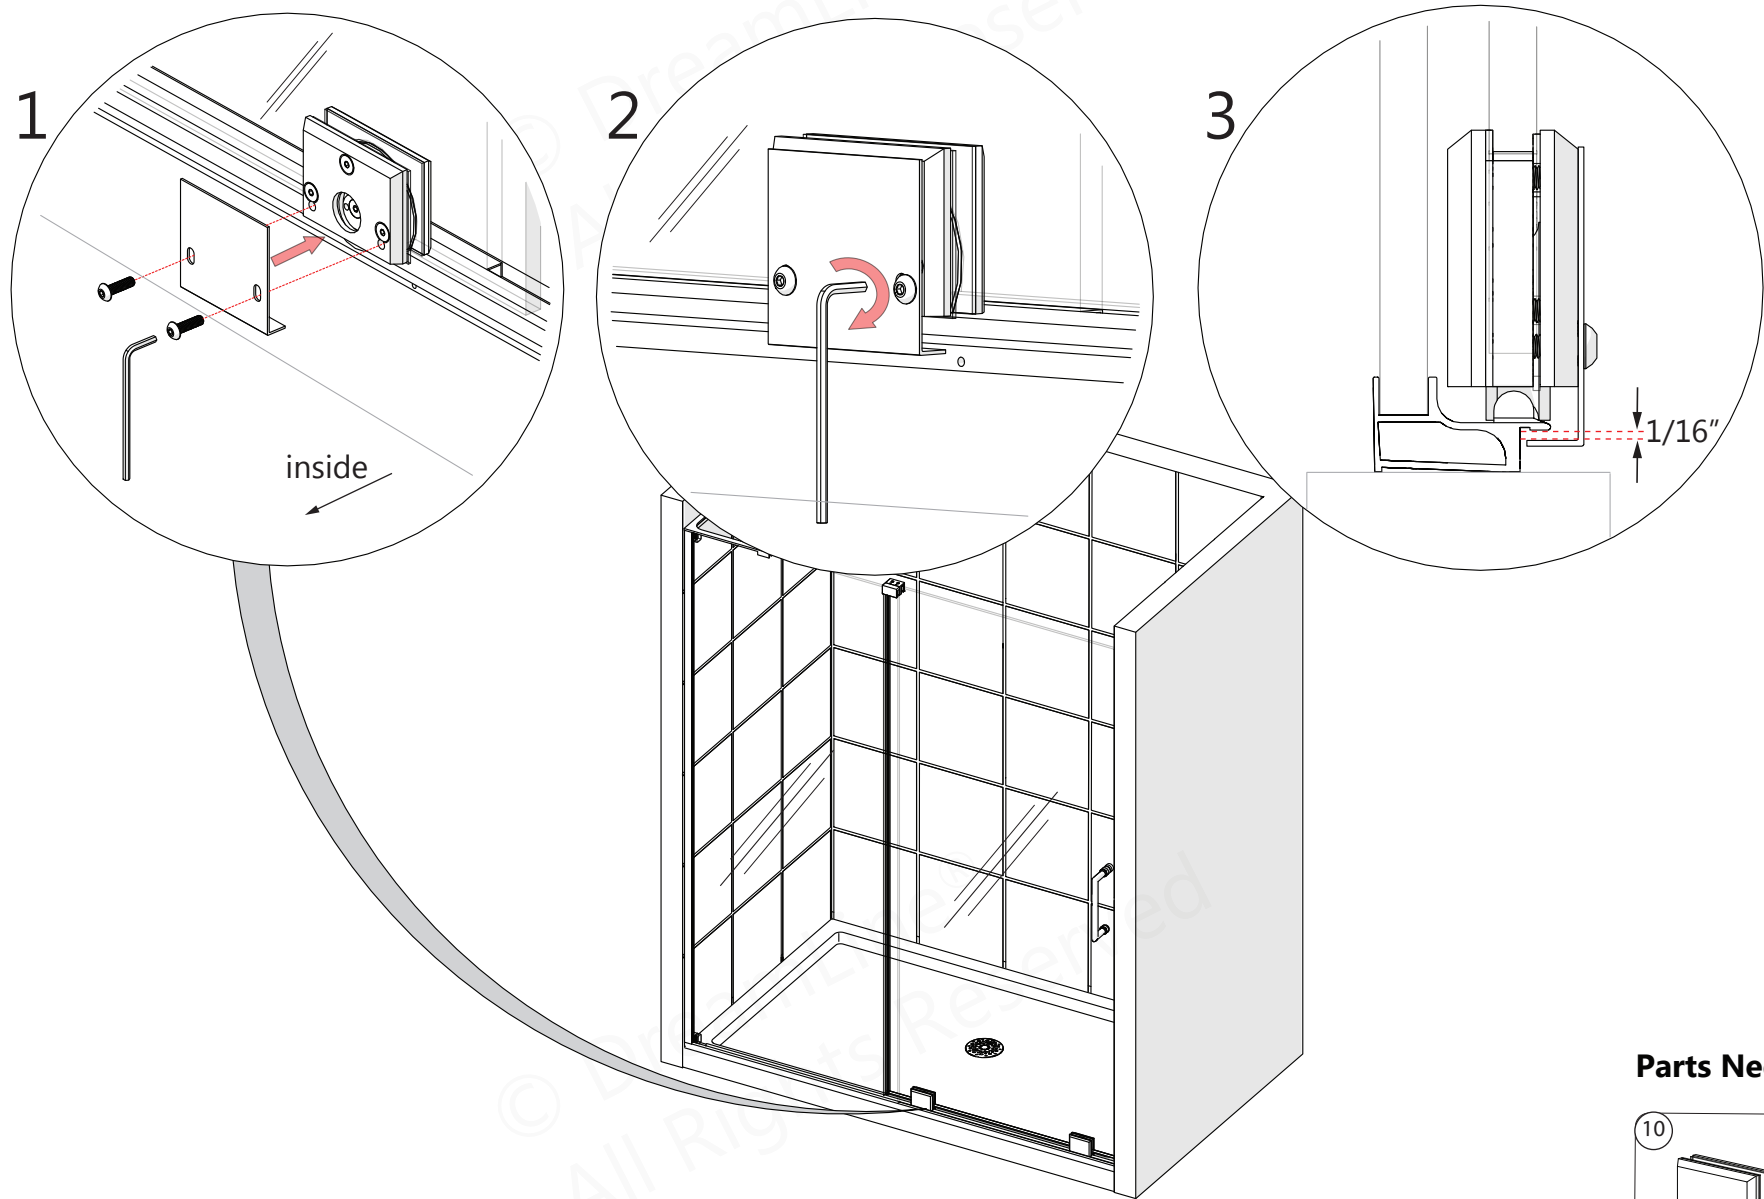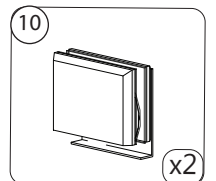**Fig 20****Parts Needed**

21

Handle and Bulb Vinyl Installation


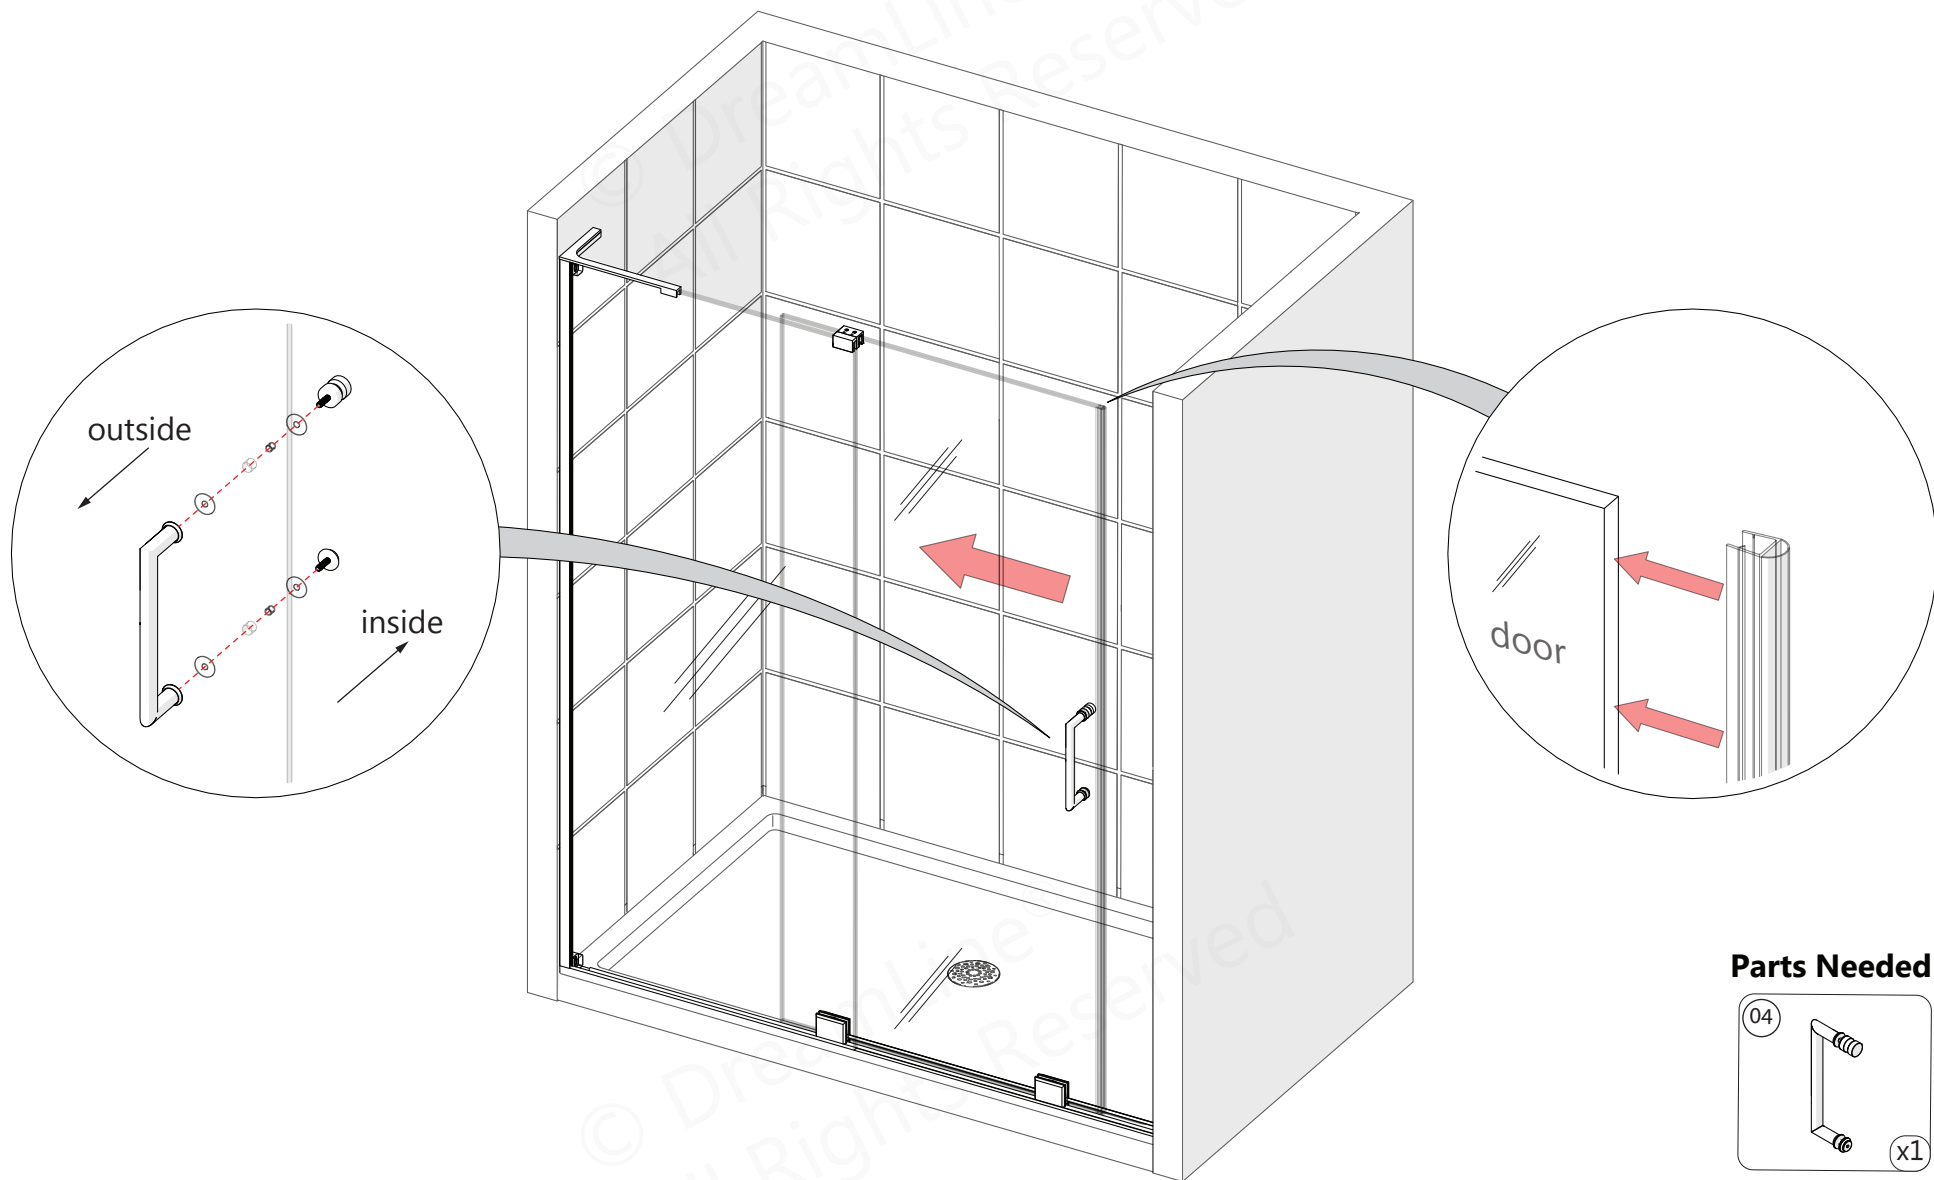



Fig 20

Parts Needed

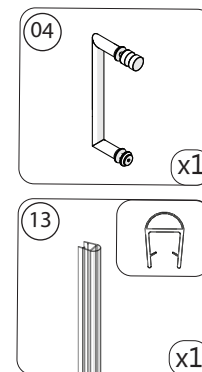

Installation of Sweep Vinyls and Notching the Bulb Vinyl Seal

Sweep Installation

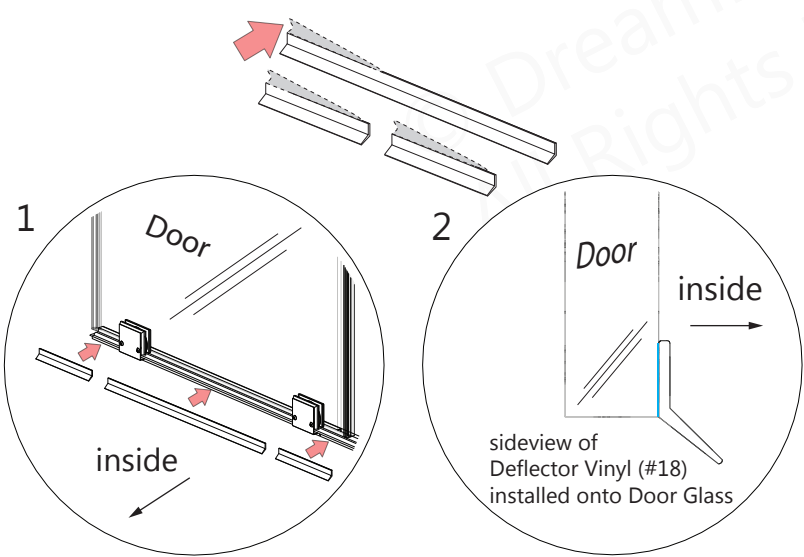

Notching the Bulb Vinyl around the Sweep



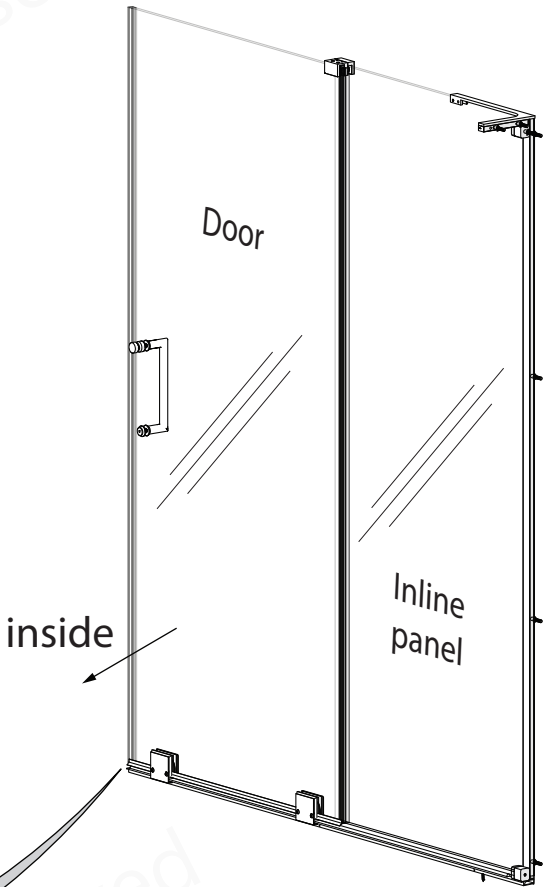



Fig 23

Right-hand installation shown as example

Parts Needed

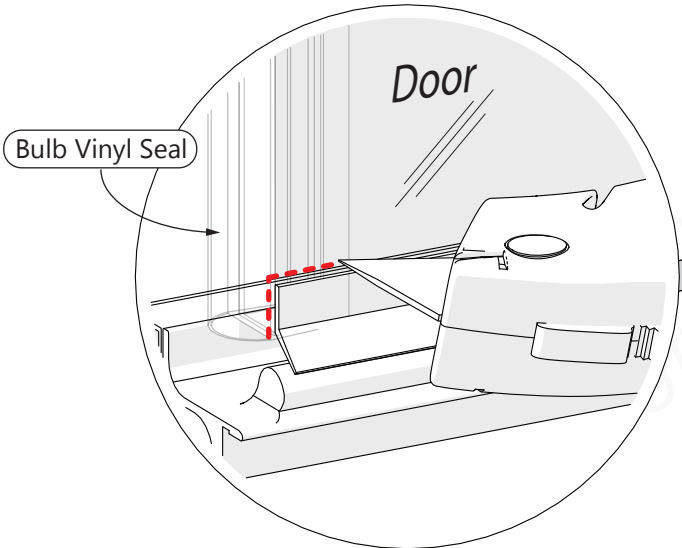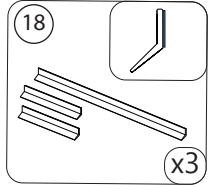


Tools Needed




23



Notching the Vertical Vinyl Strip on Back of Door Glass

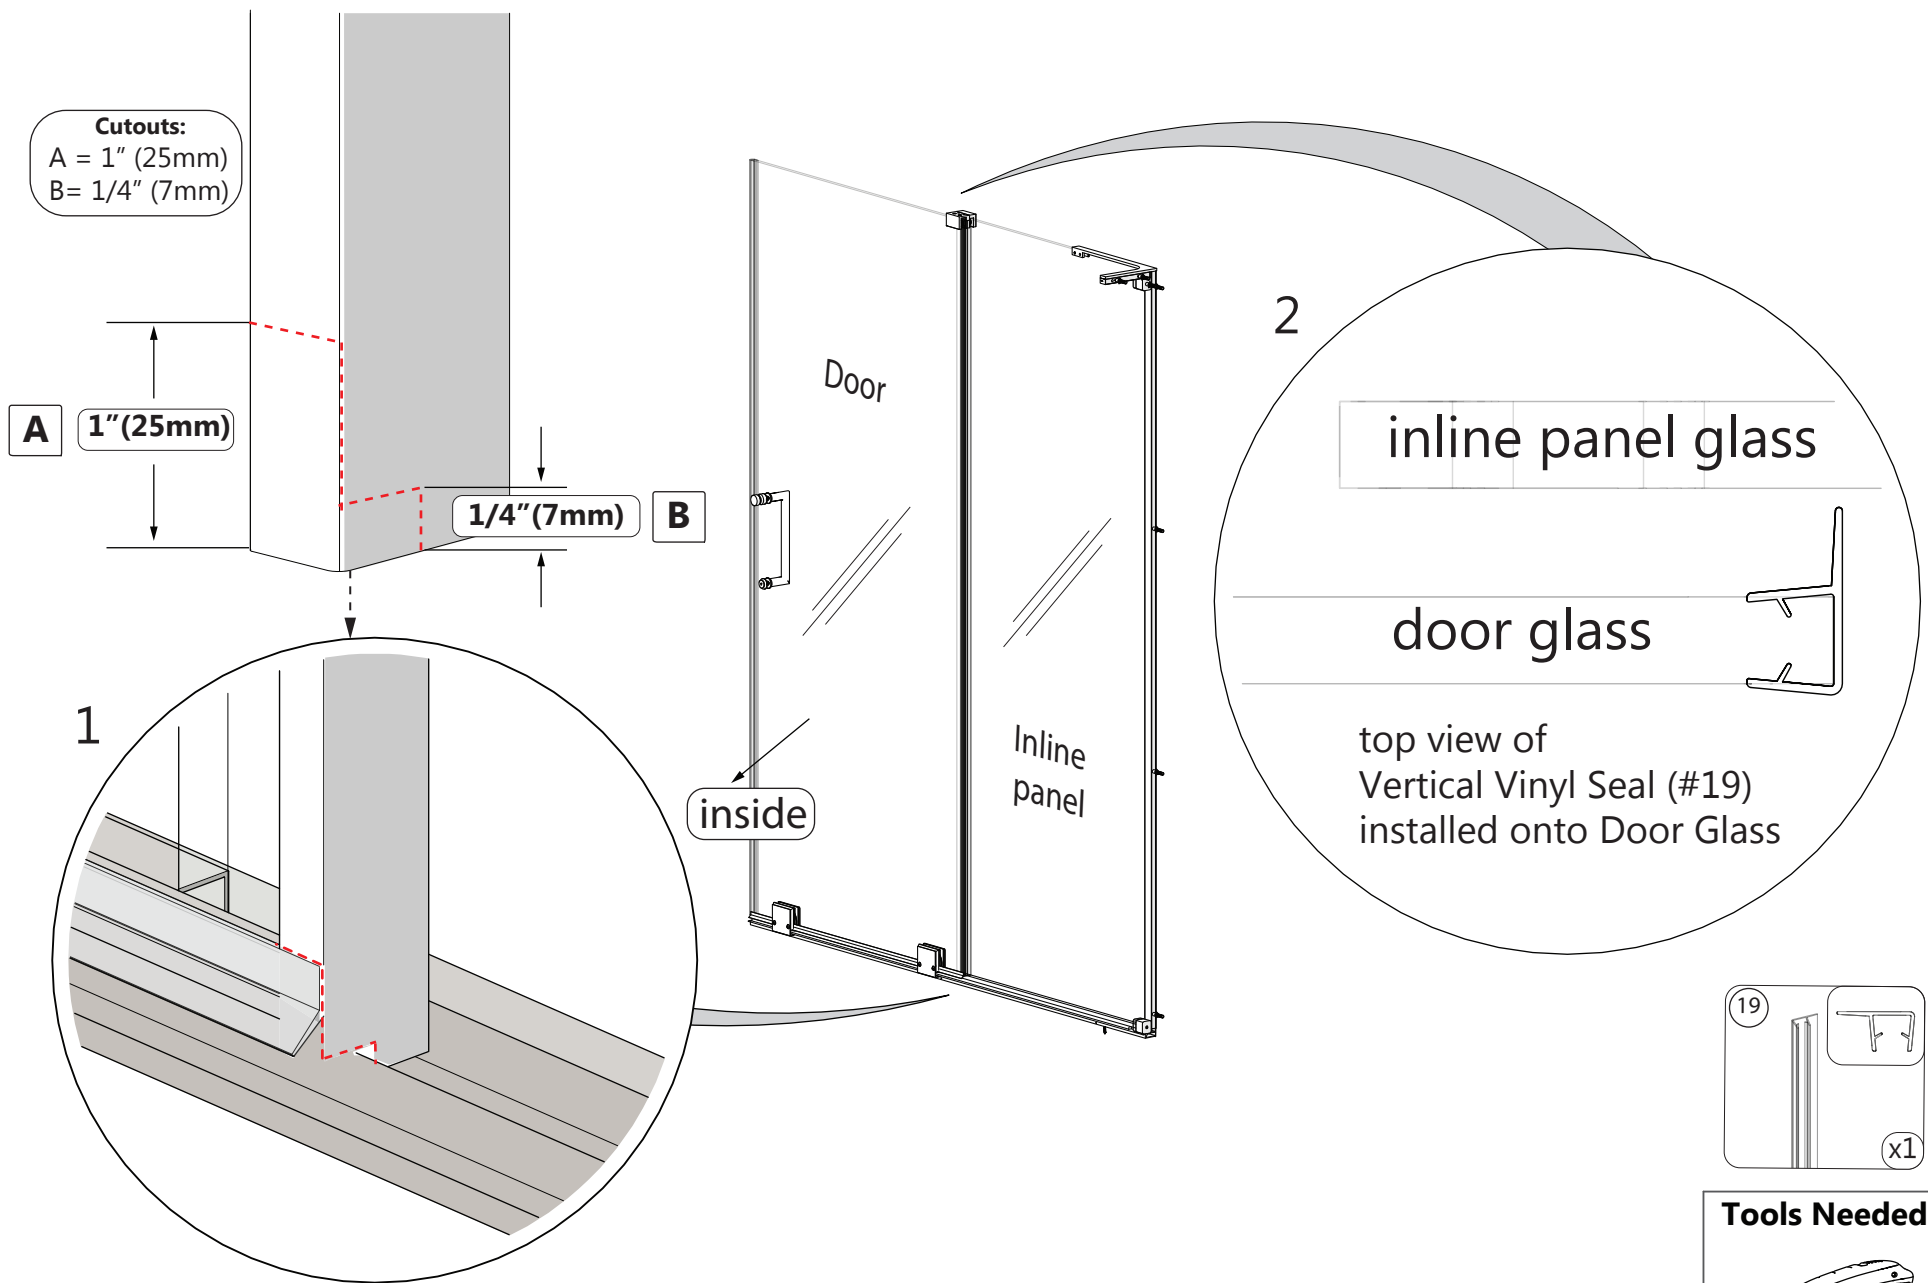

Right-hand installation shown as example. Reverse for left-hand installation

Tools Needed

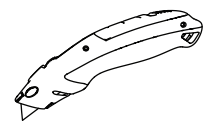

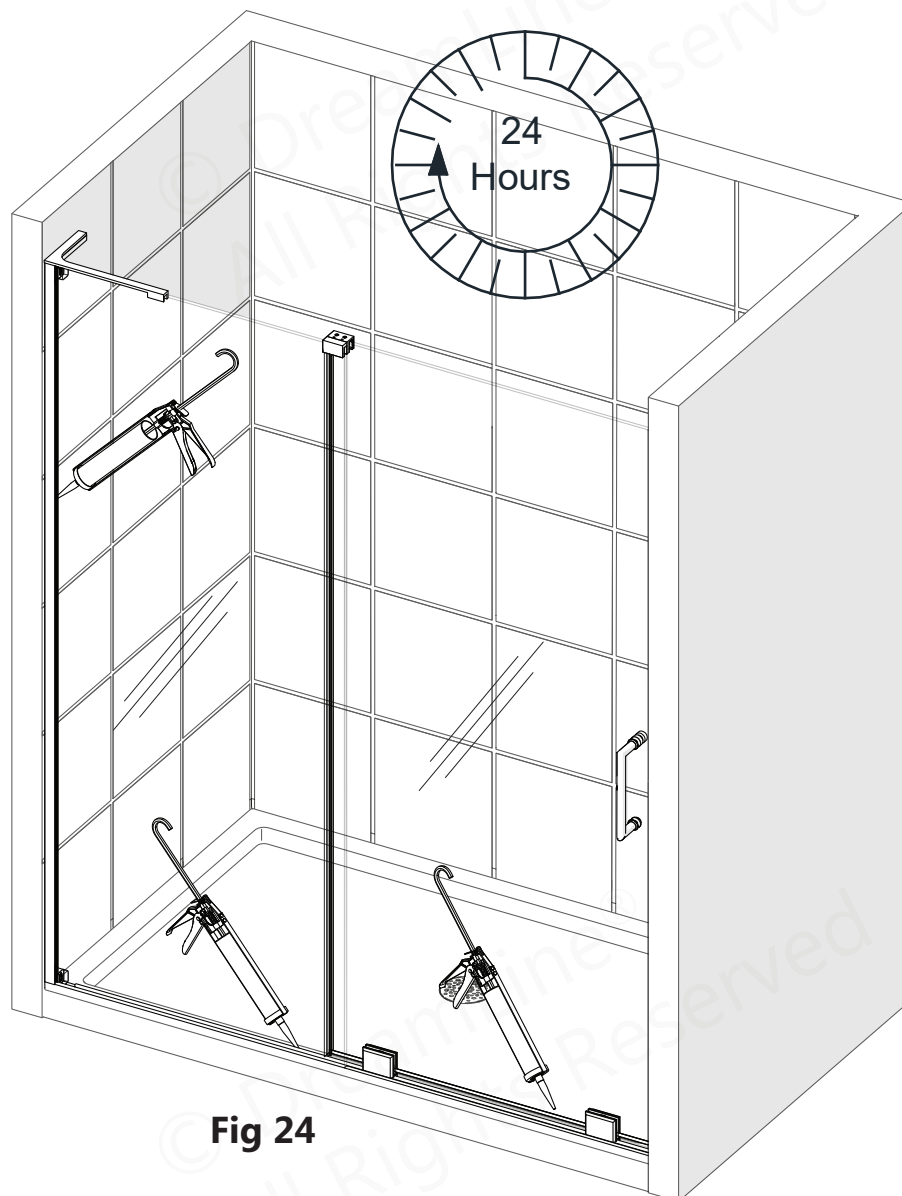23**NOTE****The surfaces need to be clean and free of debris before applying silicone.****Fig 24****Allow 24 hours for the silicone caulk to cure before using shower.****Tools Needed**

Product Maintenance

BASES and BACKWALLS: To ensure long lasting life for your acrylic back walls: wipe them off after each use with a soft cloth. To clean the acrylic back walls use non-abrasive sprays or cream based cleaners. Avoid the use of aerosol spray cleaners. Never use abrasive cleansers, metal brushes or scrapers that could permanently scratch or dull the surface.

GLASS: To ensure long lasting life for your glass shower products: wipe them off after each use with a soft cloth. Rinse and wipe off the glass using either a soft cloth or a squeegee to prevent soap buildup and water spots (Hard water can etch the surface of the glass over time if left to dry). To prevent scratching the surface: never use abrasive cleaners or cleaning products that contain scouring agents. Never use bristle brushes or abrasive sponges that may scratch the surface of the glass.

HARDWARE: To ensure a long lasting finish: wipe off all metal parts after each use with a soft cloth. Do not use abrasive cleaners or cleaning products containing ammonia, bleach or acid. If accidentally used, rinse the surface as soon as possible to prevent damage to the finish (peeling or corrosion). After cleaning the polished finishes, rinse thoroughly and wipe dry with a soft clean cloth.

Clean stainless steel surfaces at least once a week. When applying stainless steel cleaner or polish to stainless steel hardware, work with the grain (not across the grain). Never use an abrasive sponge or cloth, steel wool or wired brush as these may permanently scratch the surfaces.



To maximize the life of your door, it is important to regularly inspect the glass and other hardware for misalignment, proper attachment, and/or damage. Contact DreamLine® with any questions or concerns.

MIRAGE-X Maintenance Checklist

- ☐ **Bottom Guide Rail** level and tight to the threshold
- ☐ **U-Channel** plumb and tight to the wall
 - ☐ **Inline Panel Glass** secured within the U-Channel
- ☐ **SafeStop™ Bumpers** (upper / lower) secured to wall
- ☐ **L-Bar™** level and secured to the Inline Panel Glass and to the wall
 - ☐ Gaskets in place
 - ☐ All set screws tight
- ☐ **PVC Glass Spacer 0.5mm** present between the **Inline Panel Glass** and the end of the **Bottom Channel Insert** to prevent glass-to-metal contact.
- ☐ **Bottom Roller Assemblies** secured tightly to the **Door Glass**
 - ☐ All bolts are tight and installed squarely on the glass
- ☐ **Door Glass** rolls smoothly within the **Guide Block** during operation
 - ☐ **Guide Block** set screws are tight
- ☐ **Handle** is tightly secured to the Door Glass
- ☐ **Deflector Vinyl** is secured to the bottom of the Door Glass
- ☐ Remove vinyl seals to **inspect the edges of the Door Glass** for concealed damage
 - ☐ **Damaged glass must be replaced!**
- ☐ Replace damaged or missing vinyl seals
- ☐ Inspect and replace silicone as necessary to prevent water leakage

Troubleshooting

Problem/Symptom	Suggested Solution
Missing Parts	•Check all shipping/packaging material for missing parts/components. •If not found, contact DreamLine Customer Support [1-866-731-2244] to order factory part replacement.
Bottom Guide Rail (#03) was cut too short or was cut from the wrong end during installation.	•Contact DreamLine Customer Support [1-866-731-2244] to order factory part replacement.
Water Leakage: Bottom Guide Rail (#03)	•Confirm that silicone was properly applied along the entire length of the bottom rail. •Confirm that the Bottom Channel Insert (#12) is installed correctly [see Step 16] •Direct the shower head/water flow away from the area.
Water Leakage: Inline Panel/Door Glass (#01/#02)	•Confirm the Vertical Vinyl Seal (#19) and Bulb Vinyl Seal (#13) are installed properly. [see Step 23] •Direct the shower head/water flow away from the area.
Door Glass (#02) experiences grinding or scraping during use/or operation.	•Check that the Bottom Roller Assemblies (#10) are installed squarely onto the Door Glass (#02). [see Step 17] •Check the Roller Assembly Cover Plate (#10.7) and confirm that it has 1/16"-1/8" clearance gap beneath Bottom Guide Rail (#03) as shown in Fig 22.3.
Door Glass (#02) does not create a good seal with the wall when in the closed position.	•Adjust the Bottom Roller Assemblies (#10) with the Roller Installation Tool (#20) as shown on Page 37.
Roller Assembly Cover Plate (#10.7) makes contact with Bottom Guide Rail (#03) .	•Check the Roller Assembly Cover Plate (#10.7) and confirm that it has 1/16"-1/8" clearance gap beneath Bottom Guide Rail (#03) as shown in Fig 22.3.
L-Bar™ Support Bracket (#05) not installed level with the panel glass.	•Review the L-Bar™ Support Bracket (#05) installation steps to adjust the L-Bar. [see Steps 13-15] •Confirm gaskets are in place to protect the glass •Removal and reinstallation may be necessary. •The L-Bar must be installed correctly for the safety of the installation.



Prior to contacting DreamLine® Customer Service, please have the following information readily available:

- Purchase Order Information
 - Name, PO Number, Dealer/Vendor Name, etc.
- SKU/Model Number (See Pages 37-42)
- Factory Part Information (see Pages 37-42)

Bottom Roller Assembly Adjustment Procedure

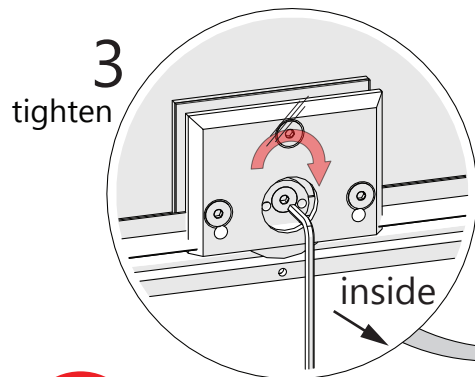
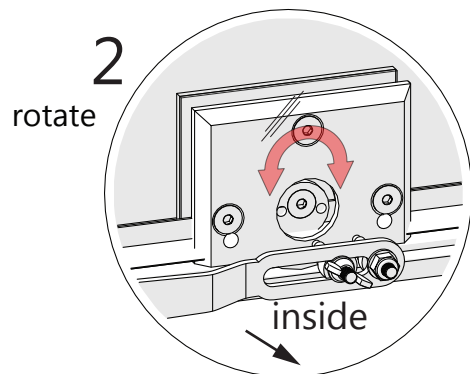
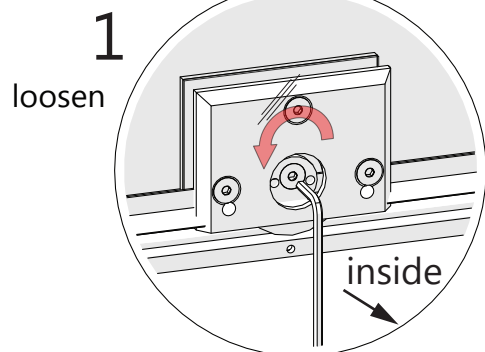


Fig 21a



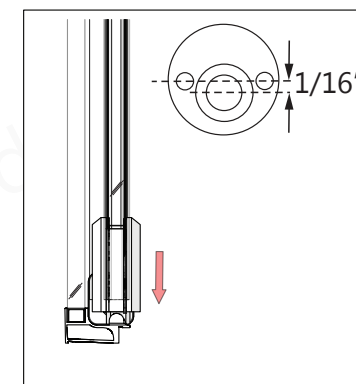


Fig 21b

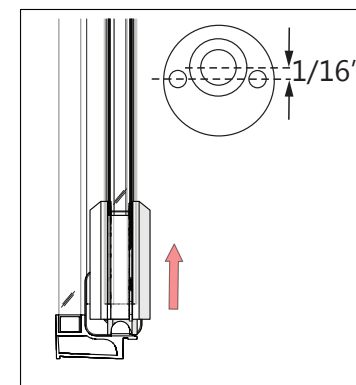


Adjust the door glass to create a good seal with the wall by using the adjustment feature in the Roller Assemblies.

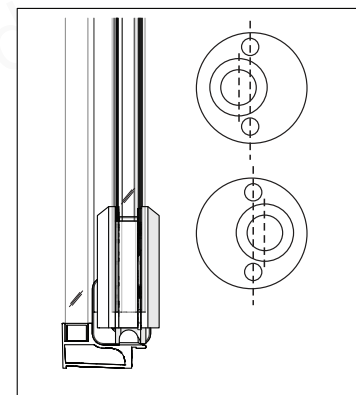


Use shims beneath the **Door Glass (#02)** during adjustment to prevent the door glass from making contact with the **Bottom Guide Rail (#03)**.

Parts Needed

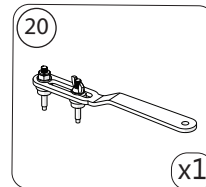

Tools Needed



Factory Parts Information

MIRAGE-X 48x72 SHDR-1948723L-## / SHDR1948723G-##		FACTORY PARTS INFORMATION	
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	010260001 / 010260009	Clear Inline Panel Glass / Gray Inline Panel Glass	1 pc
02	010260004 / 010260010	Clear Door Glass / Gray Door Glass	1 pc
03	041700 1 1-1270 / 041700 4 1-1270 / 041700 9 1-1270	Bottom Guide Rail for 10mm (3/8in) Glass	1 pc
04	0722 1 041 / 0722 4 041 / 0722 9 041	Single Sided 8" Handle Assembly wKnob	1 pc
05	0712 1 048 / 0712 4 048 / 0712 9 050	L-Bar Support Bracket 12in for 10mm (3/8in) Glass	1 set
06	07550045 / 07552148	Wall Anchor 8mm (5/16in)	9 pcs
07	092108	ST4.2 x 40mm Countersunk Screw	6 pcs
09	0701 1 102 / 0701 4 102 / 0701 9 102	Guide Block Assembly for 10mm (3/8in) Glass	1 pc
10	0731 1 019 / 0731 4 019 / 0731 9 019	Bottom Roller Assembly for 10mm (3/8in) Glass	2 pcs
11	0702 1 154 / 0702 4 154 / 0702 9 154	SafeStop™ Bumper Assembly (small)	2 pcs
12	0712 1 080 / 0712 4 080	Bottom Channel Insert SS for 10mm (3/8in)	1 pc
13	063023000-0503 / 063007100-1804	Bulb Vinyl Seal for 10mm (3/8in) Glass	1 pc
14	7550090	PVC Glass Spacer 0.5mm	1 pc
15	098002 / 098003	Allen Wrench (2.5mm/3mm)	1 set
16	091105	ST4.0 x 30mm Pan Head Screw	3 pcs
17	041540 1 1-1809 / 041540 4 1-1809 / 041540 9 1-1809	U-Channel 1" Aluminum for 10mm (3/8in) Glass	1 pc
18	063023000-0503 / 063023000-0082	Deflector Vinyl with VHB Tape (rigid)	3 pcs
19	063002100-1804	Vinyl Seal with a Flexible Fin for 10mm (3/8in) Glass	1 pc
20	098010	Roller Installation Tool	1 pc
21	091107	ST4.0 x 40mm Pan Head Screw	3 pcs

BOLD digit indicates finish color:

1 = Polished SS

4 = Brushed SS

9 = Satin Black

Contact **Support@DreamLine.com** for Part replacement, installation assistance or additional information.

Complete **Warranty** information is available on **DreamLine.com**.

Factory Parts Information

MIRAGE-X 48x72 SHDR-1948723R-## / / SHDR1948723G-##		FACTORY PARTS INFORMATION	
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	010260001 / 010260009	Clear Inline Panel Glass / Gray Inline Panel Glass	1 pc
02	010260004 / 010260010	Clear Door Glass / Gray Door Glass	1 pc
03	041700 1 1-1270 / 041700 4 1-1270 / 041700 9 1-1270	Bottom Guide Rail for 10mm (3/8in) Glass	1 pc
04	0722 1 041 / 0722 4 041 / 0722 9 041	Single Sided 8" Handle Assembly wKnob	1 pc
05	0712 1 049 / 0712 4 049 / 07129050	L-Bar Support Bracket 12in for 10mm (3/8in) Glass	1 set
06	07550045 / 07552148	Wall Anchor 8mm (5/16in)	9 pcs
07	092108	ST4.2 x 40mm Countersunk Screw	6 pcs
09	0701 1 102 / 0701 4 102 / 0701 9 102	Guide Block Assembly for 10mm (3/8in) Glass	1 pc
10	0731 1 019 / 0731 4 019 / 0731 9 019	Bottom Roller Assembly for 10mm (3/8in) Glass	2 pcs
11	0702 1 154 / 0702 4 154 / 0702 9 154	SafeStop™ Bumper Assembly (small)	2 pcs
12	0712 1 080 / 0712 4 080	Bottom Channel Insert SS for 10mm (3/8in)	1 pc
13	063023000-0503 / 063007100-1804	Bulb Vinyl Seal for 10mm (3/8in) Glass	1 pc
14	7550090	PVC Glass Spacer 0.5mm	1 pc
15	098002 / 098003	Allen Wrench (2.5mm/3mm)	1 set
16	091105	ST4.0 x 30mm Pan Head Screw	3 pcs
17	041540 1 1-1809 / 041540 4 1-1809 / 041540 9 1-1809	U-Channel 1" Aluminum for 10mm (3/8in) Glass	1 pc
18	063023000-0503 / 063023000-0082	Deflector Vinyl with VHB Tape (rigid)	3 pcs
19	063002100-1804	Vinyl Seal with a Flexible Fin for 10mm (3/8in) Glass	1 pc
20	098010	Roller Installation Tool	1 pc
21	091107	ST4.0 x 40mm Pan Head Screw	3 pcs

BOLD digit indicates finish color:

1 = Polished SS

4 = Brushed SS

9 = Satin Black

Contact **Support@DreamLine.com** for Part replacement, installation assistance or additional information.

Complete **Warranty** information is available on **DreamLine.com**.

Factory Parts Information

MIRAGE-X 60x58 SHDR-1960580L-## / SHDR1960580G-##		FACTORY PARTS INFORMATION	
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	010260002 / 010260011	Clear Inline Panel Glass / Gray Inline Panel Glass	1 pc
02	010260005 / 010260012	Clear Door Glass / Gray Door Glass	1 pc
03	041700 1 1-1574 / 041700 4 1-1574 / 041700 9 1-1574	Bottom Guide Rail for 10mm (3/8in) Glass	1 pc
04	0722 1 041 / 0722 4 041 / 0722 9 041	Single Sided 8" Handle Assembly wKnob	1 pc
05	0712 1 139 / 0712 4 139 / 0712 9 150	L-Bar Support Bracket 18in for 10mm (3/8in) Glass	1 set
06	07550045	Wall Anchor 8mm (5/16in)	9 pcs
07	092108	ST4.2 x 40mm Countersunk Screw	6 pcs
09	0701 1 102 / 0701 4 102 / 0701 9 102	Guide Block Assembly for 10mm (3/8in) Glass	1 pc
10	0731 1 019 / 0731 4 019 / 0731 9 019	Bottom Roller Assembly for 10mm (3/8in) Glass	2 pcs
11	0702 1 154 / 0702 4 154 / 0702 9 154	SafeStop™ Bumper Assembly (small)	2 pcs
12	0712 1 081 / 0712 4 081	Bottom Channel Insert SS for 10mm (3/8in)	1 pc
13	063007100-1447	Bulb Vinyl Seal for 10mm (3/8in) Glass	1 pc
14	07550091	PVC Glass Spacer 0.5mm	1 pc
15	098002 / 098003	Allen Wrench (2.5mm/3mm)	1 set
16	091105	ST4.0 x 30mm Pan Head Screw	3 pcs
17	041540 1 1-1453 / 041540 4 1-1453 / 041540 9 1-1453	U-Channel 1" Aluminum for 10mm (3/8in) Glass	1 pc
18	063023000-0652	Deflector Vinyl with VHB Tape (rigid)	3 pcs
19	063002100-1447	Vinyl Seal with a Flexible Fin for 10mm (3/8in) Glass	1 pc
20	098010	Roller Installation Tool	1 pc
21	091107	ST4.0 x 40mm Pan Head Screw	3 pcs

BOLD digit indicates finish color:

1 = Polished SS

4 = Brushed SS

9 = Satin Black

Contact **Support@DreamLine.com** for Part replacement, installation assistance or additional information.

Complete **Warranty** information is available on **DreamLine.com**.

Factory Parts Information

MIRAGE-X 60x58 SHDR-1960580R-## / SHDR1960580G-##		FACTORY PARTS INFORMATION	
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	010260002 / 010260011	Clear Inline Panel Glass / Gray Inline Panel Glass	1 pc
02	010260005 / 010260012	Clear Door Glass / Gray Door Glass	1 pc
03	041700 11 -1574 / 041700 41 -1574 / 041700 91 -1574	Bottom Guide Rail for 10mm (3/8in) Glass	1 pc
04	0722 1 041 / 0722 4 041 / 0722 9 041	Single Sided 8" Handle Assembly wKnob	1 pc
05	0712 1 140 / 0712 4 140 / 07129150	L-Bar Support Bracket 18in for 10mm (3/8in) Glass	1 set
06	07550045	Wall Anchor 8mm (5/16in)	9 pcs
07	092108	ST4.2 x 40mm Countersunk Screw	6 pcs
09	0701 1 102 / 0701 4 102 / 0701 9 102	Guide Block Assembly for 10mm (3/8in) Glass	1 pc
10	0731 1 019 / 0731 4 019 / 0731 9 019	Bottom Roller Assembly for 10mm (3/8in) Glass	2 pcs
11	0702 1 154 / 0702 4 154 / 0702 9 154	SafeStop™ Bumper Assembly (small)	2 pcs
12	0712 1 081 / 0712 4 081	Bottom Channel Insert SS for 10mm (3/8in)	1 pc
13	063007100-1447	Bulb Vinyl Seal for 10mm (3/8in) Glass	1 pc
14	07550091	PVC Glass Spacer 0.5mm	1 pc
15	098002 / 098003	Allen Wrench (2.5mm/3mm)	1 set
16	091105	ST4.0 x 30mm Pan Head Screw	3 pcs
17	041540 11 -1453 / 041540 41 -1453 / 041540 91 -1453	U-Channel 1" Aluminum for 10mm (3/8in) Glass	1 pc
18	063023000-0652	Deflector Vinyl with VHB Tape (rigid)	3 pcs
19	063002100-1447	Vinyl Seal with a Flexible Fin for 10mm (3/8in) Glass	1 pc
20	098010	Roller Installation Tool	1 pc
21	091107	ST4.0 x 40mm Pan Head Screw	3 pcs

BOLD digit indicates finish color:

1 = Polished SS

4 = Brushed SS

9 = Satin Black

Contact **Support@DreamLine.com** for Part replacement, installation assistance or additional information.

Complete **Warranty** information is available on **DreamLine.com**.

Factory Parts Information

MIRAGE-X 60x72 SHDR-1960723L-## / SHDR1960723G-##		FACTORY PARTS INFORMATION	
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	010260003 / 010260013	Clear Inline Panel Glass / Gray Inline Panel Glass	1 pc
02	010260006 / 010260014	Clear Door Glass / Gray Door Glass	1 pc
03	041700 1 1-1574 / 041700 4 1-1574 / 041700 9 1-1574	Bottom Guide Rail for 10mm (3/8in) Glass	1 pc
04	0722 1 041 / 0722 4 041 / 0722 9 041	Single Sided 8" Handle Assembly wKnob	1 pc
05	0712 1 139 / 0712 4 139 / 0712 9 150	L-Bar Support Bracket 18in for 10mm (3/8in) Glass	1 set
06	07550045	Wall Anchor 8mm (5/16in)	9 pcs
07	092108	ST4.2 x 40mm Countersunk Screw	6 pcs
09	0701 1 102 / 0701 4 102 / 0701 9 102	Guide Block Assembly for 10mm (3/8in) Glass	1 pc
10	0731 1 019 / 0731 4 019 / 0731 9 019	Bottom Roller Assembly for 10mm (3/8in) Glass	2 pcs
11	0702 1 154 / 0702 4 154 / 0702 9 154	SafeStop™ Bumper Assembly (small)	2 pcs
12	0712 1 081 / 0712 4 081	Bottom Channel Insert SS for 10mm (3/8in)	1 pc
13	063007100-1804	Bulb Vinyl Seal for 10mm (3/8in) Glass	1 pc
14	07550091	PVC Glass Spacer 0.5mm	1 pc
15	098002 / 098003	Allen Wrench (2.5mm/3mm)	1 set
16	091105	ST4.0 x 30mm Pan Head Screw	3 pcs
17	041540 1 1-1809 / 041540 4 1-1809 / 041540 9 1-1809	U-Channel 1" Aluminum for 10mm (3/8in) Glass	1 pc
18	063023000-0652	Deflector Vinyl with VHB Tape (rigid)	3 pcs
19	063002100-1804	Vinyl Seal with a Flexible Fin for 10mm (3/8in) Glass	1 pc
20	098010	Roller Installation Tool	1 pc
21	091107	ST4.0 x 40mm Pan Head Screw	3 pcs

BOLD digit indicates finish color:

1 = Polished SS

4 = Brushed SS

9 = Satin Black

Contact **Support@DreamLine.com** for Part replacement, installation assistance or additional information.

Complete **Warranty** information is available on **DreamLine.com**.

Factory Parts Information

MIRAGE-X 60x72 SHDR-1960723R-## / SHDR1960723G-##		FACTORY PARTS INFORMATION	
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	010260003 / 010260013	Clear Inline Panel Glass / Gray Inline Panel Glass	1 pc
02	010260006 / 010260014	Clear Door Glass / Gray Door Glass	1 pc
03	041700 1 1-1574 / 041700 4 1-1574 / 041700 9 1-1574	Bottom Guide Rail for 10mm (3/8in) Glass	1 pc
04	0722 1 041 / 0722 4 041 / 0722 9 041	Single Sided 8" Handle Assembly wKnob	1 pc
05	0712 1 140 / 0712 4 140	L-Bar Support Bracket 18in for 10mm (3/8in) Glass	1 set
06	07550045	Wall Anchor 8mm (5/16in)	9 pcs
07	092108	ST4.2 x 40mm Countersunk Screw	6 pcs
09	0701 1 102 / 0701 4 102 / 0701 9 102	Guide Block Assembly for 10mm (3/8in) Glass	1 pc
10	0731 1 019 / 0731 4 019 / 0731 9 019	Bottom Roller Assembly for 10mm (3/8in) Glass	2 pcs
11	0702 1 154 / 0702 4 154 / 0702 9 154	SafeStop™ Bumper Assembly (small)	2 pcs
12	0712 1 081 / 0712 4 081	Bottom Channel Insert SS for 10mm (3/8in)	1 pc
13	063007100-1804	Bulb Vinyl Seal for 10mm (3/8in) Glass	1 pc
14	07550091	PVC Glass Spacer 0.5mm	1 pc
15	098002 / 098003	Allen Wrench (2.5mm/3mm)	1 set
16	091105	ST4.0 x 30mm Pan Head Screw	3 pcs
17	041540 1 1-1809 / 041540 4 1-1809 / 041540 9 1-1809	U-Channel 1" Aluminum for 10mm (3/8in) Glass	1 pc
18	063023000-0652	Deflector Vinyl with VHB Tape (rigid)	3 pcs
19	063002100-1804	Vinyl Seal with a Flexible Fin for 10mm (3/8in) Glass	1 pc
20	098010	Roller Installation Tool	1 pc
21	091107	ST4.0 x 40mm Pan Head Screw	3 pcs

BOLD digit indicates finish color:

1 = Polished SS

4 = Brushed SS

9 = Satin Black

Contact **Support@DreamLine.com** for Part replacement, installation assistance or additional information.

Complete **Warranty** information is available on **DreamLine.com**.

NOTES

© DreamLine®
All Rights Reserved

© DreamLine®
All Rights Reserved

NOTES

© DreamLine®
All Rights Reserved

© DreamLine®
All Rights Reserved

NOTES

© DreamLine®
All Rights Reserved

© DreamLine®
All Rights Reserved



TEL: 866-731-2244
FAX: 866-857-3638
DREAMLINE.COM

For more information on DreamLine® Shower Doors and Enclosures please visit **DreamLine.com**